

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new


Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia


If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

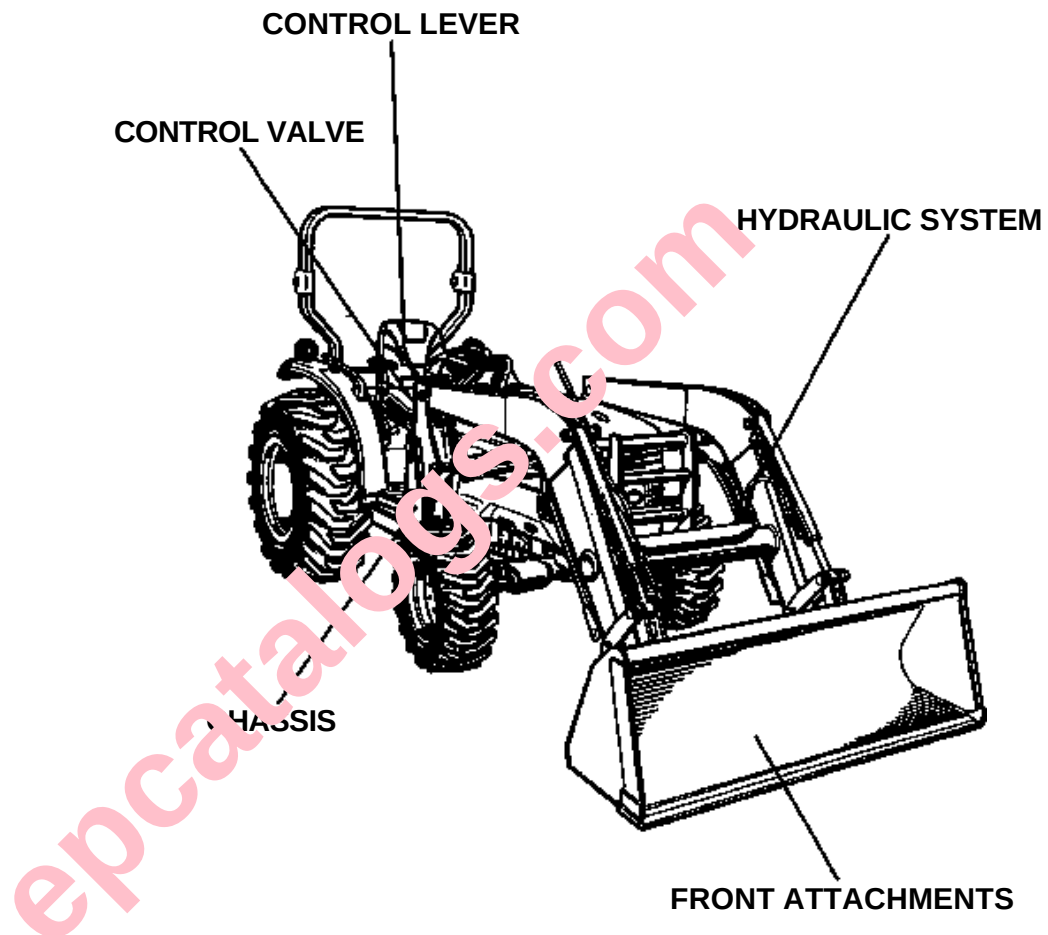

OPTION
ACCESSORIES AND SERVICE PARTS

Item	Part No.	Description	Book
CHASSIS	01A001	MAIN FRAME	100A0184
	01A005	SIDE FRAME	100A0184
FRONT ATTACHMENTS	01A010	BOOM	100A0184
	01A020	BUCKET LINK	100A0184
	01A02501	BUCKET	100A0184
	01A02502	BUCKET	100A0184
	01A02503	QUICK BUCKET	100A0184
	01A02504	QUICK BUCKET	100A0184
	01A02505	QUICK BUCKET	100A0184
	01A02506	QUICK BUCKET	100A0184
	01A02507	QUICK BUCKET	100A0184
CONTROL VALVE	01B00101	CONTROL VALVE	100A0184
	01B00102	CONTROL VALVE	100A0184
	01B00103	CONTROL VALVE	100A0184
	01B00104	CONTROL VALVE	100A0184
	01B00501	CONTROL VALVE [COMPONENT PARTS]	100A0184
	01B00502	CONTROL VALVE [COMPONENT PARTS]	100A0184
	01B00503	CONTROL VALVE [COMPONENT PARTS]	100A0184
CONTROL LEVER	01B01301	CONTROL LEVER	100A0184
	01B01302	CONTROL LEVER	100A0184
HYDRAULIC SYSTEM	01B01501	CYLINDER/HYDRAULIC HOSE	100A0184
	01B01502	HYDRAULIC HOSE(HYD.OUTLET BLOCK)	100A0184
	01B01503	HYDRAULIC HOSE(HYD.OUTLET BLOCK)	100A0184
	01B01504	HYDRAULIC TUBE	100A0184
	01B02501	CYLINDER (BOOM) [COMPONENT PARTS]	100A0184
	01B03001	CYLINDER (BUCKET) [COMPONENT PARTS]	100A0184
OPTION	01C005	QUICK HITCH [OPTION]	100A0184
	01C015	PALLET FORK [OPTION]	100A0184
	01C016	BALE SPEAR [OPTION]	100A0184
ACCESSORIES AND SERVICE PARTS	01D001	ACCESSORIES AND SERVICE PARTS	100A0184

MAIN FRAME

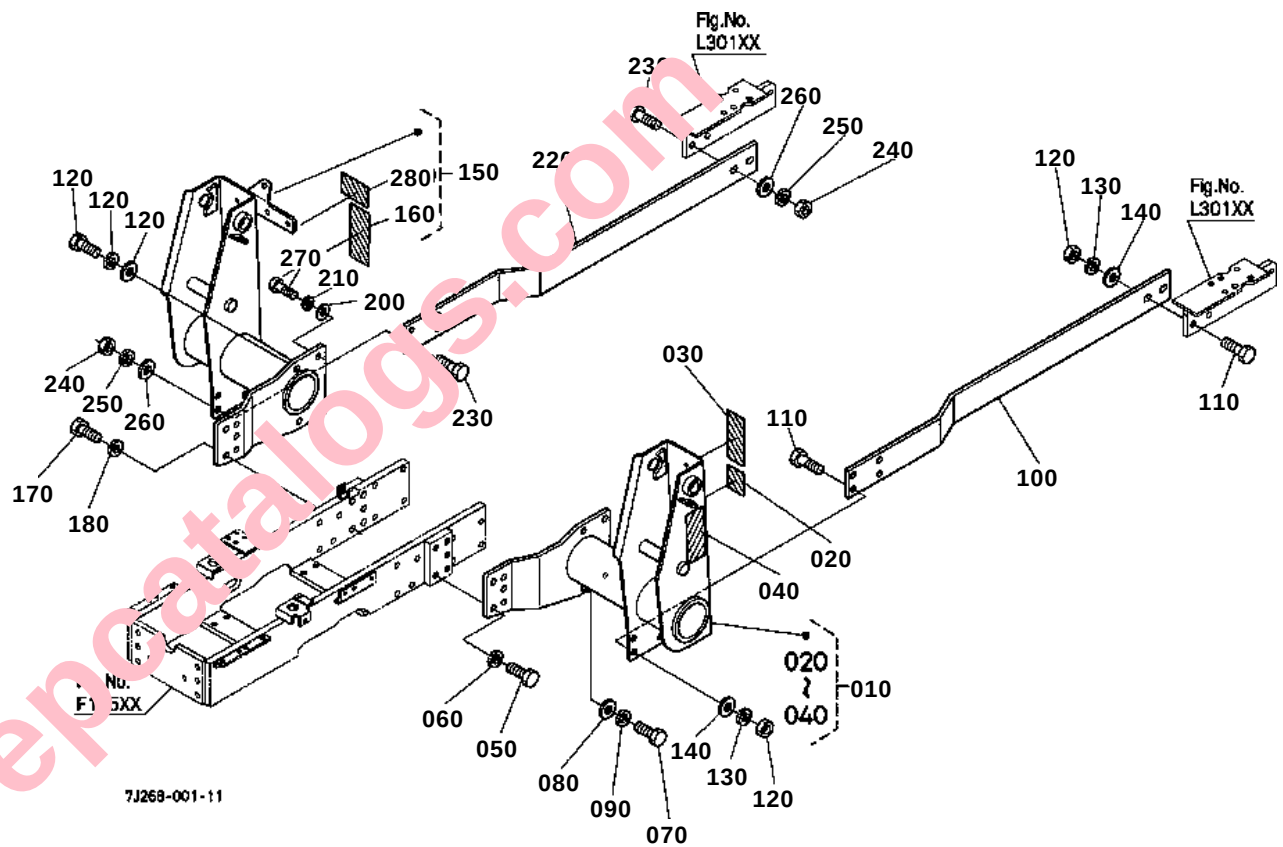



MAIN FRAME

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	7J268-90110	FRAME MAIN LH(LABEL)	1				73	160.6
020	7J246-56420	LABEL DANGER 2	1				0.001	0.0022
030	7J246-56430	LABEL DANGER 3	1				0.002	0.0044
040	7J246-56450	LABEL CAUTION 1	1				0.002	0.0044
050	01073-51645	BOLT	5			M16*1.50*45	0.1	0.22
060	04512-60160	WASHER SPRING	5			M16	0.01	0.022
070	01073-51645	BOLT	4			M16*1.50*45	0.1	0.22
080	75599-32517	WASHER PLAIN	4			5/8HD	0.016	0.0352
090	04512-60160	WASHER SPRING	4			M16	0.01	0.022
100	7J267-55310	FRAME SUB	1	<=10848			0	0
100	7J267-55312	FRAME SUB	1	>=10849	↗		2.5	5.5
100	7J267-55313	FRAME SUB	1	>=50001	↗		2.5	5.5
110	01073-51655	BOLT	5			M16*1.50*55	0.12	0.264
120	02076-50160	NUT	5			M16	0.03	0.066
130	04512-60160	WASHER SPRING	5			M16	0.01	0.022
140	75599-32517	WASHER PLAIN	5			5/8HD	0.016	0.0352
150	7J268-90120	FRAME MAIN RH(LABEL)	1	<=19999			73	160.6
150	7J268-90122	FRAME MAIN RH(LABEL)	1	>=50001	1		73	160.6
160	7J246-56410	LABEL DANGER 1	1				0.002	0.0044
170	01073-51645	BOLT	5			M16*1.50*45	0.1	0.22
180	04512-60160	WASHER SPRING	5			M16	0.01	0.022
190	01073-51645	BOLT	3			M16*1.50*45	0.1	0.22
200	75599-32517	WASHER PLAIN	4			5/8HD	0.016	0.0352
210	04512-60160	WASHER SPRING	4			M16	0.01	0.022
220	7J267-55310	FRAME SUB	1	<=10848			0	0
220	7J267-55312	FRAME SUB	1	>=10849	↗		2.5	5.5
220	7J267-55313	FRAME SUB	1	>=50001	↗		2.5	5.5
230	01073-51655	BOLT	5			M16*1.50*55	0.12	0.264
240	02076-50160	NUT	5			M16	0.03	0.066
250	04512-60160	WASHER SPRING	5			M16	0.01	0.022
260	75599-32517	WASHER PLAIN	5			5/8HD	0.016	0.0352
270	01073-51650	BOLT	1			M16*1.50*50	0.105	0.231
280	7J266-56490	LABEL CAUTION 4	1	>=50001			0.001	0.0022

[Buy now](#)

[Kubota LA853 Loader Parts Manual PDF](#)

[With Instant Download](#)