

# Tigercat®



## Si065 SIMULATOR ASSEMBLY INSTRUCTIONS

epcatalogs.com

[epcatalogs.com](http://epcatalogs.com)

---

**CONTENTS**

CRATE DISASSEMBLY.....	5
DISPLAY FRAME ASSEMBLY.....	6
SWITCHING JOYSTICK PODS .....	11
FORWARDER JOYSTICK POD.....	11
HARVESTER POD .....	12

epcatalogs.com

epcatalogs.com

# English

## Assembly Instructions

### IMPORTANT!

Read and understand these instructions before assembling or disassembling simulator components. See Operator's Manual for additional information.

### CRATE DISASSEMBLY

1. Remove the top panel of the crate.



Display Crate

A Red Marks Containing Screws

2. Locate screws identified by red marks on the side of the crate, then remove the screws.

**NOTE:** These screws secure the braces inside the crate.

3. Remove the braces in the crate.
4. Remove one of the side walls to gain access to the display frame and display.
5. Remove all components from the crate.

**NOTE:** Some of the components are secured in place by blocks. Remove the blocks to safely remove these components.

[Buy now](#)

[Tigercat Simulator Si065 Assembly Instructions PDF](#)

[With Instant Download](#)