

Tigercat®



**Si065 SIMULATOR ASSEMBLY
INSTRUCTIONS**



**INSTRUCCIONES DE MONTAJE DEL
SIMULADOR Si065**

epcatalogs.com

epcatalogs.com

CONTENTS

ENGLISH

ENGLISH

CRATE DISASSEMBLY	5
DISPLAY FRAME ASSEMBLY	6
SWITCHING JOYSTICK PODS	
FORWARDER JOYSTICK PODS	11
HARVESTER PODS	12

ESPAÑOL

CAMBIO DE MÓDULOS DE LA PALANCA DE MANDO	
MÓDULOS DE LA COSECHADORA.....	22
MÓDULOS DE LA PALANCA DE MANDO DEL	
TRANSPORTADOR	21
DESMONTAJE DE LA CAJA	15
MONTAJE DEL BASTIDOR DE LA PANTALLA	16

epcatalogs.com

epcatalogs.com

English

Assembly Instructions

IMPORTANT!

Read and understand these instructions before assembling or disassembling simulator components. See Operator's Manual for additional information.

CRATE DISASSEMBLY

1. Remove the top panel of the crate.



Display Crate

A Red Marks Containing Screws

2. Locate screws identified by red marks on the side of the crate, then remove the screws.

NOTE: These screws secure the braces inside the crate.

3. Remove the braces in the crate.
4. Remove one of the side walls to gain access to the display frame and display.
5. Remove all components from the crate.

NOTE: Some of the components are secured in place by blocks. Remove the blocks to safely remove these components.

[Buy now](#)

[Tigercat Simulator Si065 Assembly Instructions PDF](#)

[With Instant Download](#)