

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]


Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

ALL PRODUCT INDEX
B2100D

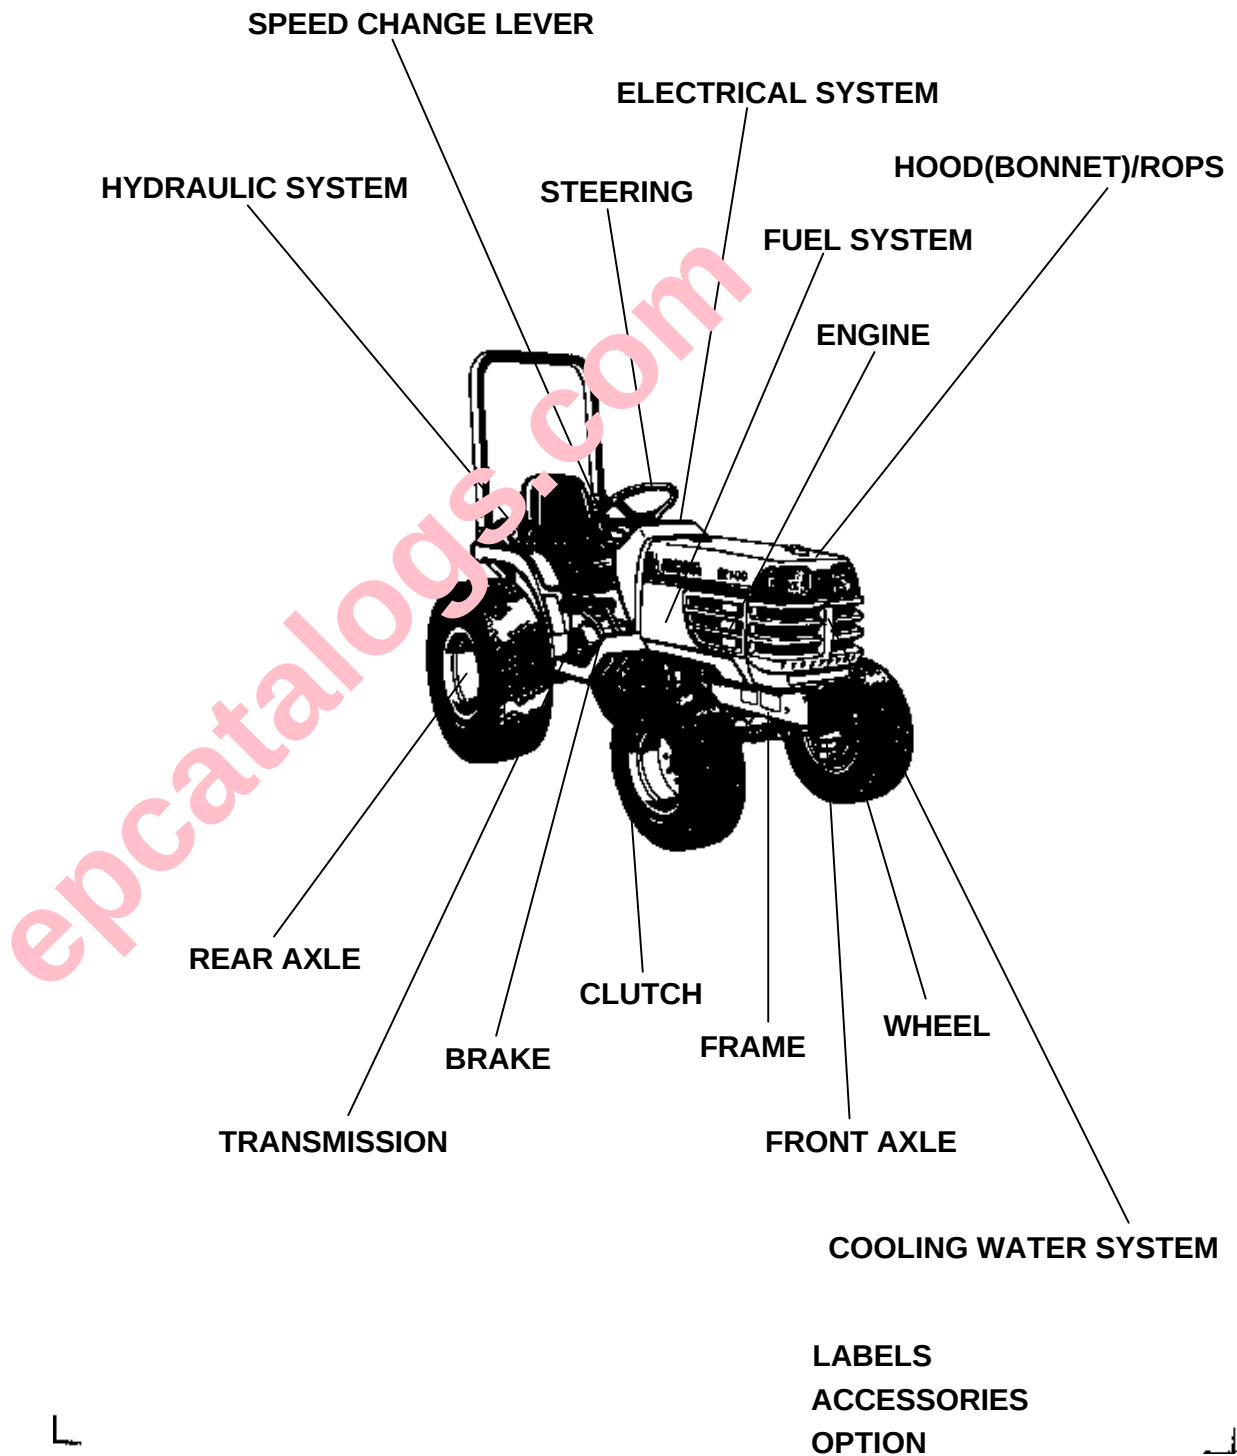

Item	Part No.	Description	Book
ENGINE	010001	CRANKCASE	100K0615
	010002	OIL PAN	100K0615
	010003	CYLINDER HEAD	100K0615
	010004	GEAR CASE	100K0615
	010005	HEAD COVER	100K0615
	010100	MAIN BEARING CASE	100K0615
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100K0615
	010102	PISTON AND CRANK SHAFT	100K0615
	010103	FLYWHEEL	100K0615
	010105	FUEL CAMSHAFT AND GOVERNOR SHAFT	100K0615
	010201	STOP SOLENOID	100K0615
	010202	INJECTION PUMP	100K0615
	010203	INJECTION PUMP [COMPONENT PARTS]	100K0615
	010204	GOVERNOR	100K0615
	010205	SPEED CONTROL PLATE	100K0615
	010206	NOZZLE HOLDER AND GLOW PLUG	100K0615
	010207	NOZZLE HOLDER [COMPONENT PARTS]	100K0615
	010500	WATER FLANGE AND THERMOSTAT	100K0615
	010501	WATER PUMP	100K0615
	010600	VALVE AND ROCKER ARM	100K0615
	010601	INLET MANIFOLD	100K0615
	010602	EXHAUST MANIFOLD	100K0615
	01090001	UPPER GASKET KIT	100K0615
	01090002	LOWER GASKET KIT	100K0615
ELECTRICAL SYSTEM	01A521	DYNAMO	100K0615
	01A523	DYNAMO [COMPONENT PARTS]	100K0615
CLUTCH	01C101	CLUTCH	100K0615
HYDRAULIC SYSTEM	01D120	HYDRAULIC PUMP	100K0615
	01D125	HYDRAULIC PUMP [COMPONENT PARTS]	100K0615
ENGINE	02060301	AIR CLEANER	100K0615
	02060302	AIR CLEANER	100K0615
	02060303	AIR CLEANER(DOUBLE) [OPTION]	100K0615
	020605	MUFFLER	100K0615
	02A001	ACCELERATOR LEVER	100K0615
FUEL SYSTEM	02A101	FUEL TANK	100K0615
	02A110	FUEL PIPE	100K0615
	02A11001	FUEL PIPE	100K0615
	02A130	FUEL FILTER [COMPONENT PARTS]	100K0615
COOLING WATER SYSTEM	02A401	FAN	100K0615
	02A410	WATER PIPE	100K0615
	02A420	RADIATOR	100K0615
ELECTRICAL SYSTEM	02A515	ALTERNATOR [CA]	100K0615
	02A520	ALTERNATOR [COMPONENT PARTS] [CA]	100K0615
	02A525	STARTER	100K0615
	02A530	STARTER [COMPONENT PARTS]	100K0615
	02A535	BATTERY	100K0615
	02B115	PANEL BOARD	100K0615
	02B120	PANEL BOARD [COMPONENT PARTS]	100K0615
	02B301	HEAD LIGHT	100K0615
	02B302	TAIL LIGHT/HAZARD LIGHT/WORKING LIGHT	100K0615
	02B50101	ELECTRICAL WIRING	100K0615
	02B50102	ELECTRICAL WIRING [CA]	100K0615
	02C110	CLUTCH ROD	100K0615
CLUTCH	02C301	CLUTCH PEDAL	100K0615
	02C401	CLUTCH HOUSING	100K0615
FRAME	02C415	FRAME	100K0615
TRANSMISSION	02C420	TRANSMISSION CASE	100K0615

Item	Part No.	Description	Book
TRANSMISSION	02C425	DIFFERENTIAL GEAR CASE	100K0615
	02C427	REAR AXLE CASE	100K0615
	02D001	CLUTCH SHAFT/PROPELLER SHAFT	100K0615
	02D105	2ND SHAFT/3RD SHAFT/4TH SHAFT	100K0615
	02D135	5HT SHAFT/PTO SHAFT	100K0615
	02D137	MID PTO	100K0615
REAR AXLE	02D140	REAR DIFFERENTIAL	100K0615
	02D143	FRONT WHEEL PROPELLER SHAFT	100K0615
	02D201	MAIN GEAR SHIFT FORK	100K0615
	02D301	REAR AXLE	100K0615
BRAKE	02E001	BRAKE	100K0615
SPEED CHANGE LEVER	02E015	PARKING BRAKE LEVER	100K0615
	02F101	MAIN GEAR SHIFT LEVER	100K0615
	02F110	RANGE GEAR SHIFT LEVER	100K0615
	02F113	FRONT WHEEL DRIVE LEVER	100K0615
FRONT AXLE	02F125	PTO GEAR SHIFT LEVER	100K0615
	02F140	POSITON CONTROL LEVER	100K0615
	02F201	BRAKE PEDAL	100K0615
	02F205	DIFFERENTIAL LOCK PEDAL	100K0615
	02G115	FRONT DIFFERENTIAL	100K0615
	02G123	BEVEL GEAR CASE	100K0615
	02G125	FRONT AXLE CASE	100K0615
	02G130	FRONT AXLE	100K0615
	02G135	FRONT DRIVE SHAFT	100K0615
	02H003	DRAG LINK	100K0615
STEERING	02H005	SHOCK ROD	100K0615
	02H101	STEERING HANDLE	100K0615
	02H110	STEERING CONTROLLER	100K0615
	02H11501	STEERING CONTROLLER [COMPONENT PARTS]	100K0615
	02H11502	STEERING CONTROLLER [COMPONENT PARTS]	100K0615
	02H11503	STEERING CONTROLLER [COMPONENT PARTS]	100K0615
HYDRAULIC SYSTEM	02J20101	HYDRAULIC OIL LINE(SUCTION)	100K0615
	02J20102	HYDRAULIC OIL LINE(SUCTION)	100K0615
	02J203	FLOW DIVIDER VALVE [COMPONENT PARTS]	100K0615
	02J215	HYDRAULIC OIL LINE(STEERING)	100K0615
	02J301	HYDRAULIC CYLINDER CASE	100K0615
	02J405	CONTROL VALVE	100K0615
	02J41001	CONTROL VALVE [COMPONENT PARTS]	100K0615
	02J41002	CONTROL VALVE [COMPONENT PARTS]	100K0615
	02K101	LIFT ROD	100K0615
	02K115	LOWER LINK	100K0615
	02K120	TOP LINK	100K0615
HOOD(BONNET)/ROPS	02M101	FRONT GRILLE	100K0615
	02M105	HOOD(BONNET)	100K0615
	02M120	SIDE COVER	100K0615
	02M210	FENDER	100K0615
	02M217	SEAT SUPPORT	100K0615
	02M220	SEAT	100K0615
	02M225	STEP	100K0615
	02M301	ROPS	100K0615
WHEEL	02R10101	FRONT WHEEL (6-12)	100K0615
	02R10103	FRONT WHEEL (23*8.50-12)	100K0615
	02R10104	FRONT WHEEL (21*8.00-10)	100K0615
	02R11002	REAR WHEEL (9.5-16)	100K0615
	02R11004	REAR WHEEL (33*12.5-15)	100K0615
LABELS	02R11005	REAR WHEEL (31*15.5-15)	100K0615
	02S101	LABEL	100K0615

Item	Part No.	Description	Book
ACCESSORIES OPTION	02T105 02U803	ACCESSORIES AND SERVICE PARTS STATER RELAY KIT [OPTION]	100K0615 100K0615
epcatalogs.com			

[Buy now](#)

[Kubota B2100D Tractor Parts Manual PDF](#)

[With Instant Download](#)