

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]


Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

ALL PRODUCT INDEX
B2100HSD

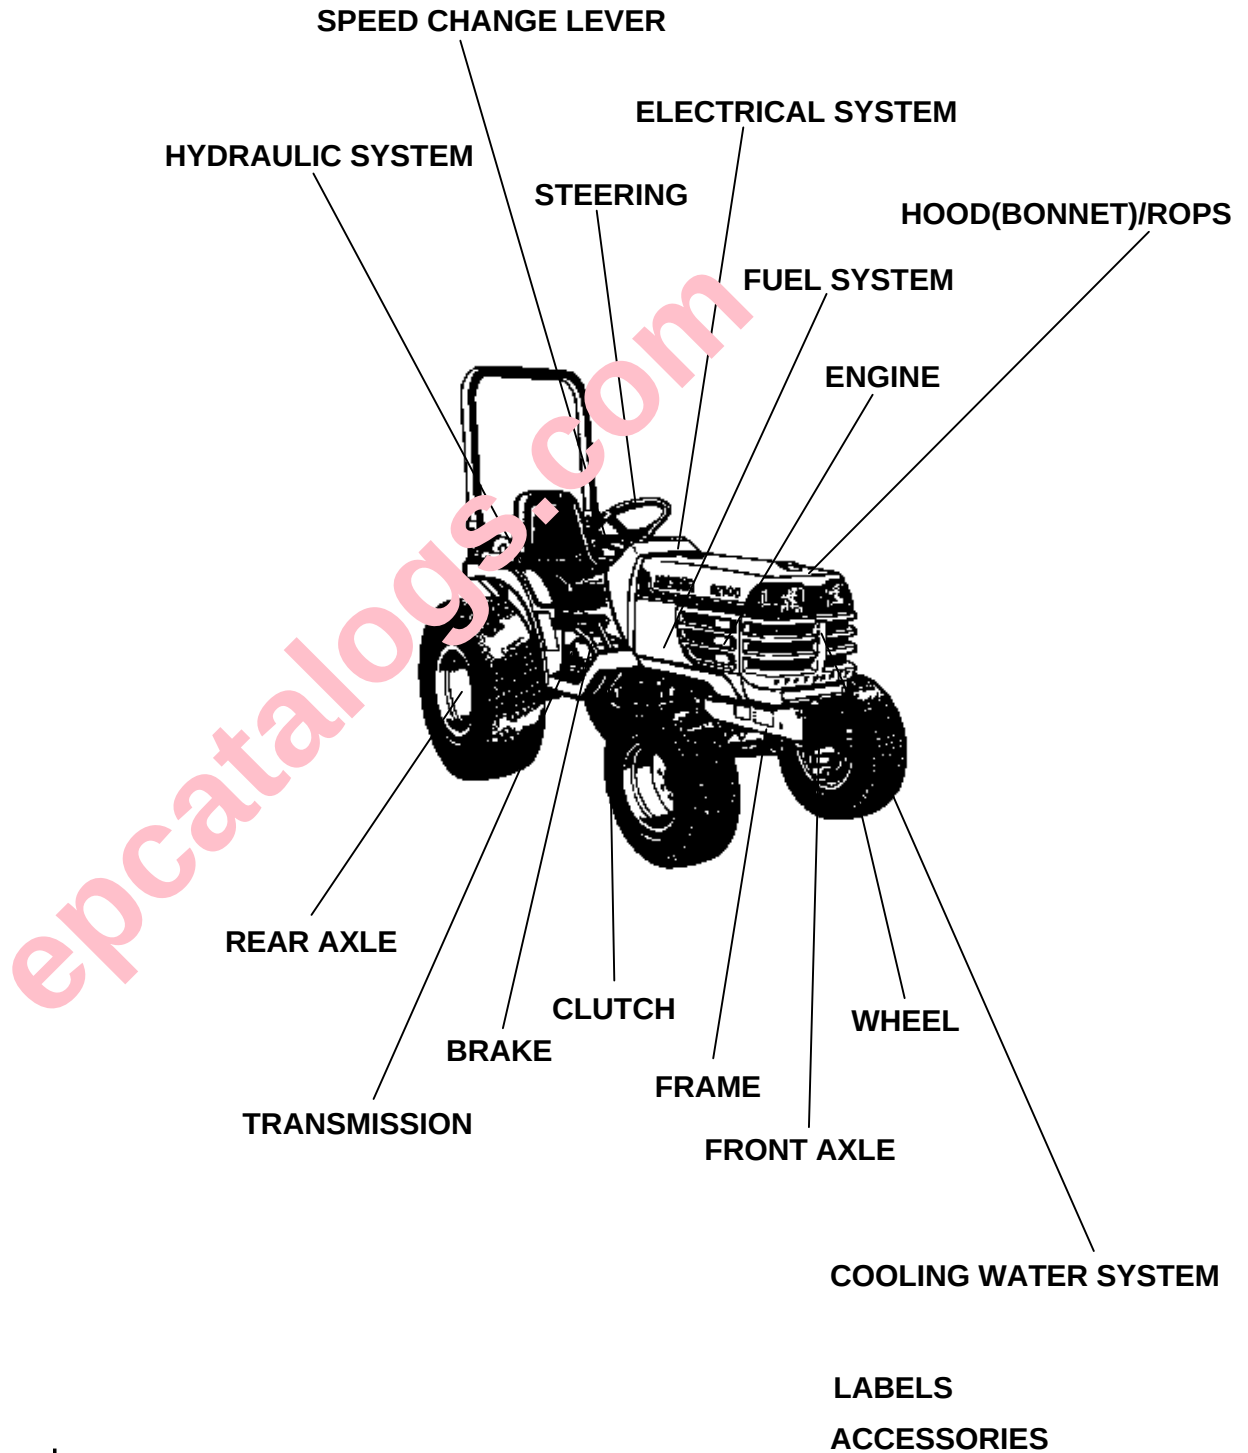

Item	Part No.	Description	Book
ENGINE	010001	CRANK CASE	100A0080
	010002	OIL PAN	100A0080
	010003	CYLINDER HEAD	100A0080
	010004	GEAR CASE	100A0080
	010005	HEAD COVER	100A0080
	010100	MAIN BEARING CASE	100A0080
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100A0080
	010102	PISTON AND CRANK SHAFT	100A0080
	010103	FLYWHEEL	100A0080
	010105	FUEL CAMSHAFT AND GOVERNOR SHAFT	100A0080
	010201	STOP SOLENOID	100A0080
	010202	INJECTION PUMP	100A0080
	010203	INJECTION PUMP [COMPONENT PARTS]	100A0080
	010204	GOVERNOR	100A0080
	010205	SPEED CONTROL PLATE	100A0080
	010206	NOZZLE HOLDER AND GLOW PLUG	100A0080
	010207	NOZZLE HOLDER [COMPONENT PARTS]	100A0080
	010500	WATER FLANGE AND THERMOSTAT	100A0080
	010501	WATER PUMP	100A0080
	010600	VALVE AND ROCKER ARM	100A0080
	010601	INLET MANIFOLD	100A0080
	010602	EXHAUST MANIFOLD	100A0080
	01090001	UPPER GASKET KIT	100A0080
	01090002	LOWER GASKET KIT	100A0080
ELECTRICAL SYSTEM	01A521	DYNAMO	100A0080
	01A523	DYNAMO [COMPONENT PARTS]	100A0080
CLUTCH	011101	CLUTCH	100A0080
HYDRAULIC SYSTEM	011121	HYDRAULIC PUMP	100A0080
	011125	HYDRAULIC PUMP [COMPONENT PARTS]	100A0080
ENGINE	02060301	AIR CLEANER	100A0080
	02060302	AIR CLEANER	100A0080
	02060303	AIR CLEANER (DOUBLE) [OPTION]	100A0080
	020605	MUFFLER	100A0080
FUEL SYSTEM	02A001	ACCELERATOR LEVER	100A0080
	02A101	FUEL TANK	100A0080
	02A110	FUEL PIPE	100A0080
	02A11001	FUEL PIPE	100A0080
	02A130	FUEL FILTER [COMPONENT PARTS]	100A0080
COOLING WATER SYSTEM	02A401	FAN	100A0080
	02A410	WATER PIPE	100A0080
	02A420	RADIATOR	100A0080
ELECTRICAL SYSTEM	02A515	ALTERNATOR [CA]	100A0080
	02A520	ALTERNATOR [COMPONENT PARTS] [CA]	100A0080
	02A525	STARTER	100A0080
	02A530	STARTER [COMPONENT PARTS]	100A0080
	02A535	BATTERY	100A0080
	02B115	PANEL BOARD	100A0080
	02B120	PANEL BOARD [COMPONENT PARTS]	100A0080
	02B301	HEAD LIGHT	100A0080
	02B302	TAIL LIGHT/HAZARD LIGHT/WORKING LIGHT	100A0080
	02B50101	ELECTRICAL WIRING	100A0080
	02B50102	ELECTRICAL WIRING [CA]	100A0080
CLUTCH	02C110	CLUTCH ROD	100A0080
	02C301	CLUTCH PEDAL	100A0080
	02C401	CLUTCH HOUSING	100A0080
FRAME	02C415	FRAME	100A0080

Item	Part No.	Description	Book
TRANSMISSION	02C420	TRANSMISSION CASE	100A0080
	02C425	DIFFERENTIAL GEAR CASE	100A0080
	02C427	REAR AXLE CASE	100A0080
	02D001	CLUTCH SHAFT/PROPELLER SHAFT	100A0080
	02D010	HST	100A0080
	02D015	HST [COMPONENT PARTS]	100A0080
	02D105	2ND SHAFT/3RD SHAFT/4TH SHAFT	100A0080
	02D135	5TH SHAFT/PTO SHAFT	100A0080
	02D137	MID PTO	100A0080
	02D140	REAR DIFFERENTIAL	100A0080
REAR AXLE	02D143	FRONT WHEEL PROPELLER SHAFT	100A0080
	02D301	REAR AXLE	100A0080
BRAKE	02E001	BRAKE	100A0080
	02E015	PARKING BRAKE LEVER	100A0080
SPEED CHANGE LEVER	02F010	SPEED CHANGE LEVER	100A0080
	02F020	SPEED CONTROL PEDAL	100A0080
	02F030	SPEED SET LEVER	100A0080
	02F110	RANGE GEAR SHIFT LEVER	100A0080
FRONT AXLE	02F113	FRONT WHEEL DRIVE LEVER	100A0080
	02F125	PTO GEAR SHIFT LEVER	100A0080
	02F135	BI-SPEED TURN LEVER	100A0080
	02F140	POSITION CONTROL LEVER	100A0080
	02F201	BRAKE PEDAL	100A0080
	02F205	DIFFERENTIAL LOCK PEDAL	100A0080
	02G115	FRONT DIFFERENTIAL	100A0080
	02G123	BEVEL GEAR CASE	100A0080
	02G125	FRONT AXLE CASE	100A0080
	02G130	FRONT AXLE CASE	100A0080
STEERING	02G13001	FRONT AXLE	100A0080
	02G13002	FRONT AXLE	100A0080
	02G133	BI-SPEED TURN CLUTCH	100A0080
	02G135	FRONT DRIVE SHAFT	100A0080
	02G201	BI-SPEED TURN GEAR CASE	100A0080
	02G205	BI-SPEED TURN CASE	100A0080
	02G210	BI-SPEED TURN SHIFT LEVER	100A0080
	02H003	DRAG LINK	100A0080
	02H005	TIE ROD	100A0080
	02H101	STEERING HANDLE	100A0080
HYDRAULIC SYSTEM	02H110	STEERING CONTROLLER	100A0080
	02H11501	STEERING CONTROLLER [COMPONENT PARTS]	100A0080
	02H11502	STEERING CONTROLLER [COMPONENT PARTS]	100A0080
	02J201	HYDRAULIC OIL LINE (SUCTION)	100A0080
HOOD(BONNET)/ROPS	02J203	FLOW DIVIDER VALVE [COMPONENT PARTS]	100A0080
	02J215	HYDRAULIC OIL LINE (STEERING)	100A0080
	02J230	HYDRAULIC OIL LINE (T/M)	100A0080
	02J235	HYDRAULIC OIL LINE (HST)	100A0080
	02J240	HYDRAULIC OIL LINE (OIL COOLER)	100A0080
	02J301	HYDRAULIC CYLINDER CASE	100A0080
	02J405	CONTROL VALVE	100A0080
	02J41001	CONTROL VALVE [COMPONENT PARTS]	100A0080
	02J41002	CONTROL VALVE [COMPONENT PARTS]	100A0080
	02K101	LIFT ROD	100A0080
HOOD(BONNET)/ROPS	02K115	LOWER LINK	100A0080
	02K120	TOP LINK	100A0080
	02M101	FRONT GRILLE	100A0080
	02M105	HOOD (BONNET)	100A0080

Item	Part No.	Description	Book
HOOD(BONNET)/ROPS	02M120	SIDE COVER	100A0080
	02M210	FENDER	100A0080
	02M217	SEAT SUPPORT	100A0080
	02M220	SEAT	100A0080
	02M225	STEP	100A0080
	02M301	ROPS	100A0080
WHEEL	02R10101	FRONT WHEEL (6-12)	100A0080
	02R10103	FRONT WHEEL (23*8.50-12)	100A0080
	02R10104	FRONT WHEEL (21*8.00-10)	100A0080
	02R11002	REAR WHEEL (9.5-16)	100A0080
	02R11004	REAR WHEEL (33*12.5-15)	100A0080
	02R11005	REAR WHEEL (31*15.5-15)	100A0080
LABELS	02S101	LABEL	100A0080
ACCESSORIES	02T105	ACCESSORIES AND SERVICE PARTS	100A0080

[Buy now](#)

[Kubota B2100HSD Tractor Parts Manual PDF](#)

[With Instant Download](#)