

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new


Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

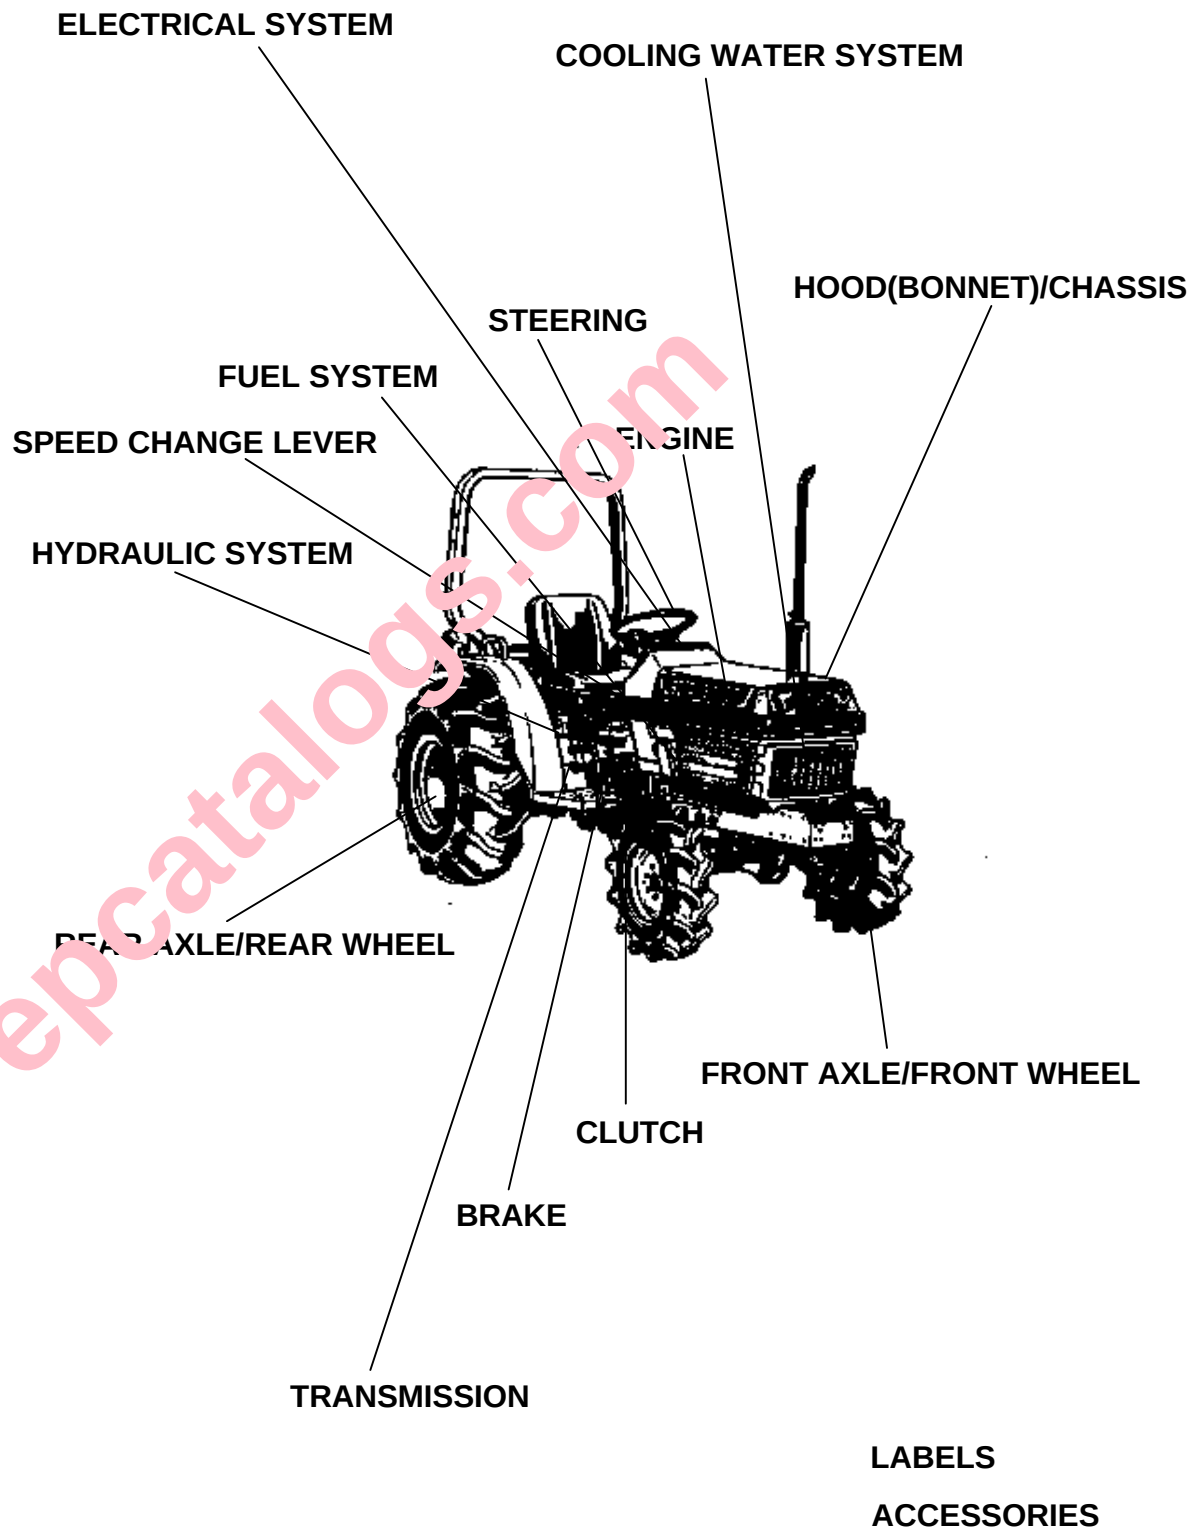

Item	Part No.	Description	Book
ENGINE	01T001	CRANKCASE	100K0200
	01T002	OIL PAN	100K0200
	01T003	PISTON/CRANKSHAFT	100K0200
	01T004	MAIN BEARING CASE	100K0200
	01T00502	FLYWHEEL	100K0200
	01T006	CYLINDER HEAD	100K0200
	01T007	VALVE/ROCKER ARM	100K0200
	01T008	NOZZLE HOLDER	100K0200
	01T009	NOZZLE HOLDER [COMPONENT PARTS]	100K0200
	01T010	CYLINDER HEAD COVER	100K0200
	01T011	INLET MANIFOLD	100K0200
	01T014	EXHAUST MANIFOLD	100K0200
	01T016	CAMSHAFT	100K0200
	01T017	GEAR CASE	100K0200
	01T018	WATER PUMP	100K0200
	01T019	WATER FLANGE/THERMOSTAT	100K0200
	01T020	FUEL CAMSHAFT	100K0200
	01T021	INJECTION PUMP	100K0200
	01T022	INJECTION PUMP [COMPONENT PARTS]	100K0200
	01T023	ENGINE STOP LEVER	100K0200
	01T024	SPEED CONTROL PLATE	100K0200
	01T025	GOVERNOR	100K0200
	01T026	UPPER CASSET KIT	100K0200
	01T027	LOWER GASKET KIT	100K0200
COOLING WATER SYSTEM	01T036	FAN	100K0200
ELECTRICAL SYSTEM	01T037	TENSION PULLEY [CA]	100K0200
	01T03801	DYNAMO [A][AU][NZ]	100K0200
	01T03802	ALTERNATOR [CA]	100K0200
	01T03901	DYNAMO [A][AU][NZ] [COMPONENT PARTS]	100K0200
	01T03902	ALTERNATOR [CA] [COMPONENT PARTS]	100K0200
CLUTCH	01T0802	CLUTCH	100K0200
HYDRAULIC SYSTEM	01T103	HYDRAULIC GEAR PUMP	100K0200
	01T104	HYDRAULIC GEAR PUMP [COMPONENT PARTS]	100K0200
ENGINE	02T012	AIR CLEANER	100K0200
	02T013	AIR CLEANER [COMPONENT PARTS]	100K0200
	02T015	MUFFLER	100K0200
	02T028	ENGINE STOP ROD	100K0200
	02T029	ACCELERATOR LEVER	100K0200
FUEL SYSTEM	02T030	FUEL TANK	100K0200
	02T031	FUEL PIPE 1	100K0200
	02T032	FUEL FILTER	100K0200
	02T033	FUEL PIPE 2	100K0200
	02T034	WATER PIPE	100K0200
COOLING WATER SYSTEM	02T035	RADIATOR	100K0200
ELECTRICAL SYSTEM	02T040	STARTER	100K0200
	02T041	STARTER [COMPONENT PARTS]	100K0200
	02T042	BATTERY	100K0200
	02T043	LIGHT	100K0200
	02T044	WORKING LIGHT [OPTION]	100K0200
	02T045	PANEL/SWITCH	100K0200
	02T046	PANEL BOARD [COMPONENT PARTS]	100K0200
	02T04701	WIRE HARNESS [A][AU][NZ]	100K0200
	02T04702	WIRE HARNESS [CA]	100K0200
	02T04902	CLUTCH ROD	100K0200
CLUTCH	02T050	CLUTCH PEDAL	100K0200
TRANSMISSION	02T05102	CLUTCH HOUSING	100K0200
	02T052	TRANSMISSION CASE	100K0200
	02T05302	TRANSMISSION CASE COVER	100K0200
	02T054	HST	100K0200
	02T055	HST [COMPONENT PARTS]	100K0200

Item	Part No.	Description	Book
TRANSMISSION	02T05602	PROPELLER SHAFT	100K0200
	02T05702	1ST SHAFT/2ND SHAFT	100K0200
	02T058	3RD SHAFT	100K0200
	02T059	4TH SHAFT	100K0200
	02T06002	FRONT DRIVE SHAFT/6TH SHAFT	100K0200
	02T06102	7TH SHAFT	100K0200
	02T06301	PTO SHAFT	100K0200
	02T06302	MID PTO	100K0200
	02T06303	FRONT PTO [OPTION]	100K0200
	02T066	NEUTRAL HOLDER	100K0200
SPEED CHANGE LEVER	02T067	SPEED CONTROL PEDAL	100K0200
	02T068	SPEED CHANGE PLATE	100K0200
	02T069	SHIFT SET LEVER	100K0200
	02T070	RANGE GEAR SHIFT LEVER	100K0200
	02T071	RANGE GEAR SHIFT FORK	100K0200
	02T07201	FRONT WHEEL DRIVE LEVER/PTO LEVER	100K0200
	02T07202	BI-SPEED TURN LEVER [WITH BI-SPEED TURN]	100K0200
	02T073	FRONT DRIVE FORK	100K0200
	02T074	PTO FORK SHAFT	100K0200
	02T075	REAR DIFFERENTIAL	100K0200
REAR AXLE/REAR WHEEL	02T07602	DIFF.LOCK PEDAL	100K0200
	02T077	REAR AXLE	100K0200
	02T078	REAR AXLE CASE	100K0200
	02T07901	REAR WHEEL (8.3-24)	100K0200
	02T07902	REAR WHEEL (12.4-16)	100K0200
	02T07903	REAR WHEEL (12.4-16)	100K0200
	02T07904	REAR WHEEL (13.6-16)	100K0200
	02T07905	REAR WHEEL (13.6-16)	100K0200
	02T080	BRAKE	100K0200
	02T081	BRAKE ROD	100K0200
BRAKE	02T082	BRAKE PEDAL	100K0200
	02T083	BRAKE INTERLOCKER	100K0200
	02T087	BEVEL GEAR SHAFT	100K0200
	02T088	FRONT AXLE CASE	100K0200
	02T089	BEVEL GEAR CASE	100K0200
	02T090	FRONT AXLE ARM	100K0200
	02T09101	FRONT DIFFERENTIAL [W/O BI-SPEED TURN]	100K0200
	02T09102	FRONT DIFFERENTIAL [WITH BI-SPEED TURN]	100K0200
	02T092	CLUTCH DISK [WITH BI-SPEED TURN]	100K0200
	02T093	GEAR CASE [WITH BI-SPEED TURN]	100K0200
FRONT AXLE/FRONT WHEEL	02T094	BI-SPEED TURN CASE [WITH BI-SPEED TURN]	100K0200
	02T095	SHIFT LEVER [WITH BI-SPEED TURN]	100K0200
	02T096	FRONT DRIVE SHAFT	100K0200
	02T09701	FRONT WHEEL (6-12)	100K0200
	02T09702	FRONT WHEEL (A6-12)	100K0200
	02T09703	FRONT WHEEL (24 X 8.50-12)	100K0200
	02T098	FRONT AXEL FRAME	100K0200
	02T099	FRONT WEIGHT BRACKET [OPTION]	100K0200
	02T100	KUNCKLE ARM	100K0200
	02T10101	MANUAL STEERING	100K0200
STEERING	02T10102	POWER STEERING	100K0200
	02T10201	MANUAL STEERING [COMPONENT PARTS]	100K0200
	02T10202	POWER STEERING [COMPONENT PARTS]	100K0200
	02T105	HYDRAULIC PIPE (PS)	100K0200
	02T10602	HYDRAULIC PIPE (SUCTION)	100K0200
	02T10702	HYDRAULIC PIPE (DELIVERY/RETURN)	100K0200
	02T108	HYDRAULIC BLOCK [COMPONENT PARTS]	100K0200
	02T109	HYDRAULIC PIPE (CHARGE)	100K0200
	02T110	LIFT ARM	100K0200
	02T111	HYD.CYLINDER CAP	100K0200
HYDRAULIC SYSTEM			

Item	Part No.	Description	Book
HYDRAULIC SYSTEM	02T112	CONTROL VALVE	100K0200
	02T113	CONTROL VALVE1 [COMPONENT PARTS]	100K0200
	02T114	CONTROL VALVE2 [COMPONENT PARTS]	100K0200
	02T115	CONTROL VALVE3 [COMPONENT PARTS]	100K0200
	02T116	TOP LINK	100K0200
	02T117	LOWER LINK/LIFT ROD	100K0200
	02T118	CHECK CHAIN	100K0200
	02T119	HITCH	100K0200
	02T120	DRAWBAR	100K0200
	02T121	HOOD (BONNET)	100K0200
HOOD(BONNET)/CHASSIS	02T122	LACE	100K0200
	02T123	HOOD (BONNET) COVER REAR	100K0200
	02T124	HOOD (BONNET) FRONT	100K0200
	02T125	HOOD (BONNET) SIDE	100K0200
	02T126	DUST COVER	100K0200
	02T127	HOOD (BONNET) SUPPORT	100K0200
	02T128	FENDER	100K0200
	02T12902	SEAT	100K0200
	02T13002	STEP	100K0200
	02T131	ROPS [A][CA1	100K0200
LABELS	02T132	LABEL 1	100K0200
	02T133	LABEL 2	100K0200
ACCESSORIES	02T134	ACCESSORIES AND SERVICE PARTS	100K0200

[Buy now](#)

[Kubota B2150HSD Tractor Parts Manual PDF](#)

[With Instant Download](#)