

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new


Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

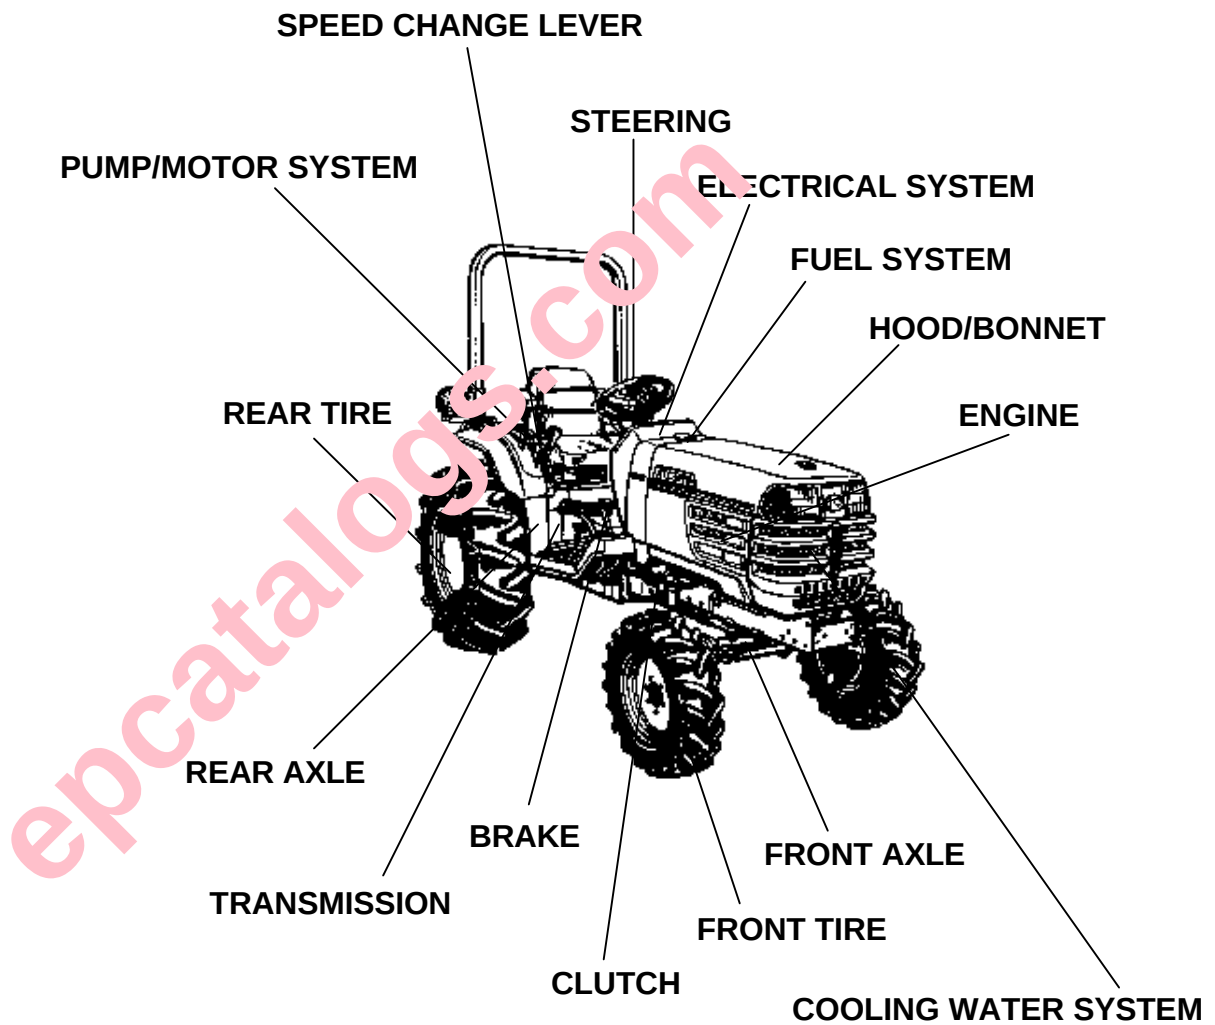

TOP LINK/TOP LINK BRACKET/PTO PROTECTOR

LABELS

ACCESSORIES AND SERVICE PARTS

OPTION

Item	Part No.	Description	Book
ENGINE	01000101	CRANKCASE	100K0798
	01000102	CRANKCASE	100K0798
	010002	OIL PAN	100K0798
	010003	CYLINDER HEAD	100K0798
	010004	GEAR CASE	100K0798
	01000501	HEAD COVER	100K0798
	01000502	HEAD COVER	100K0798
	010006	OIL FILTER	100K0798
	010007	DIPSTICK AND GUIDE	100K0798
	010100	MAIN BEARING CASE	100K0798
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100K0798
	010102	PISTON AND CRANKSHAFT	100K0798
	010103	FLYWHEEL	100K0798
	010105	FUEL CAMSHAFT AND GOVERNOR SHAFT	100K0798
	010200	IDLE APPARATUS	100K0798
	010202	INJECTION PUMP	100K0798
	01020401	GOVERNOR	100K0798
	01020402	GOVERNOR	100K0798
	01020701	SPEED CONTROL PLATE	100K0798
	01020601	NOZZLE HOLDER AND GLOW PLUG	100K0798
	01020602	NOZZLE HOLDER AND GLOW PLUG	100K0798
	01020701	NOZZLE HOLDER [COMPONENT PARTS]	100K0798
	01020702	NOZZLE HOLDER [COMPONENT PARTS]	100K0798
	010301	FUEL PUMP(MECHANICAL)	100K0798
	010500	WATER FLANGE AND THERMOSTAT	100K0798
	010501	WATER PUMP	100K0798
	010600	VALVE AND ROCKER ARM	100K0798
	01060101	INLET MANIFOLD	100K0798
	01060102	INLET MANIFOLD	100K0798
	010602	EXHAUST MANIFOLD	100K0798
	010603	AIR CLEANER	100K0798
	010605	MUFFLER	100K0798
	010900	UPPER GASKET KIT	100K0798
	010901	LOWER GASKET KIT	100K0798
	01A00101	ACCELERATOR LEVER	100K0798
FUEL SYSTEM	01A101	FUEL TANK	100K0798
	01A11001	FUEL PIPE	100K0798
	01A11002	FUEL PIPE	100K0798
	01A11003	FUEL PIPE	100K0798
	01A13001	FUEL FILTER [COMPONENT PARTS]	100K0798
	01A13002	FUEL FILTER [COMPONENT PARTS]	100K0798
COOLING WATER SYSTEM	01A40101	FAN	100K0798
	01A40102	FAN	100K0798
	01A410	WATER PIPE	100K0798
	01A42001	RADIATOR [EXCEPT [AU]]	100K0798
	01A42002	RADIATOR [AU]	100K0798
	01A430	RESERVE TANK	100K0798
ELECTRICAL SYSTEM	01A51001	STOP SOLENOID	100K0798
	01A51002	STOP SOLENOID	100K0798
	01A521	DYNAMO	100K0798
	01A523	DYNAMO [COMPONENT PARTS]	100K0798
	01A525	STARTER	100K0798
	01A530	STARTER [COMPONENT PARTS]	100K0798

Item	Part No.	Description	Book
ELECTRICAL SYSTEM	01A535	BATTERY	100K0798
	01B10101	SWITCH	100K0798
	01B10102	SWITCH	100K0798
	01B10103	SWITCH	100K0798
	01B115	PANEL BOARD	100K0798
	01B12001	PANEL BOARD [COMPONENT PARTS]	100K0798
	01B12002	PANEL BOARD [COMPONENT PARTS]	100K0798
	01B301	HEAD RIGHT	100K0798
	01B30201	HAZARD LIGHT	100K0798
	01B30202	HAZARD LIGHT	100K0798
	01B30203	HAZARD LIGHT	100K0798
	01B304	TAIL LIGHT	100K0798
	01B310	WINKER LAMP	100K0798
	01B50101	ELECTRICAL WIRING	100K0798
	01B50102	ELECTRICAL WIRING	100K0798
	01B50103	ELECTRICAL WIRING	100K0798
CLUTCH	01C101	CLUTCH	100K0798
	01C101	CLUTCH ROD	100K0798
	01C101	CLUTCH PEDAL	100K0798
	01C40101	CLUTCH HOUSING	100K0798
	01C40102	CLUTCH HOUSING	100K0798
	01C415	CENTER FRAME	100K0798
	01C417	SUB FRAME	100K0798
TRANSMISSION	01C42001	TRANSMISSION CASE	100K0798
	01C42002	TRANSMISSION CASE	100K0798
	01C425	DIFFERENTIAL GEAR CASE	100K0798
	01C427	REAR AXLE CASE	100K0798
	01D00101	CLUTCH SHAFT	100K0798
	01D00102	CLUTCH SHAFT	100K0798
	01D005	PROPELLER SHAFT	100K0798
	01D010	HST	100K0798
	01D01501	HST [COMPONENT PARTS]	100K0798
	01D01502	HST [COMPONENT PARTS]	100K0798
	01D01503	HST [COMPONENT PARTS]	100K0798
	01D10301	FRONT SHAFT	100K0798
	01D10302	FRONT SHAFT	100K0798
	01D135	PTO SHAFT	100K0798
	01D137	MID PTO	100K0798
	01D140	REAR DIFFERENTIAL	100K0798
	01D143	FRONT WHEEL PROPELLER SHAFT	100K0798
	01D149	2ND SHAFT	100K0798
	01D152	3RD SHAFT	100K0798
	01D155	4TH SHAFT	100K0798
REAR AXLE BRAKE	01D301	REAR AXLE	100K0798
	01E00101	BRAKE	100K0798
	01E00102	BRAKE	100K0798
	01E00501	BRAKE ROD	100K0798
	01E01501	PARKING BRAKE LEVER [EXCEPT [AU]]	100K0798
SPEED CHANGE LEVER	01E01502	PARKING BRAKE LEVER [AU]	100K0798
	01F030	SPEED SET LEVER	100K0798
	01F10701	NEUTRAL HOLDER LINK	100K0798
	01F10702	NEUTRAL HOLDER LINK	100K0798
	01F10801	SPEED CONTROL PEDAL	100K0798
	01F11001	RANGE GEAR SHIFT LEVER	100K0798
	01F11002	RANGE GEAR SHIFT LEVER	100K0798
	01F113	FRONT WHEEL DRIVE LEVER	100K0798

Item	Part No.	Description	Book
SPEED CHANGE LEVER	01F12501	PTO GEAR SHIFT LEVER	100K0798
	01F12502	PTO GEAR SHIFT LEVER	100K0798
PUMP/MOTOR SYSTEM	01F143	HYDRAULIC CONTROL LEVER	100K0798
BRAKE	01F201	BRAKE PEDAL	100K0798
REAR AXLE	01F205	DIFFERENTIAL LOCK PEDAL	100K0798
FRONT AXLE	01G101	FRONT AXLE FRAME	100K0798
	01G105	FRONT AXLE CASE	100K0798
	01G115	FRONT DIFFERENTIAL	100K0798
	01G120	DIFFERENTIAL GEAR SHAFT	100K0798
	01G123	BEVEL GEAR CASE	100K0798
	01G125	FRONT AXLE CASE	100K0798
	01G130	FRONT AXLE	100K0798
	01G135	FRONT DRIVE SHAFT	100K0798
STEERING	01H003	DRAG LINK	100K0798
	01H005	TIE ROD	100K0798
	01H10101	STEERING HANDLE	100K0798
	01H10501	STEERING POST	100K0798
	01J101	HYDRAULIC PUMP(PS)	100K0798
	01J105	HYDRAULIC PUMP(PS)	100K0798
		[COMPONENT PARTS]	
PUMP/MOTOR SYSTEM	01J120	HYDRAULIC PUMP	100K0798
	01J12501	HYDRAULIC PUMP [COMPONENT PARTS]	100K0798
	01J12502	HYDRAULIC PUMP [COMPONENT PARTS]	100K0798
	01J20101	HYDRAULIC OIL LINE(SUCTION)	100K0798
	01J20102	HYDRAULIC OIL LINE(SUCTION)	100K0798
	01J21001	HYDRAULIC OIL LINE(DELIVERY)	100K0798
	01J21002	HYDRAULIC OIL LINE(DELIVERY)	100K0798
	01J21501	HYDRAULIC OIL LINE(STEERING)	100K0798
	01J21502	HYDRAULIC OIL LINE(STEERING)	100K0798
	01J23001	HYDRAULIC OIL LINE(T/M)	100K0798
	01J23002	HYDRAULIC OIL LINE(T/M)	100K0798
	01J235	HYDRAULIC OIL LINE(HST)	100K0798
	01J24001	HYDRAULIC OIL LINE(OIL COOLER)	100K0798
	01J24002	HYDRAULIC OIL LINE(OIL COOLER)	100K0798
	01J24501	HYDRAULIC OIL LINE(F/M)	100K0798
	01J24502	HYDRAULIC OIL LINE(F/M)	100K0798
	01J30101	HYDRAULIC CYLINDER	100K0798
	01J30102	HYDRAULIC CYLINDER	100K0798
	01J310	HYDRAULIC PISTON/LIFT ARM	100K0798
	01J330	FEED BACK LEVER	100K0798
	01J405	CONTROL VALVE	100K0798
	01J410	CONTROL VALVE [COMPONENT PARTS]	100K0798
	01J430	RELIEF VALVE	100K0798
TOP LINK/TOP LINK BRACKET/PTO PROTECTOR	01K10101	3-POINT LINKAGE 2(LIFT ROD)	100K0798
	01K11501	LOWER LINK	100K0798
	01K119	STABILIZER	100K0798
	01K120	3-POINT LINKAGE 1(TOP LINK)	100K0798
	01L117	HITCH/DRAWBAR	100K0798
	01L12501	PTO PROTECTOR [EXCEPT [AU]]	100K0798
	01L12502	PTO PROTECTOR [AU]	100K0798
HOOD/BONNET	01M10101	FRONT GRILLE [EXCEPT [AU]]	100K0798
	01M10102	FRONT GRILLE [AU]	100K0798
	01M105	BONNET	100K0798
	01M113	PANEL COVER	100K0798
	01M120	SIDE COVER	100K0798
	01M13001	SHUTTER PLATE [EXCEPT [AU]]	100K0798

[Buy now](#)

[Kubota B2710HSD Tractor Parts Manual PDF](#)

[With Instant Download](#)