

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new


Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia


If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

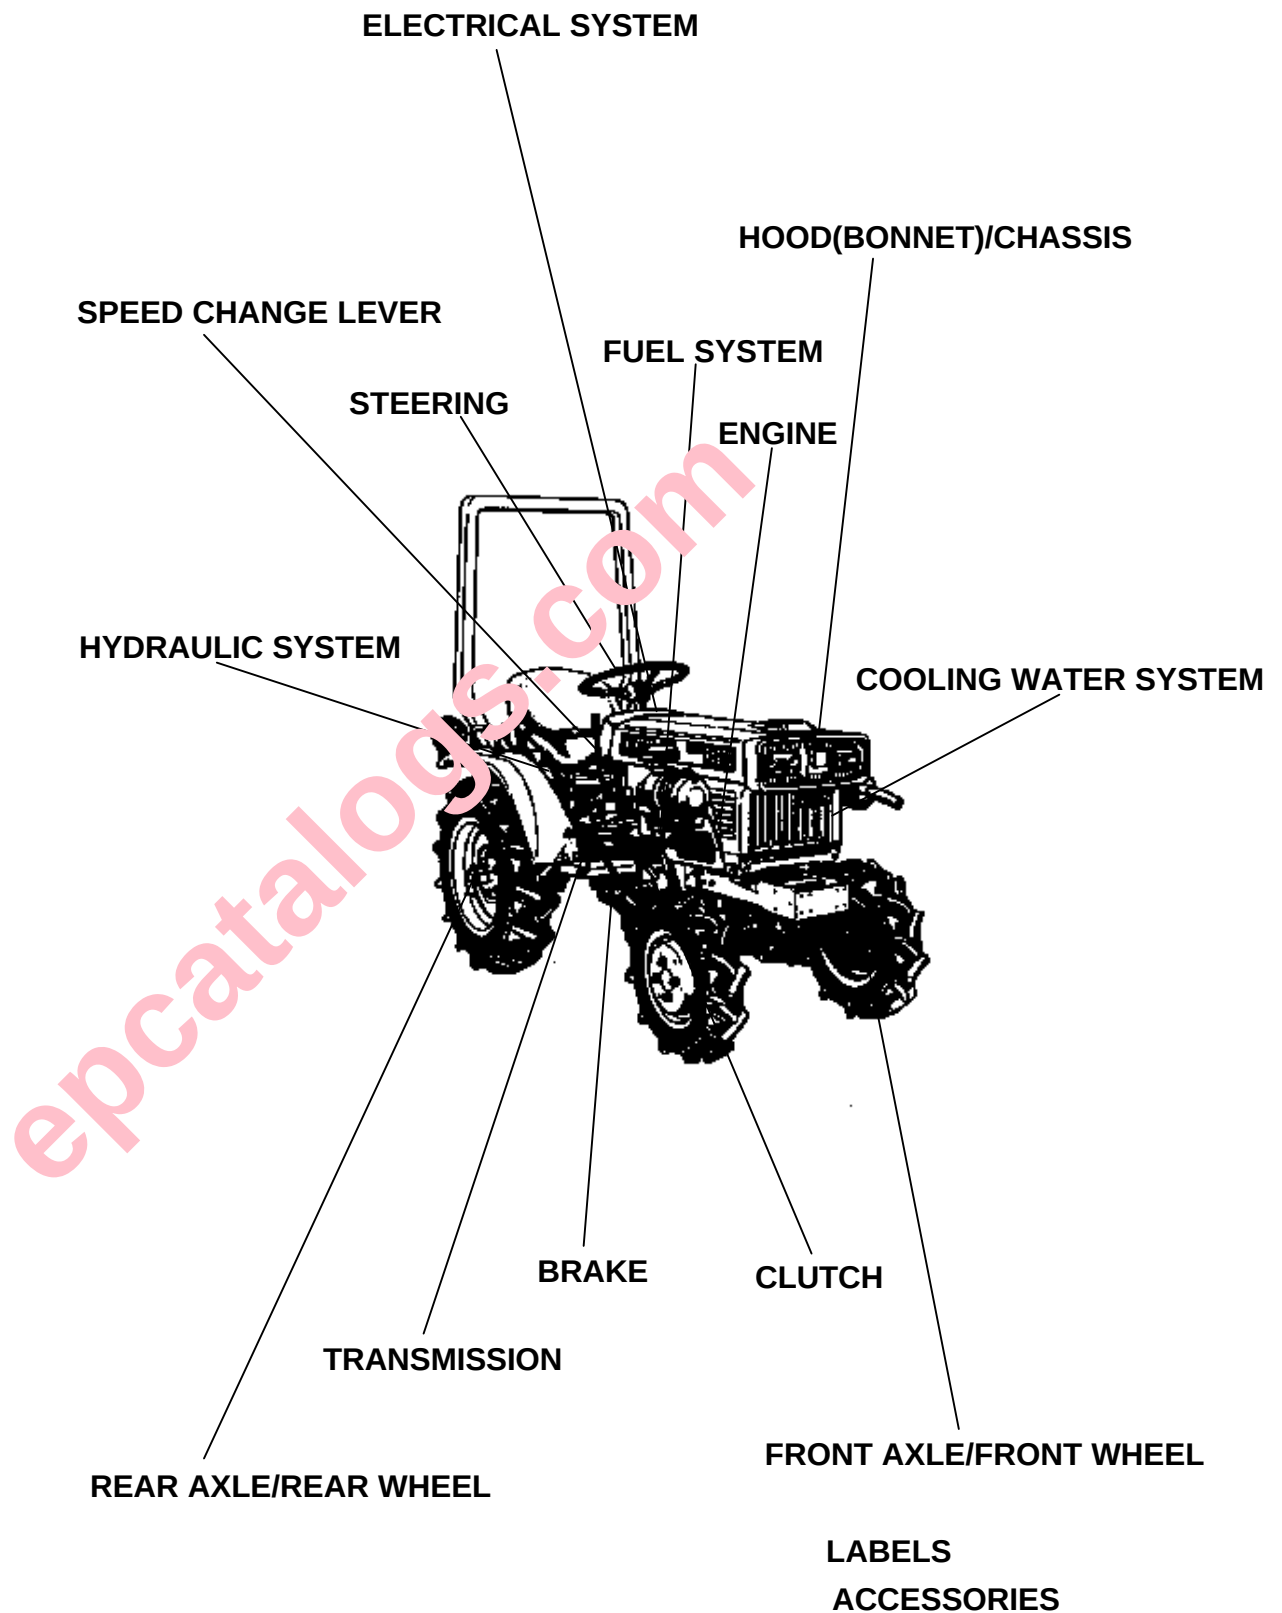

Item	Part No.	Description	Book
ENGINE	01T001	CRANKCASE	100K0315
	01T002	OIL PAN	100K0315
	01T003	PISTON/CRANKSHAFT	100K0315
	01T004	MAIN BEARING CASE	100K0315
	01T005	FLYWHEEL	100K0315
	01T006	CYLINDER HEAD	100K0315
	01T007	VALVE/ROCKER ARM	100K0315
	01T008	NOZZLE HOLDER [A] [CA] [FR] [AU]	100K0315
	01T010	NOZZLE HOLDER (COMPONENT PARTS)	100K0315
	01T011	CYLINDER HEAD COVER	100K0315
	01T012	INLET MANIFOLD	100K0315
	01T014	EXHAUST MANIFOLD	100K0315
	01T016	CAMSHAFT	100K0315
	01T017	GEAR CASE	100K0315
	01T018	HYDRAULIC GEAR PUMP	100K0315
	01T019	HYDRAULIC GEAR PUMP (COMPONENT PARTS)	100K0315
	01T020	FUEL PUMP	100K0315
	01T021	INJECTION PUMP	100K0315
	01T022	INJECTION PUMP (COMPONENT PARTS)	100K0315
	01T023	SPEED CONTROL PLATE	100K0315
	01T024	GOVERNOR	100K0315
ELECTRICAL SYSTEM	01T029	DYNAMO/FAN BELT [A] [CA] [FR] [AU] [WG]	100K0315
	01T030	DYNAMO (COMPONENT PARTS) [A] [CA] [FR] [AU] [WG]	100K0315
CLUTCH	01T048	CLUTCH	100K0315
LABELS	01T096	LABEL	100K0315
ENGINE	01T013	AIR CLEANER	100K0315
	01T015	MUFFLER	100K0315
	01T025	ACCELERATOR	100K0315
FUEL SYSTEM	01T006	FUEL TANK	100K0315
	01T021	FUEL FILTER	100K0315
COOLING WATER SYSTEM	01T008	RADIATOR	100K0315
ELECTRICAL SYSTEM	01T035	STARTER	100K0315
	01T036	STARTER (COMPONENT PARTS)	100K0315
CLUTCH	01T037	BATTERY	100K0315
	01T038	PANEL WIRING [A] [CA]	100K0315
	01T041	LIGHT/HORN [A] [CA] [U]	100K0315
	01T047	SWITCH	100K0315
CLUTCH	01T049	CLUTCH PEDAL/PROPELLER SHAFT	100K0315
	01T050	CLUTCH HOUSING	100K0315
TRANSMISSION	01T051	TRANSMISSION CASE	100K0315
	01T052	CASE COVER	100K0315
	01T053	1ST SHAFT 4TH SHAFT	100K0315
	01T054	2ND SHAFT REVERSE SHAFT	100K0315
	01T055	3RD SHAFT 5TH SHAFT PTO SHAFT [A] [CA] [U]	100K0315
	01T057	MID P.T.O.	100K0315
SPEED CHANGE LEVER	01T058	MAIN GEAR SHIFT LEVER	100K0315
	01T059	HI-LO GEAR SHIFT LEVER	100K0315
REAR AXLE/REAR WHEEL	01T060	DIFFERENTIAL REAR	100K0315
	01T061	AXLE CASE	100K0315
	01T062	REAR WHEEL (7-16)	100K0315
BRAKE	01T063	REAR WHEEL (212/80D-15) [A] [CA]	100K0315
	01T065	BRAKE	100K0315
	01T066	BRAKE PEDAL [A] [CA] [FR] [U] [AU]	100K0315
FRONT AXLE/FRONT WHEEL	01T069	DRIVE SHAFT	100K0315
	01T070	FRONT AXLE CASE	100K0315
	01T071	FRONT WHEEL GEAR CASE	100K0315
	01T072	DIFFERENTIAL FRONT	100K0315
	01T073	FRONT AXLE JOINT	100K0315
	01T074	FRONT WHEEL DRIVE LEVER	100K0315
	01T075	FRONT WHEEL (4.50-10)	100K0315

Item	Part No.	Description	Book
FRONT AXLE/FRONT WHEEL	01T076	FRONT WHEEL (20 X 8.00-10)	100K0315
	01T077	FRONT AXLE FRAME [A] [CA] [FR] [U] [AU]	100K0315
STEERING	01T079	KNUCKLE ARM	100K0315
	01T080	STEERING	100K0315
HYDRAULIC SYSTEM	01T081	HYDRAULIC PIPE [A] [CA] [FR] [U] [AU]	100K0315
	01T083	CONTROL VALVE (COMPONENT PARTS)	100K0315
	01T084	HYDRAULIC LIFT ARM	100K0315
	01T085	HYDRAULIC CYLINDER CAP	100K0315
	01T086	3-POINT LINKAGE [A] [CA] [FR] [U] [AU]	100K0315
HOOD(BONNET)/CHASSIS	01T088	HOOD(BONNET) [A] [CA] [U]	100K0315
	01T090	REARVIEW MIRROR (OPTION) [A] [CA] [U]	100K0315
	01T091	FENDER [A] [CA] [FR] [U] [AU]	100K0315
	01T093	SEAT [A] [CA] [FR] [U] [AU]	100K0315
	01T095	STEP/FOOT COVER	100K0315
LABELS	01T097	LABEL	100K0315
ACCESSORIES	01T098	ACCESSORIES	100K0315

CRANKCASE

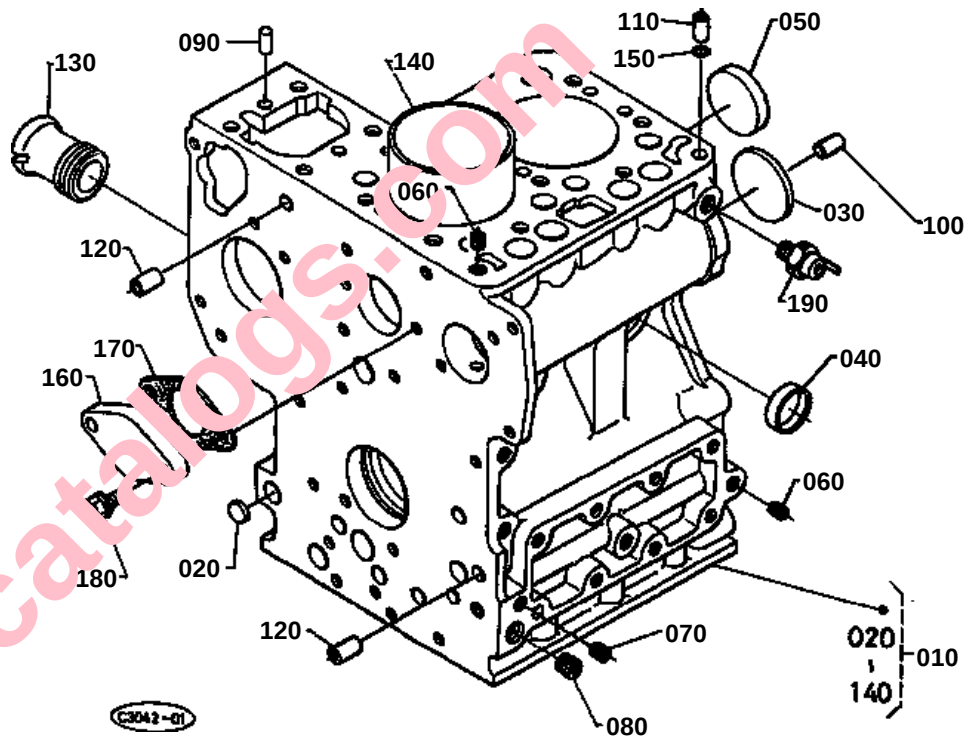

[Buy now](#)

[Kubota B4200D Tractor Parts Manual PDF](#)

[With Instant Download](#)