

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]


Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.


ALL PRODUCT INDEX
B5200D

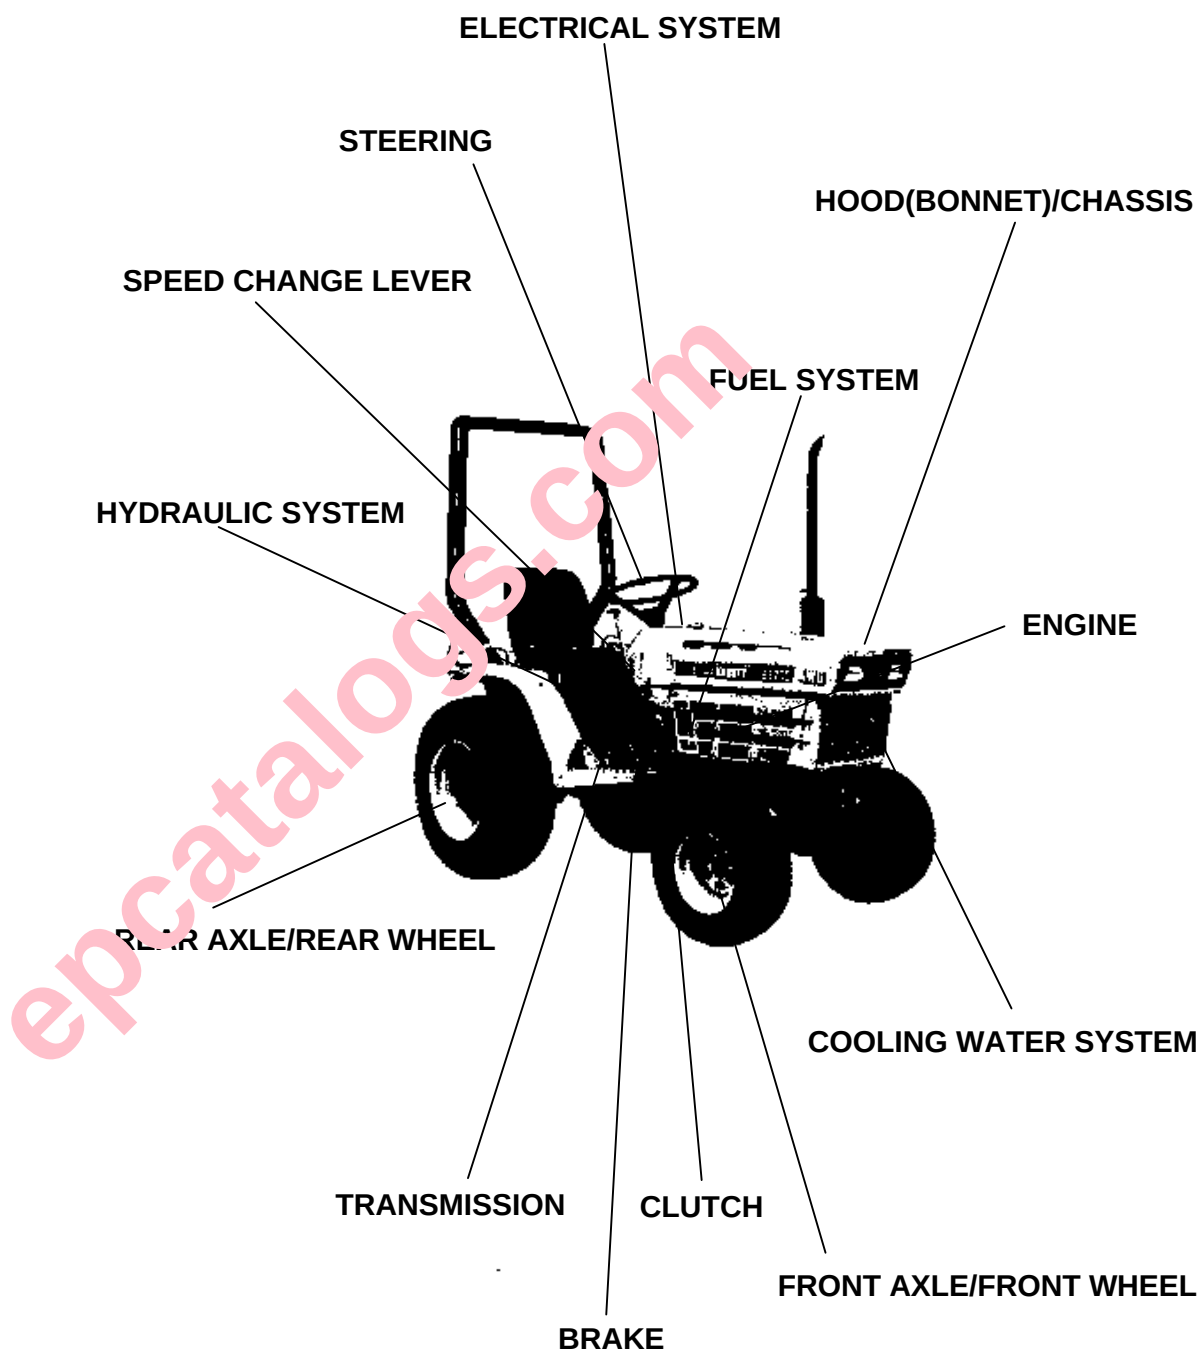

LABELS
ACCESSORIES

Item	Part No.	Description	Book
ENGINE	01T001	CRANKCASE GROUP	100K0073
	01T002	OIL PAN GROUP	100K0073
	01T003	CYLINDER HEAD GROUP	100K0073
	01T004	GEAR CASE GROUP	100K0073
	01T005	MAIN BEARING CASE	100K0073
	01T006	CYLINDER HEAD COVER GROUP	100K0073
	01T007	INLET MANIFOLD EXHAUST MANIFOLD GROUP	100K0073
	01T008	VALVE/ROCKER ARM GROUP	100K0073
	01T009	CAMSHAFT GROUP	100K0073
	01T010	ENGINE STOP LEVER GROUP	100K0073
	01T011	GEAR PUMP GROUP	100K0073
	01T012	PISTON/CRANKSHAFT GROUP	100K0073
	01T013	FLYWHEEL GROUP	100K0073
	01T014	NOZZLE HOLDER GROUP	100K0073
	01T015	SPEED CONTROL PLATE GROUP	100K0073
	01T016	GOVERNOR GROUP	100K0073
	01T017	FUEL CAMSHAFT GROUP	100K0073
	01T018	DYNAMO/STARTER GROUP	100K0073
	01T019	WATER PUMP GROUP	100K0073
	01T020	WATER PUMP GROUP	100K0073
HYDRAULIC SYSTEM	01T084	GEAR PUMP [SECTION PARTS]	100K0073
ENGINE	01T085	NOZZLE HOLDER [SECTION PARTS]	100K0073
	01T086	INJECTION PUMP [SECTION PARTS]	100K0073
ELECTRICAL SYSTEM	01T087	DYNAMO [SECTION PARTS]	100K0073
	01T089	STARTER [SECTION PARTS]	100K0073
TRANSMISSION	01T021	TRANSMISSION CASE GROUP	100K0073
	01T022	BEARING HOLDER GROUP	100K0073
	01T023	COVER GROUP	100K0073
	01T024	CASE COVER GROUP	100K0073
	01T025	AXLE CASE GROUP	100K0073
CLUTCH	01T026	CLUTCH ROD GROUP	100K0073
	01T027	CLUTCH GROUP	100K0073
TRANSMISSION	01T028	2ND SHAFT GROUP	100K0073
	01T029	3RD SHAFT GROUP	100K0073
	01T030	4TH SHAFT/5TH SHAFT GROUP	100K0073
	01T031	SPIRAL BEVEL SHAFT GROUP	100K0073
	01T032	PTO SHAFT GROUP	100K0073
	01T033	REVERSE SHAFT GROUP	100K0073
REAR AXLE/REAR WHEEL	01T034	REAR DIFFERENTIAL GROUP	100K0073
	01T035	REAR AXLE GROUP	100K0073
	01T036	REAR WHEEL GROUP (7-16) [B5200E-P, B5200D-P]	100K0073
	01T037	REAR WHEEL GROUP (29 X 12.00-15) [B5200E-PT,B5200D-PT]	100K0073
SPEED CHANGE LEVER	01T038	SPEED CHANGE FORK GROUP	100K0073
	01T039	MAIN SPEED CHANGE GROUP	100K0073
	01T040	AUX.SPEED CHANGE GROUP	100K0073
	01T041	ROTARY SPEED CHANGE FORK GROUP	100K0073
BRAKE	01T042	BRAKE GROUP	100K0073
HYDRAULIC SYSTEM	01T043	HYDRAULIC PIPING GROUP	100K0073
	01T044	HYDRAULIC BLOCK GROUP	100K0073
	01T045	HYDRAULIC 1 GROUP	100K0073
	01T046	HYDRAULIC 2 GROUP	100K0073
STEERING	01T047	STEERING GROUP	100K0073
SPEED CHANGE LEVER	01T048	SPEED CHANGE LEVER GROUP	100K0073
BRAKE	01T049	BRAKE ROD GROUP	100K0073

Item	Part No.	Description	Book
CLUTCH	01T050	PEDAL GROUP	100K0073
TRANSMISSION	01T051	RELEASE LEVER GROUP	100K0073
HOOD(BONNET)/CHASSIS	01T052	SEAT GROUP	100K0073
LABELS	01T053	NAME PLATE GROUP	100K0073
HOOD(BONNET)/CHASSIS	01T054	CLUTCH HOUSING/STEP GROUP	100K0073
	01T055	FRONT AXLE FRAME GROUP	100K0073
COOLING WATER SYSTEM	01T056	RADIATOR GROUP	100K0073
HOOD(BONNET)/CHASSIS	01T057	FENDER GROUP	100K0073
	01T058	HOOD GROUP	100K0073
ELECTRICAL SYSTEM	01T059	BATTERY GROUP	100K0073
ENGINE	01T060	MUFFLER AND MUFFLER PIPE GROUP	100K0073
FUEL SYSTEM	01T061	FUEL TANK GROUP	100K0073
	01T062	FUEL PIPE GROUP	100K0073
	01T063	FUEL FILTER GROUP	100K0073
ELECTRICAL SYSTEM	01T064	PANEL GROUP	100K0073
	01T065	PANEL SWITCH GROUP	100K0073
ENGINE	01T066	DECOMPRESS WIRE AND ENGINE STOP WIRE GROUP	100K0073
ELECTRICAL SYSTEM	01T067	FLASHER AND GROUP	100K0073
ENGINE	01T068	AIR CLEANER GROUP	100K0073
FRONT AXLE/FRONT WHEEL	01T073	FRONT AXLE CASE GROUP	100K0073
	01T074	FRONT WHEEL GEAR CASE GROUP	100K0073
	01T075	KNUCKLE ARM GROUP	100K0073
	01T076	FRONT DIFFERENTIAL GROUP	100K0073
	01T077	FRONT WHEEL HUB GROUP	100K0073
	01T078	DRIVE SHAFT GROUP	100K0073
	01T079	FRONT WHEEL GROUP (5-12) [B5200D-P]	100K0073
	01T080	FRONT WHEEL GROUP (20.5 X 8.00-10) [B5200D-PT]	100K0073
HYDRAULIC SYSTEM	01T081	3-POINT LINKAGE GROUP	100K0073
	01T082	POSITION CONTROL VALVE (OPTION)	100K0073
ELECTRICAL SYSTEM	01T083	WORKING LIGHT (OPTION)	100K0073
HYDRAULIC SYSTEM	01T088	CONTROL VALVE [SECTION PARTS]	100K0073
	01T090	CONTROL VALVE (OPTION) [SECTION PARTS]	100K0073
ACCESSORIES	01T091	ACCESSORIES AND SERVICE PARTS	100K0073

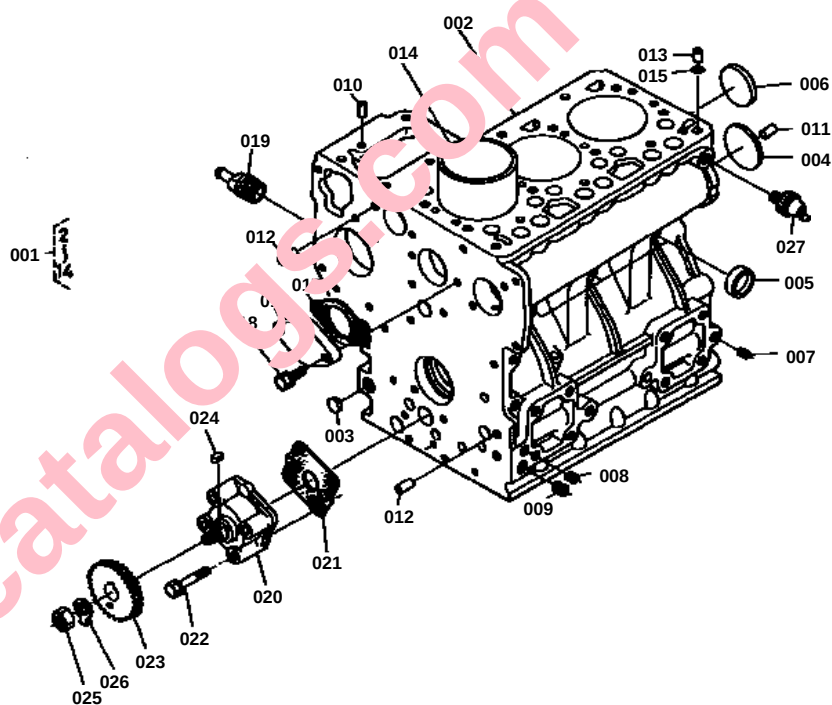

[Buy now](#)

[Kubota B5200D Tractor Parts Manual PDF](#)

[With Instant Download](#)