

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]


Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

ALL PRODUCT INDEX
B7200D

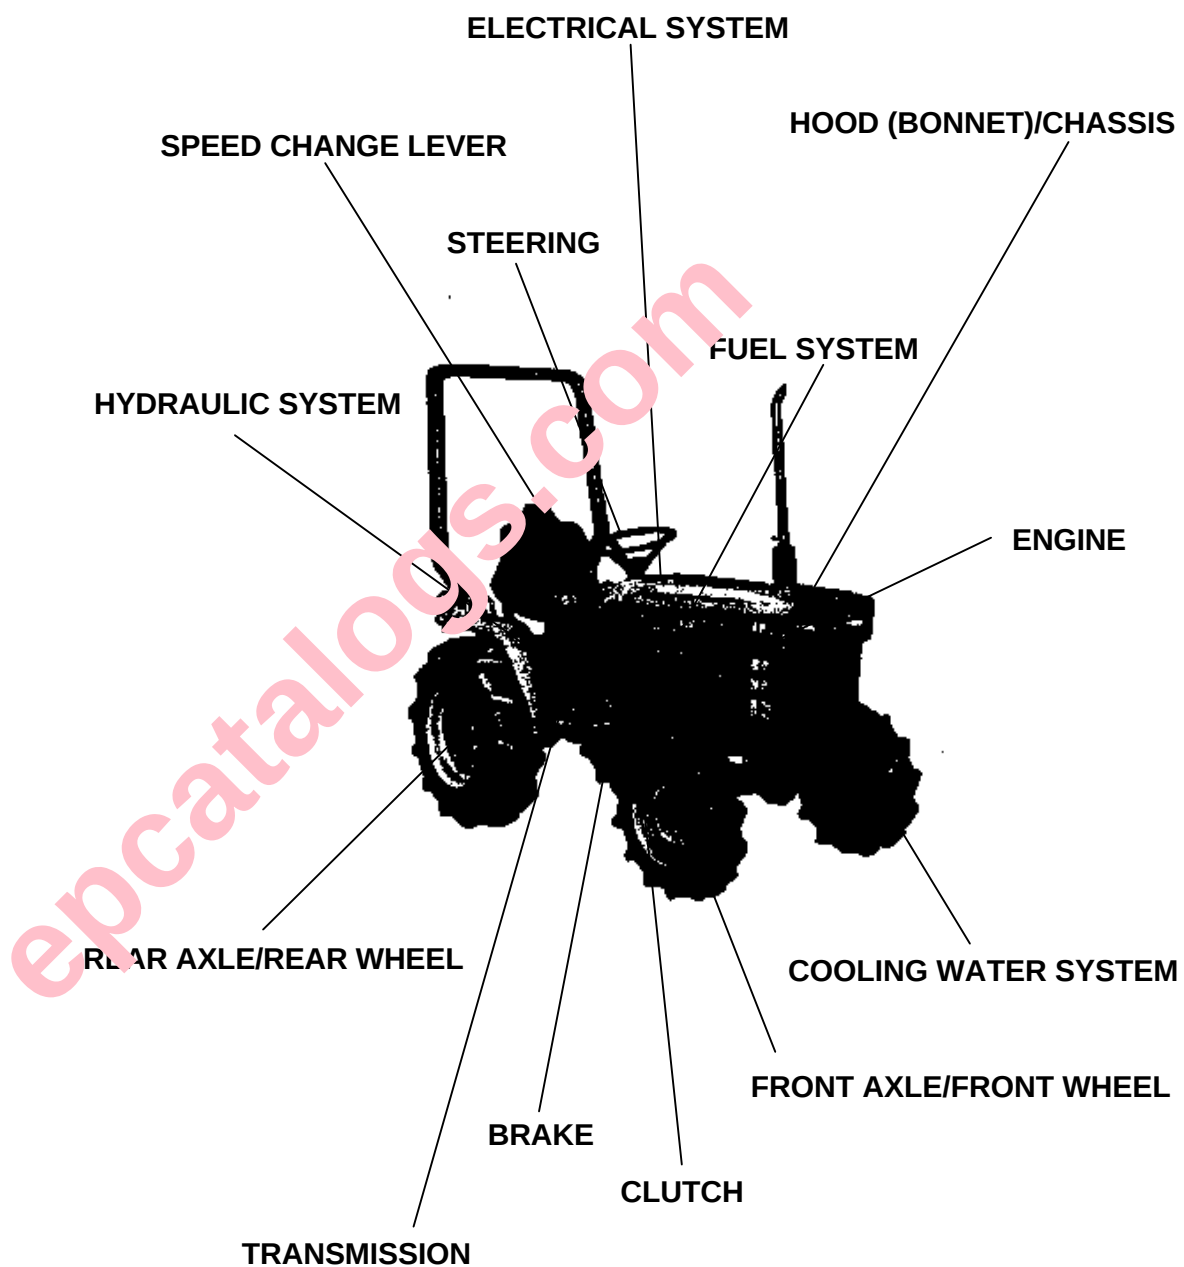


LABELS
ACCESSORIES

Item	Part No.	Description	Book
ENGINE	01E002	CRANKCASE	100K0100
	01E003	OIL PAN	100K0100
	01E004	CYLINDER HEAD	100K0100
	01E006	GEAR CASE	100K0100
	01E007	MAIN BEARING CASE	100K0100
	01E008	CYLINDER HEAD COVER	100K0100
	01E009	MANIFOLD	100K0100
	01E010	VALVE/ROCKER ARM	100K0100
	01E011	CAMSHAFT	100K0100
	01E012	PISTON/CRANKSHAFT	100K0100
	01E013	FLYWHEEL	100K0100
	01E014	INJECTION PUMP	100K0100
	01E015	NOZZLE HOLDER	100K0100
	01E016	ENGINE STOP LEVER	100K0100
	01E017	SPEED CONTROL PLATE	100K0100
	01E018	GOVERNOR	100K0100
	01E019	HYDRAULIC PUMP	100K0100
	01E021	DYNAMO	100K0100
	01E022	WATER FLANGE	100K0100
	01E023	WATER PUMP	100K0100
	01E024	INJECTION PUMP [SECTION PARTS]	100K0100
	01E025	NOZZLE HOLDER [SECTION PARTS]	100K0100
	01E027	DYNAMO [SECTION PARTS]	100K0100
	01E028	HYDRAULIC PUMP [SECTION PARTS]	100K0100
TRANSMISSION	01T001	TRANSMISSION CASE	100K0100
	01T002	PTO COVER	100K0100
	01T003	COVER	100K0100
	01T004	CASE COVER	100K0100
REAR AXLE/REAR WHEEL	01T005	REAR AXLE CASE	100K0100
CLUTCH	01T006	CLUTCH ROD	100K0100
	01T007	CLUTCH	100K0100
TRANSMISSION	01T008	2ND SHAFT	100K0100
	01T009	3RD SHAFT	100K0100
	01T010	4TH SHAFT,5TH SHAFT	100K0100
	01T011	SPIRAL BEVEL SHAFT	100K0100
	01T012	PTO SHAFT	100K0100
	01T013	REVERSE SHAFT	100K0100
REAR AXLE/REAR WHEEL	01T014	REAR DIFFERENTIAL	100K0100
	01T015	REAR AXLE	100K0100
	01T016	REAR WHEEL (9.5-16)	100K0100
	01T018	REAR WHEEL (8-16)	100K0100
	01T019	REAR WHEEL (29 X 12.00-15)	100K0100
	01T020	REAR WHEEL (31 X 13.5-15)	100K0100
	01T021	REAR WHEEL HUB	100K0100
SPEED CHANGE LEVER	01T022	SPEED CHANGE FORK	100K0100
	01T023	MAIN SPEED CHANGE	100K0100
	01T024	AUX. SPEED CHANGE	100K0100
	01T025	ROTARY SPEED CHANGE FORK	100K0100
BRAKE	01T026	BRAKE	100K0100
HYDRAULIC SYSTEM	01T028	HYDRAULIC PIPE	100K0100
	01T029	HYDRAULIC BLOCK	100K0100
	01T031	HYDRAULIC 2	100K0100
STEERING	01T032	STEERING	100K0100
SPEED CHANGE LEVER	01T033	SPEED CHANGE LEVER	100K0100
BRAKE	01T034	BRAKE ROD	100K0100
	01T035	PEDAL	100K0100
TRANSMISSION	01T036	RELEASE ROD	100K0100

Item	Part No.	Description	Book
HOOD (BONNET)/CHASSIS	01T037	SEAT	100K0100
LABELS	01T038	LABEL	100K0100
CLUTCH	01T039	CLUTCH HOUSING/STEP/STARTER	100K0100
HOOD (BONNET)/CHASSIS	01T040	FRONT AXLE FRAME	100K0100
COOLING WATER SYSTEM	01T041	RADIATOR	100K0100
HOOD (BONNET)/CHASSIS	01T042	FENDER	100K0100
	01T043	HOOD	100K0100
ELECTRICAL SYSTEM	01T044	BATTERY	100K0100
ENGINE	01T046	MUFFLER AND MUFFLER PIPE [A],[CA]	100K0100
FUEL SYSTEM	01T047	FUEL TANK	100K0100
	01T048	FUEL PIPE	100K0100
	01T049	FUEL FILTER	100K0100
ELECTRICAL SYSTEM	01T050	PANEL	100K0100
	01T051	PANEL SWITCH	100K0100
FUEL SYSTEM	01T052	DECOMPRESS WIRE AND ENGINE STOP WIRE	100K0100
ELECTRICAL SYSTEM	01T053	FLASHER LIGHT/TAIL LIGHT/HEAD LAMP	100K0100
FUEL SYSTEM	01T054	AIR CLEANER	100K0100
FRONT AXLE/FRONT WHEEL	01T060	FRONT AXLE CASE	100K0100
	01T061	FRONT GEAR CASE	100K0100
	01T062	KNUCKLE ARM	100K0100
	01T063	FRONT DIFFERENTIAL	100K0100
	01T064	FRONT WHEEL HUB	100K0100
	01T065	DRIVE SHAFT	100K0100
	01T066	FRONT AXLE ARM	100K0100
	01T067	BEVEL GEAR CASE	100K0100
	01T068	FRONT AXLE CASE	100K0100
	01T069	KNUCKLE ARM	100K0100
	01T070	FRONT DIFFERENTIAL	100K0100
	01T071	BEVEL GEAR	100K0100
	01T072	DRIVE SHAFT	100K0100
	01T073	FRONT WHEEL (6-12B) B6200D-GP-[A][CA], B7200D-P-[A][AU]	100K0100
	01T076	FRONT WHEEL (6-12) B7200D-GP	100K0100
	01T079	FRONT WHEEL (20.5 X 8.00-10)	100K0100
HYDRAULIC SYSTEM	01T080	3-POINT LINKAGE	100K0100
ELECTRICAL SYSTEM	01T081	DYNAMO 1 [OPTION]	100K0100
	01T082	DYNAMO 2 [OPTION]	100K0100
HYDRAULIC SYSTEM	01T084	HYDRAULIC OUTLET [OPTION]	100K0100
ENGINE	01T085	HORIZON MUFFLER [OPTION]	100K0100
ELECTRICAL SYSTEM	01T086	WORKING LIGHT [OPTION]	100K0100
TRANSMISSION	01T087	FLANGE F.PTO [OPTION]	100K0100
STEERING	01T088	POWER STEERING [A][CA] [OPTION]	100K0100
HYDRAULIC SYSTEM	01T090	CONTROL VALVE [SECTION PARTS]	100K0100
ELECTRICAL SYSTEM	01T091	STARTER [SECTION PARTS]	100K0100
	01T092	DYNAMO [SECTION PARTS]	100K0100
	01T093	BOOSTER [A][CA] [SECTION PARTS]	100K0100
HYDRAULIC SYSTEM	01T094	HYDRAULIC BLOCK [A][CA] [SECTION PARTS]	100K0100
ACCESSORIES	01T095	ACCESSORIES AND SERVICE PARTS	100K0100

CRANKCASE

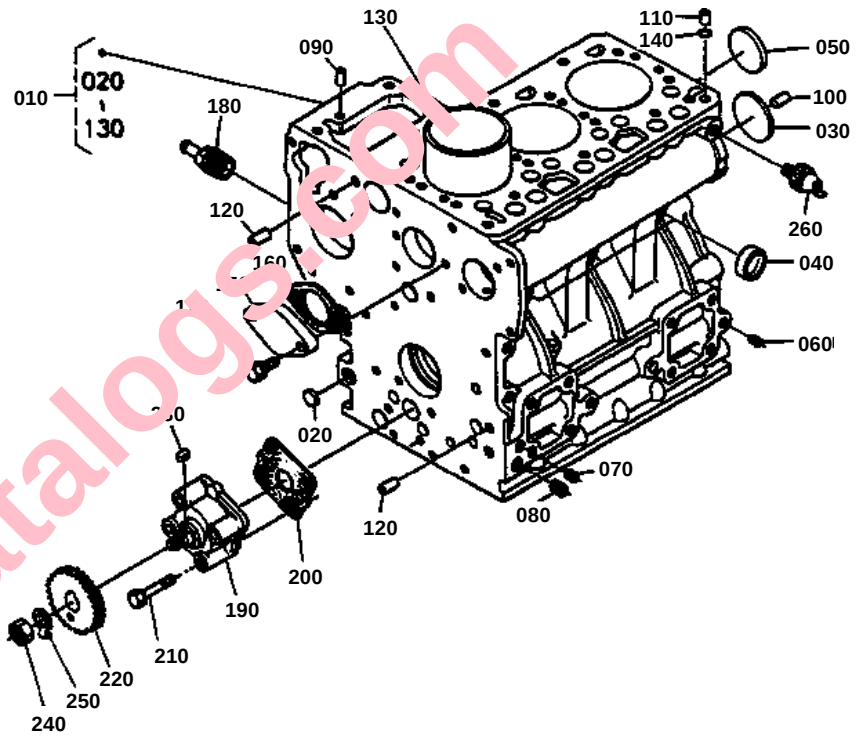

[Buy now](#)

[Kubota B7200D Tractor Parts Manual PDF](#)

[With Instant Download](#)