

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]


Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia


If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

ALL PRODUCT INDEX
B7200HSTD

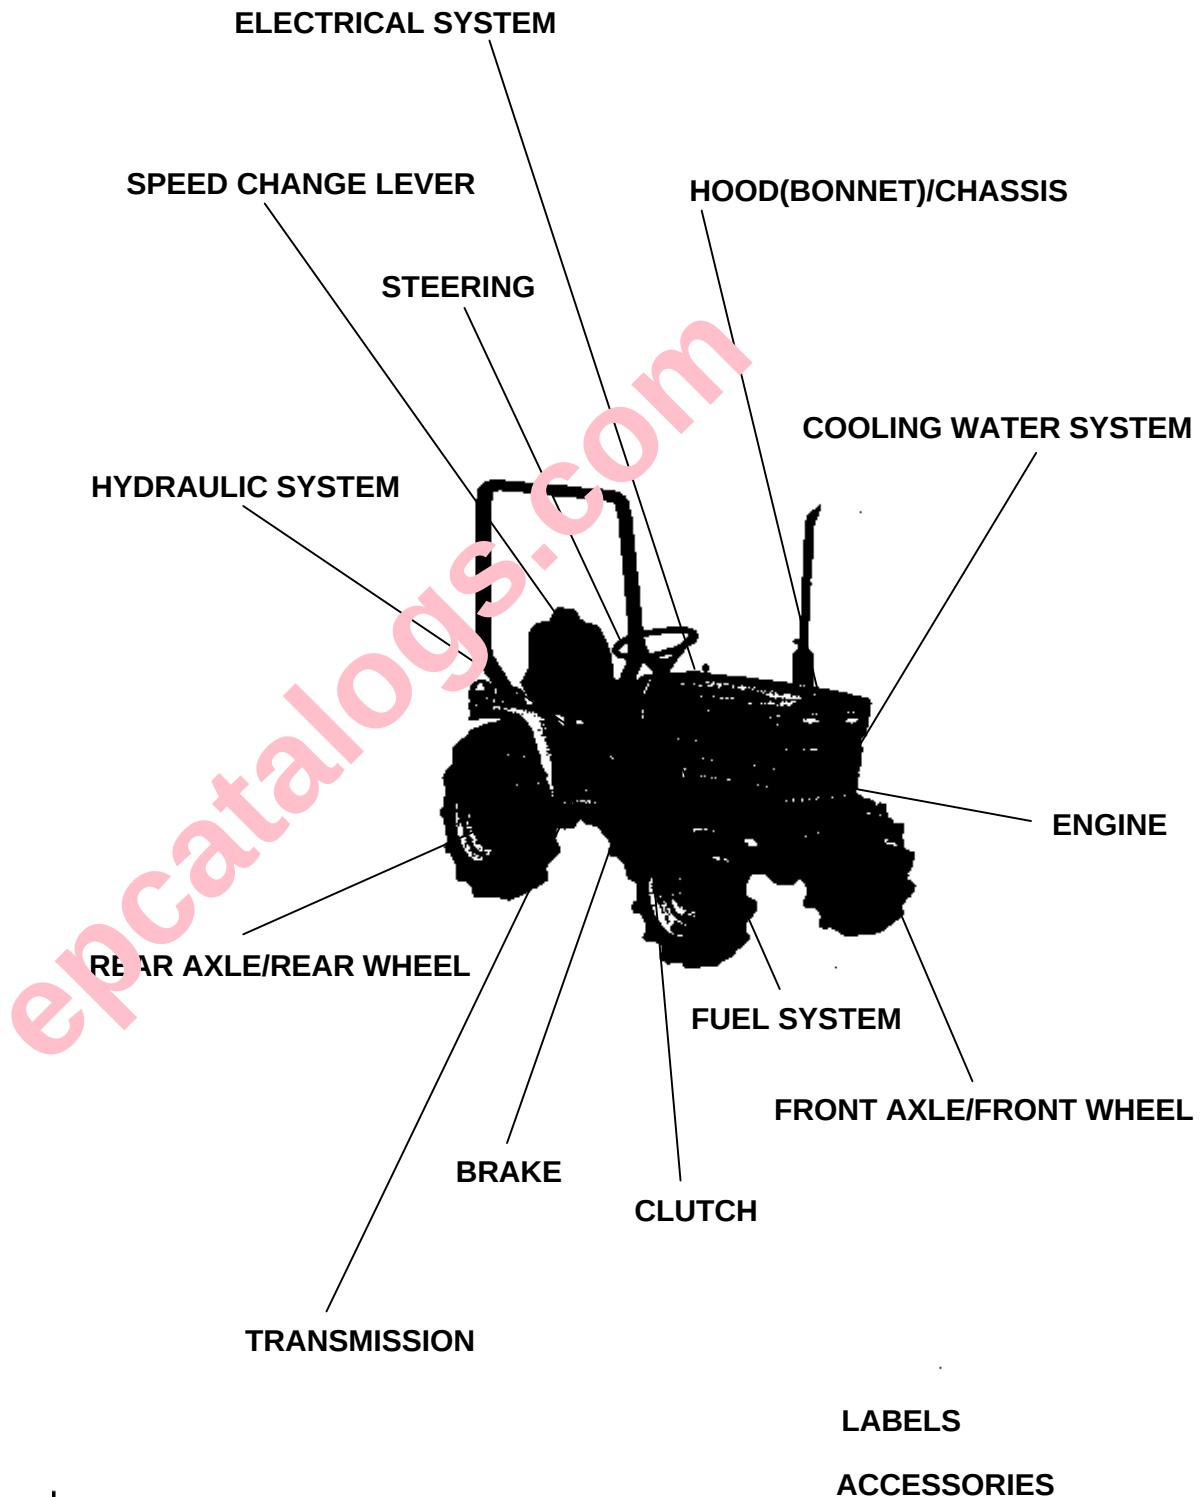

Item	Part No.	Description	Book
ENGINE	01E001	CRANKCASE [D850-LA-H D950-LA-H]	100K0070
	01E002	OIL PAN	100K0070
	01E003	CYLINDER HEAD	100K0070
	01E004	GEAR CASE	100K0070
	01E005	MAIN BEARING CASE	100K0070
	01E006	CYLINDER HEAD COVER	100K0070
	01E007	MANIFOLD	100K0070
	01E008	VALVE/ROCKER ARM	100K0070
	01E009	CAMSHAFT	100K0070
	01E010	PISTON/CRANKSHAFT	100K0070
	01E011	FLYWHEEL	100K0070
	01E012	INJECTION PUMP	100K0070
	01E013	NOZZLE HOLDER	100K0070
	01E014	ENGINE STOP LEVER	100K0070
	01E015	SPEED CONTROL PLATE	100K0070
	01E016	GOVERNOR	100K0070
	01E017	DYNAMO/STARTER	100K0070
	01E018	WATER PUMP	100K0070
	01E019	WATER PUMP	100K0070
	01E020	HYDRAULIC PUMP	100K0070
	01E021	INJECTION PUMP	100K0070
	01E022	NOZZLE HOLDER	100K0070
	01E023	STARTER	100K0070
	01E024	DYNAMO	100K0070
	01E025	HYDRAULIC PUMP	100K0070
TRANSMISSION	01T001	TRANSMISSION CASE [B6200HSTE(D) B7200HSTE(D)]	100K0070
	01T002	CASE COVER	100K0070
REAR AXLE/REAR WHEEL	01T003	REAR AXLE CASE	100K0070
CLUTCH	01T004	CLUTCH ROD	100K0070
	01T005	CLUTCH	100K0070
TRANSMISSION	01T006	4TH SHAFT	100K0070
	01T007	2ND SHAFT	100K0070
	01T008	3RD 5TH AND PTO SHAFT	100K0070
REAR AXLE/REAR WHEEL	01T009	REAR DIFFERENTIAL	100K0070
	01T010	REAR AXLE	100K0070
	01T01102	REAR WHEEL (9.5-16)	100K0070
	01T01105	REAR WHEEL (31 X 13.5-15)	100K0070
SPEED CHANGE LEVER	01T01106	REAR WHEEL HUB	100K0070
	01T012	AUX.SPEED CHANGE	100K0070
	01T013	PTO SPEED CHANGE	100K0070
TRANSMISSION	01T014	MID PTO	100K0070
BRAKE	01T015	BRAKE	100K0070
HYDRAULIC SYSTEM	01T017	HYDRAULIC PIPE	100K0070
TRANSMISSION	01T018	HST	100K0070
HYDRAULIC SYSTEM	01T019	HYDRAULIC BLOCK	100K0070
	01T021	HYDRAULIC 2	100K0070
STEERING	01T022	STEERING	100K0070
BRAKE	01T023	PEDAL	100K0070
SPEED CHANGE LEVER	01T024	SPEED CHANGE LEVER	100K0070
BRAKE	01T025	BRAKE ROD	100K0070
SPEED CHANGE LEVER	01T026	RELEASE ROD	100K0070
	01T027	SPEED CHANGE 1	100K0070
	01T028	SPEED CHANGE 2	100K0070
HOOD(BONNET)/CHASSIS	01T029	SEAT	100K0070
LABELS	01T030	LABEL	100K0070

Item	Part No.	Description	Book
CLUTCH	01T031	CLUTCH HOUSING	100K0070
HOOD(BONNET)/CHASSIS	01T032	FRONT AXLE FRAME	100K0070
COOLING WATER SYSTEM	01T033	RADIATOR	100K0070
HOOD(BONNET)/CHASSIS	01T034	FENDER	100K0070
	01T035	HOOD	100K0070
ELECTRICAL SYSTEM	01T036	BATTERY	100K0070
ENGINE	01T037	MUFFLER	100K0070
FUEL SYSTEM	01T038	FUEL TANK	100K0070
	01T039	FUEL FILTER	100K0070
ENGINE	01T040	AIR CLEANER	100K0070
	01T041	DECOMPRESS WIRE/ENGINE STOP WIRE	100K0070
ELECTRICAL SYSTEM	01T042	PANEL	100K0070
	01T043	PANEL SWITCH	100K0070
	01T044	LIGHT	100K0070
FRONT AXLE/FRONT WHEEL	01T055	FRONT AXLE ARM	100K0070
	01T056	BEVEL GEAR CASE	100K0070
	01T057	FRONT AXLE CASE	100K0070
	01T058	KNUCKLE ARM	100K0070
	01T059	FRONT DIFFERENTIAL	100K0070
	01T060	BEVEL GEAR	100K0070
	01T061	DRIVE SHAFT	100K0070
	01T06201	FRONT WHEEL (6-12)	100K0070
	01T06202	FRONT WHEEL (20.5-8.00 X 10)	100K0070
HYDRAULIC SYSTEM	01T063	3-POINT LINKAGE	100K0070
FUEL SYSTEM	01T064	FUEL FILTER	100K0070
HYDRAULIC SYSTEM	01T066	CONTROL VALVE	100K0070
ACCESSORIES	01T067	ACCESSORIES AND SERVICE PARTS	100K0070

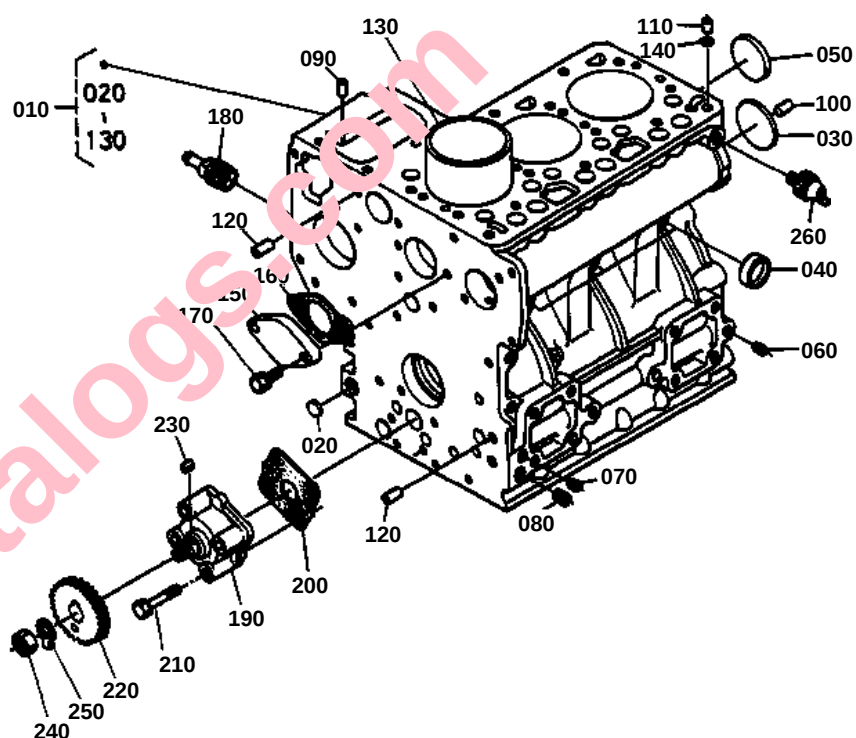

[Buy now](#)

[Kubota B7200HSTD Tractor Parts Manual PDF](#)

[With Instant Download](#)