

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:


The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

MyTractorForum.com

ALL PRODUCT INDEX
B7300HSD

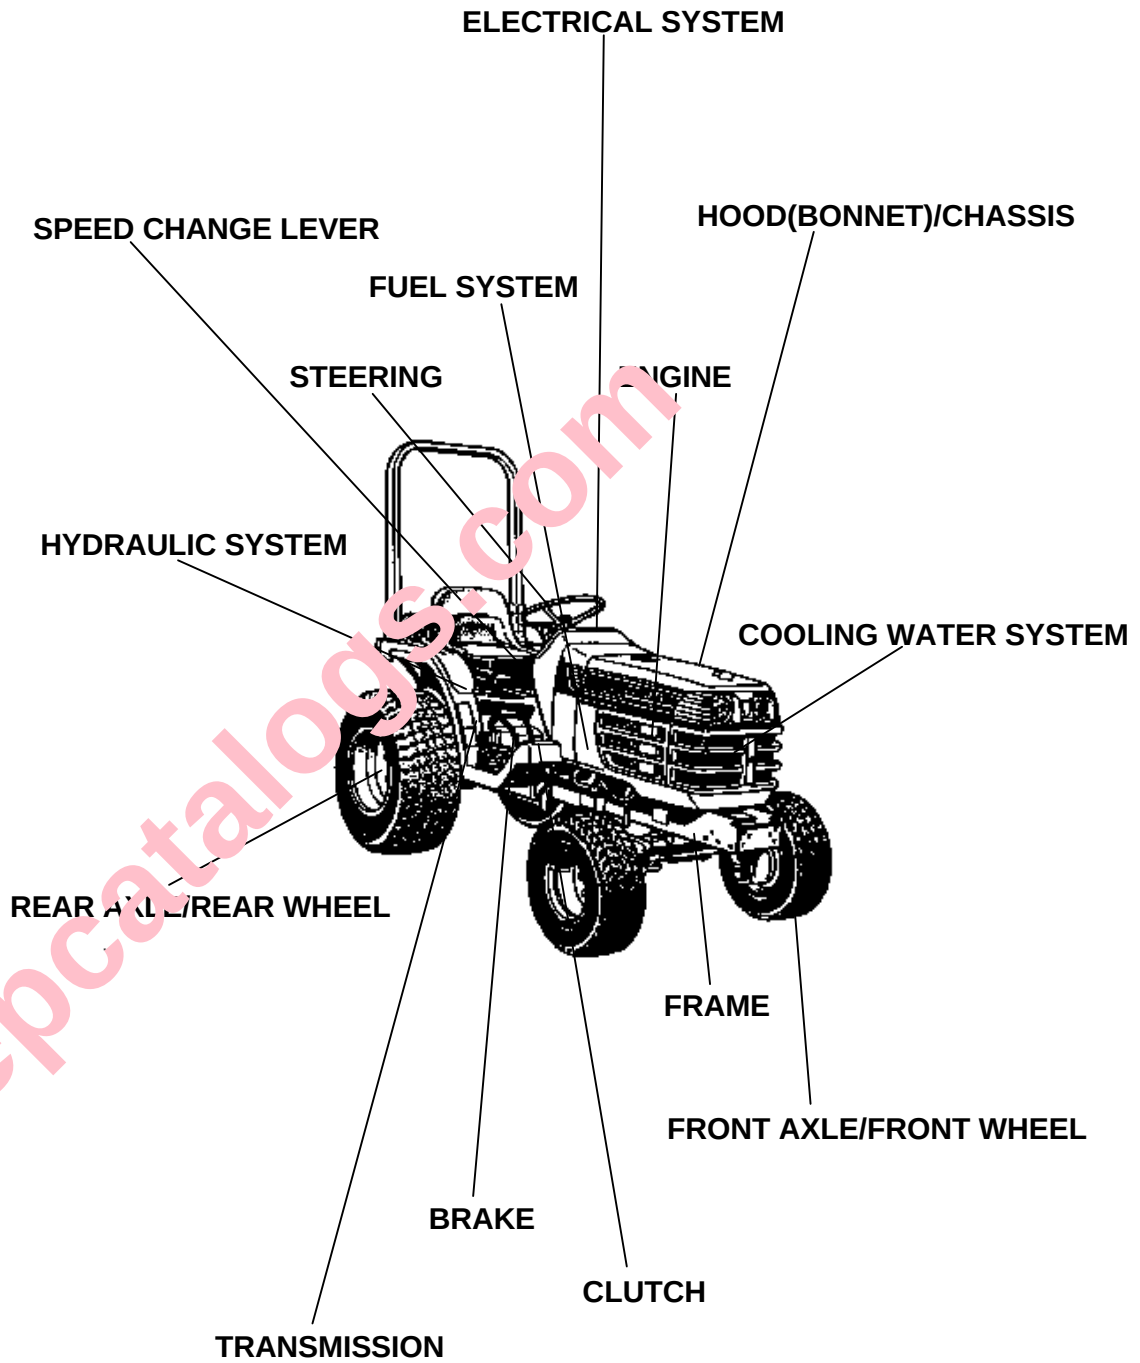

LABELS
ACCESSORIES


MYTRACTORFORUM.COM

Item	Part No.	Description	Book
ENGINE	01T001	CRANKCASE	100K0314
	01T002	OIL PAN	100K0314
	01T003	PISTON/CRANKSHAFT	100K0314
	01T004	MAIN BEARING CASE	100K0314
	01T005	FLYWHEEL	100K0314
	01T006	CYLINDER HEAD	100K0314
	01T007	VALVE AND ROCKER ARM	100K0314
	01T008	NOZZLE HOLDER AND GLOW PLUG	100K0314
	01T009	NOZZLE HOLDER [COMPONENT PARTS]	100K0314
	01T010	HEAD COVER	100K0314
	01T011	INLET MANIFOLD	100K0314
	01T013	EXHAUST MANIFOLD	100K0314
	01T015	CAMSHAFT	100K0314
	01T016	GEAR CASE	100K0314
	01T017	WATER PUMP	100K0314
	01T018	WATER FLANGE/THERMOSTAT	100K0314
	01T019	INJECTION PUMP	100K0314
	01T020	INJECTION PUMP [COMPONENT PARTS]	100K0314
	01T021	SPEED CONTROL PLATE	100K0314
	01T022	GOVERNOR	100K0314
	01T023	FUEL PUMP	100K0314
	01T024	LOWER GASKET KIT	100K0314
	01T025	UPPER GASKET KIT	100K0314
ELECTRICAL SYSTEM	01T034	DYNAMO	100K0314
	01T035	DYNAMO [COMPONENT PARTS]	100K0314
CLUTCH	01T041	CLUTCH	100K0314
HYDRAULIC SYSTEM	01T043	HYDRAULIC GEAR PUMP	100K0314
	01T044	HYDRAULIC GEAR PUMP [COMPONENT PARTS]	100K0314
ENGINE	02T001	AIR CLEANER	100K0314
	02T014	MUFFLER	100K0314
FUEL SYSTEM	02T026	ACCELERATOR LEVER	100K0314
	02T027	FUEL TANK	100K0314
	02T028	FUEL PIPE	100K0314
COOLING WATER SYSTEM	02T029	FUEL FILTER [COMPONENT PARTS]	100K0314
	02T030	WATER PIPE	100K0314
	02T031	RADIATOR	100K0314
	02T032	RESERVE TANK	100K0314
	02T033	FAN	100K0314
ELECTRICAL SYSTEM	02T036	STARTER	100K0314
	02T037	STARTER [COMPONENT PARTS]	100K0314
	02T038	BATTERY	100K0314
	02T039	HEAD LIGHT	100K0314
	02T040	HAZARD LIGHT/TAIL LIGHT	100K0314
	02T041	METER/SWITCH	100K0314
	02T04102	METER KIT	100K0314
	02T042	METER [COMPONENT PARTS]	100K0314
	02T043	WIRE HARNESS	100K0314
	02T045	CLUTCH ROD	100K0314
CLUTCH	02T046	CLUTCH PEDAL	100K0314
	02T047	CLUTCH HOUSING	100K0314
TRANSMISSION	02T048	CLUTCH SHAFT/PROPELLER SHAFT	100K0314
	02T049	TRANSMISSION CASE	100K0314
	02T050	DIFFERENTIAL GEAR CASE	100K0314
	02T051	HST	100K0314
	02T052	HST [COMPONENT PARTS]	100K0314
	02T053	2ND/3RD/4TH SHAFT	100K0314
	02T054	5TH SHAFT/PTO SHAFT	100K0314

Item	Part No.	Description	Book
TRANSMISSION	02T055	FRONT WHEEL DRIVE SHAFT	100K0314
	02T056	MID PTO	100K0314
SPEED CHANGE LEVER	02T057	SPEED CHANGE LEVER	100K0314
	02T058	SPEED CONTROL PEDAL	100K0314
	02T059	SPEED SET LEVER	100K0314
	02T060	RANGE GEAR SHIFT LEVER	100K0314
	02T061	PTO GEAR SHIFT LEVER	100K0314
	02T062	FRONT WHEEL DRIVE LEVER	100K0314
	02T063	REAR DIFFERENTIAL	100K0314
	02T064	DIFFERENTIAL LOCK PEDAL	100K0314
REAR AXLE/REAR WHEEL	02T065	REAR AXLE CASE	100K0314
	02T066	REAR AXLE	100K0314
	02T06701	REAR WHEEL (29 X 12.5-15)	100K0314
	02T06702	REAR WHEEL (8.3-16)	100K0314
	02T06703	REAR WHEEL (31 X 15.5-15)	100K0314
	02T068	BRAKE	100K0314
BRAKE	02T069	BRAKE PEDAL	100K0314
	02T070	PARKING BRAKE LEVER	100K0314
FRONT AXLE/FRONT WHEEL	02T071	FRONT DRIVE SHAFT	100K0314
	02T072	FRONT DIFFERENTIAL	100K0314
	02T073	FRONT AXLE CASE	100K0314
	02T074	FRONT BEVEL GEAR CASE	100K0314
	02T075	FRONT AXLE	100K0314
	02T07601	FRONT WHEEL (6-12)	100K0314
	02T07602	FRONT WHEEL (21 X 8.00-10)	100K0314
	02T077	FRAME	100K0314
FRAME STEERING	02T078	KNUCKLE ARM/TIE ROD	100K0314
	02T079	DRAG LINK	100K0314
	02T080	STEERING WHEEL	100K0314
	02T081	STEERING	100K0314
HYDRAULIC SYSTEM	02T082	STEERING [COMPONENT PARTS]	100K0314
	02T085	HYDRAULIC OIL LINE (OIL COOLER)	100K0314
	02T086	HYDRAULIC OIL LINE (T/M)	100K0314
	02T087	HYDRAULIC OIL LINE (SUCTION/DELIVERY)	100K0314
	02T088	FLOW DIVIDING VALVE [COMPONENT PARTS]	100K0314
	02T089	HYDRAULIC OIL LINE (HST)	100K0314
	02T090	OIL COOLER	100K0314
	02T091	HYDRAULIC CYLINDER CASE	100K0314
	02T092	CONTROL VALVE	100K0314
	02T093	CONTROL VALVE [COMPONENT PARTS]	100K0314
	02T094	HYDRAULIC CONTROL LEVER	100K0314
	02T095	TOP LINK	100K0314
	02T096	LOWER LINK	100K0314
	02T097	LIFT ROD	100K0314
HOOD(BONNET)/CHASSIS	02T098	HOOD (BONNET)	100K0314
	02T099	FRONT GRILLE	100K0314
	02T100	SIDE COVER	100K0314
	02T101	FENDER LH	100K0314
	02T102	FENDER RH	100K0314
	02T103	SEAT STAY	100K0314
	02T104	SEAT	100K0314
	02T105	STEP	100K0314
	02T106	ROPS	100K0314
	02T107	LABEL	100K0314
LABELS			
ACCESSORIES	02T108	ACCESSORIES AND SERVICE PARTS	100K0314

MyTractorForum.com

CRANKCASE

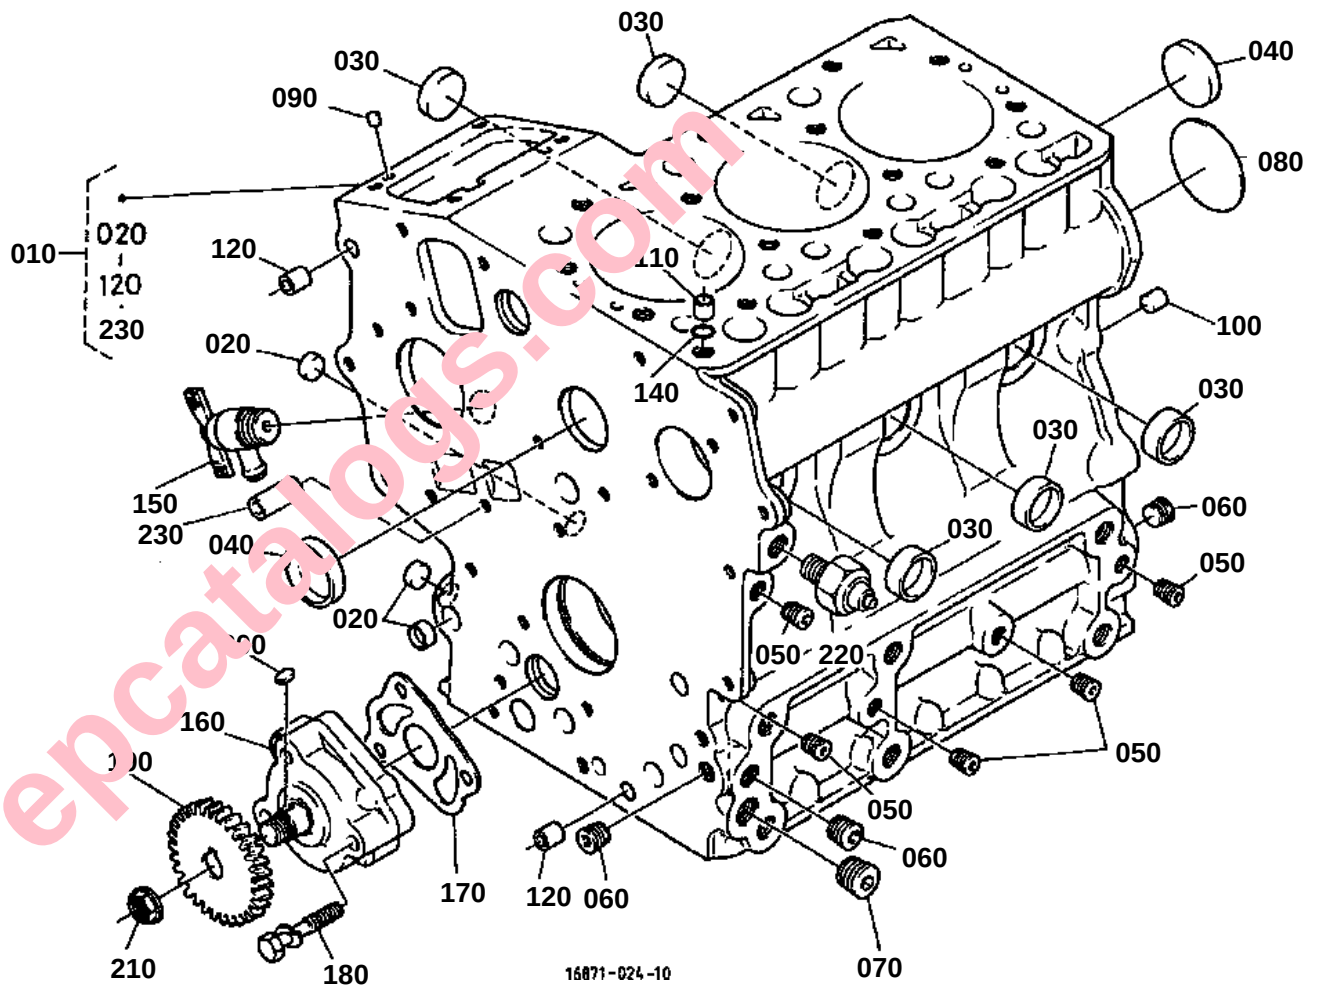

MyTractorForum.com

[Buy now](#)

[Kubota B7300HSD Tractor Parts Manual PDF](#)

[With Instant Download](#)