

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]


Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

ALL PRODUCT INDEX
B7400HSD

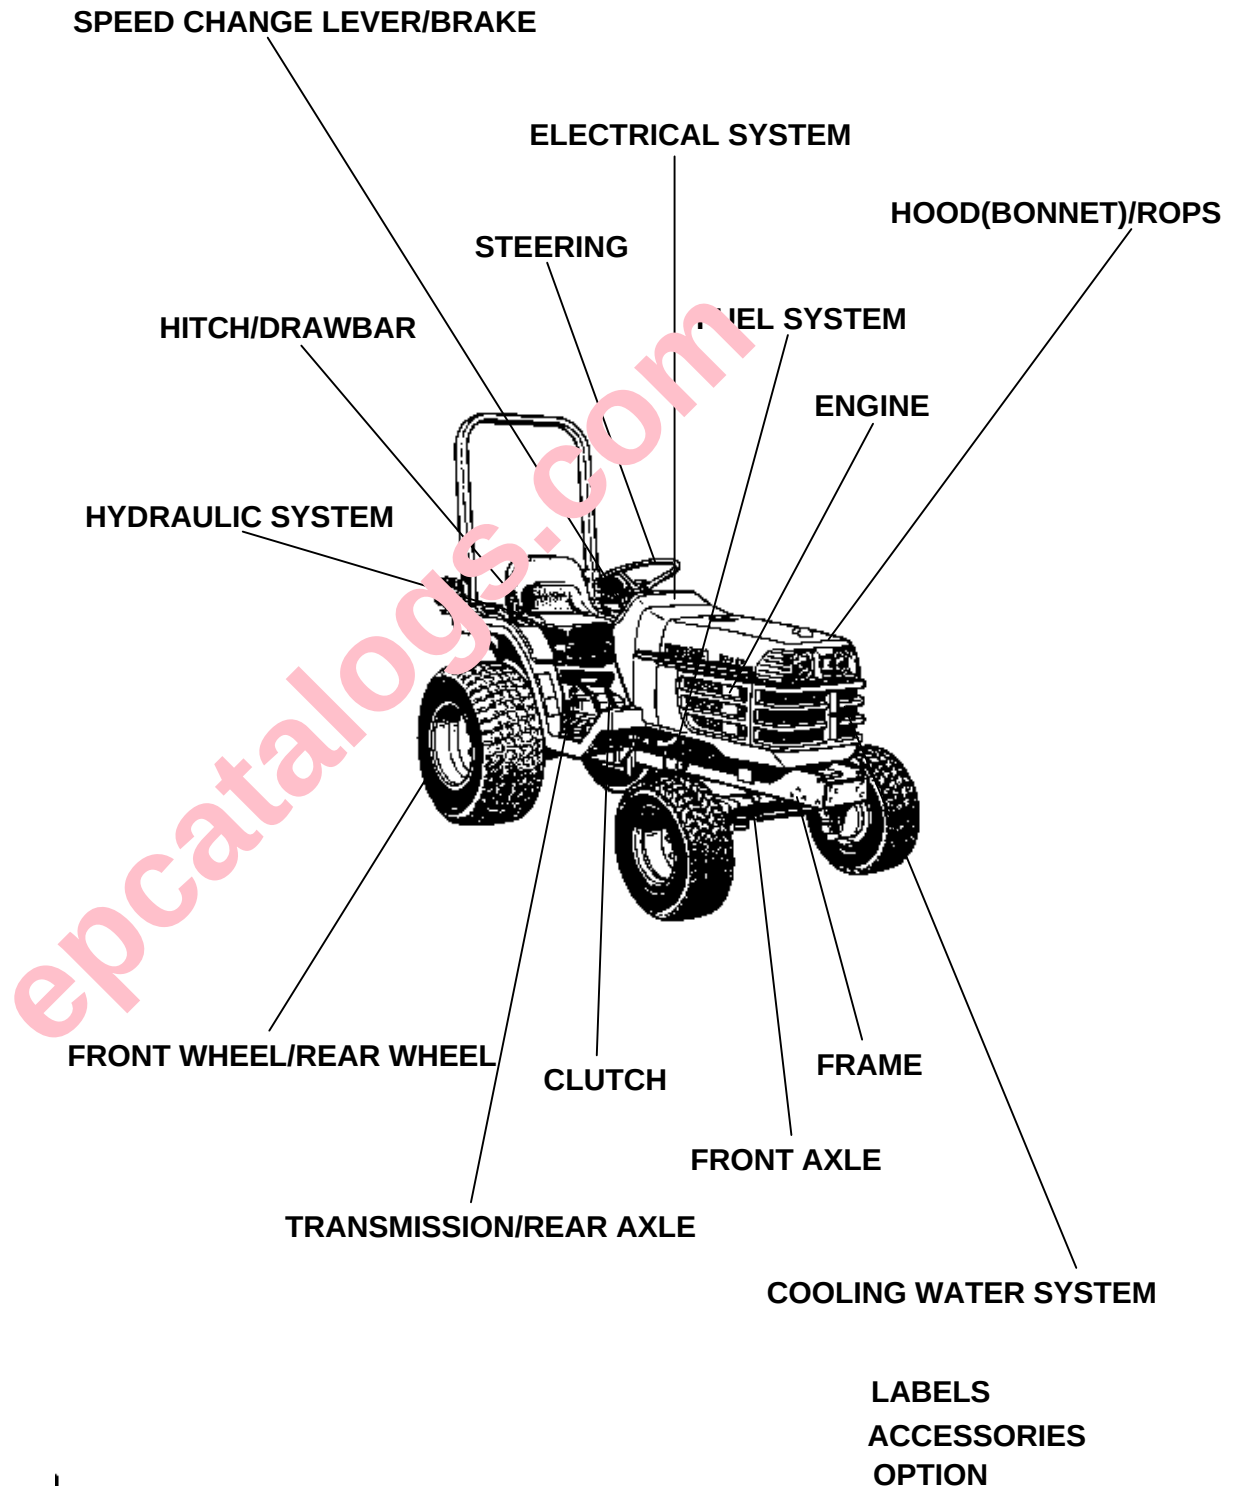

Item	Part No.	Description	Book
ENGINE	010001	CRANKCASE	100K0561
	010002	OIL PAN	100K0561
	010003	CYLINDER HEAD	100K0561
	010004	GEAR CASE	100K0561
	010005	HEAD COVER	100K0561
	010006	OIL FILTER	100K0561
	010007	DIPSTICK AND GUIDE	100K0561
	010008	OIL PUMP	100K0561
	010100	MAIN BEARING CASE	100K0561
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100K0561
	010102	PISTON AND CRANKSHAFT	100K0561
	010103	FLYWHEEL	100K0561
	010104	CLUTCH	100K0561
	010105	FUEL CAMSHAFT AND GOVERNOR SHAFT	100K0561
	010200	ENGINE STOP LEVER	100K0561
	010202	INJECTION PUMP	100K0561
	010203	INJECTION PUMP [COMPONENT PARTS]	100K0561
	010204	GOVERNOR	100K0561
	010205	SPEED CONTROL PLATE	100K0561
	010206	NOZZLE HOLDER AND GLOW PLUG	100K0561
	010207	NOZZLE HOLDER [COMPONENT PARTS]	100K0561
	010301	FUEL PUMP(MECHANICAL)	100K0561
	010400	DYNAMO AND PULLEY	100K0561
	010401	DYNAMO [COMPONENT PARTS]	100K0561
	010501	WATER FLANGE AND THERMOSTAT	100K0561
	010502	WATER PUMP	100K0561
	010600	VALVE AND ROCKER ARM	100K0561
	010601	INLET MANIFOLD	100K0561
	010602	EXHAUST MANIFOLD	100K0561
	010700	HYDRAULIC PUMP	100K0561
	010701	HYDRAULIC PUMP [COMPONENT PARTS]	100K0561
	010900	UPPER GASKET KIT	100K0561
	010901	LOWER GASKET KIT	100K0561
	010908	PISTON KIT [OPTION]	100K0561
	010603	AIR CLEANER	100K0561
	010605	MUFFLER	100K0561
	01A00101	ACCELERATOR LEVER [HST TYPE]	100K0561
FUEL SYSTEM	01A10101	FUEL TANK	100K0561
	01A11001	FUEL PIPE	100K0561
	01A130	FUEL FILTER [COMPONENT PARTS]	100K0561
COOLING WATER SYSTEM	01A40101	FAN	100K0561
	01A41001	WATER PIPE	100K0561
	01A42001	RADIATOR [EXCEPT[AU]]	100K0561
	01A42002	RADIATOR [AU]	100K0561
	01A43001	RESERVE TANK [EXCEPT[AU]]	100K0561
	01A43002	RESERVE TANK [AU]	100K0561
ELECTRICAL SYSTEM	01A51001	STOP SOLENOID	100K0561
	01A52501	STARTER	100K0561
	01A53001	STARTER [COMPONENT PARTS]	100K0561
	01A53501	BATTERY [EXCEPT[AU]]	100K0561
	01A53502	BATTERY [AU]	100K0561
	01B10101	SWITCH [HST TYPE]	100K0561
	01B11501	PANEL BOARD	100K0561
	01B12001	PANEL BOARD [COMPONENT PARTS]	100K0561
	01B301	HEAD LIGHT	100K0561
	01B302	HAZARD LIGHT	100K0561

Item	Part No.	Description	Book
ELECTRICAL SYSTEM	01B304	TAIL LIGHT	100K0561
	01B50101	ELECTRICAL WIRING [HST TYPE]	100K0561
CLUTCH	01C11001	CLUTCH ROD	100K0561
	01C301	CLUTCH PEDAL	100K0561
	01C40101	CLUTCH HOUSING	100K0561
	01C405	CLUTCH DIPSTICK AND GUIDE [HST TYPE]	100K0561
FRAME	01C41301	FRONT FRAME	100K0561
	01C41501	CENTER FRAME [HST TYPE]	100K0561
TRANSMISSION/REAR AXLE	01C42001	TRANSMISSION CASE [HST TYPE]	100K0561
	01C425	DIFFERENTIAL GEAR CASE	100K0561
	01C427	REAR AXLE CASE	100K0561
	01D00101	CLUTCH SHAFT	100K0561
	01D00501	PROPELLER SHAFT [HST TYPE]	100K0561
	01D010	HST [HST TYPE]	100K0561
	01D015	HST [COMPONENT PARTS] [HST TYPE]	100K0561
	01D10301	FRONT SHAFT [HST TYPE]	100K0561
	01D13501	PTO SHAFT [HST TYPE]	100K0561
	01D13701	MID PTO [HST TYPE]	100K0561
	01D140	REAR DIFFERENTIAL	100K0561
	01D14301	FRONT WHEEL PROPELLER SHAFT [HST TYPE]	100K0561
	01D14901	2ND SHAFT [HST TYPE]	100K0561
	01D15201	3RD SHAFT [HST TYPE]	100K0561
	01D15501	4TH SHAFT [HST TYPE]	100K0561
	01D20001	RANGE GEAR SHIFT FORK [HST TYPE]	100K0561
	01D20001	PTO GEAR SHIFT FORK [HST TYPE]	100K0561
	01D225	DIFFERENTIAL LOCK SHIFT FORK	100K0561
	01D301	REAR AXLE	100K0561
SPEED CHANGE LEVER BRAKE	01E00101	BRAKE [HST TYPE]	100K0561
	01E00501	BRAKE ROD 1 [HST TYPE]	100K0561
	01E01501	PARKING BRAKE LEVER [HST TYPE] [EXCEPT[AU]]	100K0561
	01E01502	PARKING BRAKE LEVER [HST TYPE] [AU]	100K0561
	01F030	SPEED SET LEVER [HST TYPE]	100K0561
	01F107	NEUTRAL HOLDER LINK [HST TYPE]	100K0561
	01F108	SPEED CONTROL PEDAL [HST TYPE]	100K0561
	01F110	RANGE GEAR SHIFT LEVER [HST TYPE]	100K0561
	01F113	FRONT WHEEL DRIVE LEVER	100K0561
	01F125	PTO GEAR SHIFT LEVER	100K0561
	01F143	HYDRAULIC CONTROL LEVER	100K0561
	01F201	BRAKE PEDAL	100K0561
	01F20501	DIFFERENTIAL LOCK PEDAL [HST TYPE]	100K0561
FRONT AXLE	01G105	FRONT AXLE CASE	100K0561
	01G115	FRONT DIFFERENTIAL	100K0561
	01G120	DIFFERENTIAL GEAR SHAFT	100K0561
	01G123	BEVEL GEAR CASE	100K0561
	01G125	FRONT AXLE CASE	100K0561
	01G130	FRONT AXLE	100K0561
	01G13501	FRONT DRIVE SHAFT [HST TYPE]	100K0561
STEERING	01H001	KNUCKLE ARM	100K0561
	01H003	DRAG LINK	100K0561
	01H005	TIE ROD	100K0561
	01H10101	STEERING HANDLE	100K0561
	01H10501	UNIVERSAL JOINT	100K0561
	01H110	STEERING CONTROLLER	100K0561

Item	Part No.	Description	Book
STEERING	01H115	STEERING CONTROLLER [COMPONENT PARTS]	100K0561
HYDRAULIC SYSTEM	01J20101	HYDRAULIC OIL LINE(SUCTION)	100K0561
	01J21001	HYDRAULIC OIL LINE(DELIVERY)	100K0561
	01J235	HYDRAULIC OIL LINE (HST) [HST TYPE]	100K0561
	01J24001	HYDRAULIC OIL LINE (OIL COOLER) [HST TYPE]	100K0561
	01J301	HYDRAULIC CYLINDER	100K0561
	01J310	HYDRAULIC PISTON/LIFT ARM	100K0561
	01J330	FEED BACK LEVER	100K0561
	01J405	CONTROL VALVE	100K0561
	01J410	CONTROL VALVE [COMPONENT PARTS]	100K0561
	01K101	3-POINT LINKAGE 2(LIFT ROD)	100K0561
	01K115	LOWER LINK	100K0561
	01K120	3-POINT LINKAGE 1(LOWER LINK)	100K0561
	01K125	CHECK CHAIN	100K0561
	01L105	DRAWBAR	100K0561
	01L115	HITCH	100K0561
HITCH/DRAWBAR	01L12501	PTO PROTECTOR [EXCEPT[AU]]	100K0561
	01L12502	PTO PROTECTOR [AU]	100K0561
HOOD(BONNET)/ROPS	01M10101	FRONT GRILLE [EXCEPT[AU]]	100K0561
	01M10102	FRONT GRILLE [AU]	100K0561
	01M10501	BONNET	100K0561
	01M113	PANEL COVER	100K0561
	01M11301	SIDE COVER	100K0561
	01M113001	SHUTTER PLATE [EXCEPT[AU]]	100K0561
	01M113002	SHUTTER PLATE [AU]	100K0561
	01M20701	LEVER GUIDE [HST TYPE]	100K0561
	01M21001	FENDER [EXCEPT[AU]]	100K0561
	01M21002	FENDER [AU]	100K0561
	01M212	FENDER STAY	100K0561
	01M215	FLOOR SEAT	100K0561
	01M217	SEAT SUPPORT	100K0561
	01M22501	STEP	100K0561
	01M301	ROPS	100K0561
FRONT WHEEL/REAR WHEEL	01M501	SMV EMBLEM	100K0561
	01R10101	FRONT WHEEL (6-12) [EXCEPT[AU]]	100K0561
	01R10102	FRONT WHEEL (21X8.00-10) [EXCEPT[AU]]	100K0561
	01R10105	FRONT WHEEL (6-12B) [AU]	100K0561
	01R10107	FRONT WHEEL (22X8.50-12) [AU]	100K0561
	01R11001	REAR WHEEL (8.3-16) [EXCEPT[AU]]	100K0561
	01R11003	REAR WHEEL (29X12.5-15) [EXCEPT[AU]]	100K0561
	01R11004	REAR WHEEL (31X15.5-15) [EXCEPT[AU]]	100K0561
	01R11007	REAR WHEEL (8-16) [AU]	100K0561
	01R11009	REAR WHEEL (31X13.5-15) [AU]	100K0561
LABELS	01S10101	LABEL [HST TYPE] [A]	100K0561
	01S10102	LABEL [HST TYPE] [CA]	100K0561
	01S10103	LABEL [HST TYPE] [AU]	100K0561
ACCESSORIES OPTION	01T105	ACCESSORIES AND SERVICE PARTS	100K0561
	01U805	WORKING LIGHT KIT [OPTION]	100K0561
	01U910	ROPS KIT [OPTION]	100K0561

[Buy now](#)

[Kubota B7400HSD Tractor Parts Manual PDF](#)

[With Instant Download](#)