

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:


The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

**|ALL PRODUCT INDEX
B7800HSD**

FREQUENTLY USED ITEMS

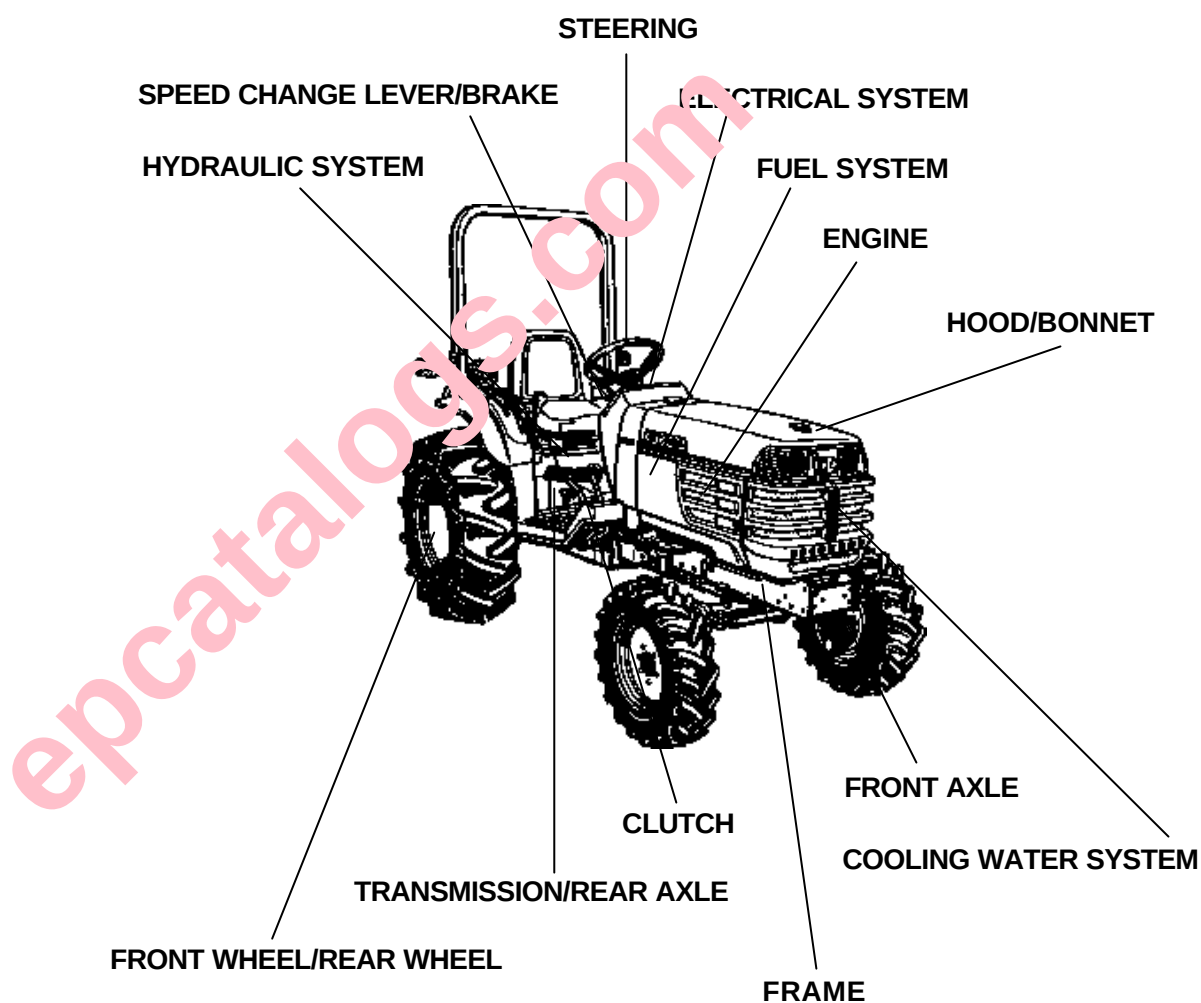

LABELS

OPTION

ACCESSORIES AND SERVICE PARTS

Item	Part No.	Description	Book
FREQUENTLY USED ITEMS ENGINE	000000	FREQUENTLY USED ITEMS	100K0716
	01000101	CRANKCASE	100K0716
	01000102	CRANKCASE	100K0716
	010002	OIL PAN	100K0716
	010003	CYLINDER HEAD	100K0716
	010004	GEAR CASE	100K0716
	01000501	HEAD COVER	100K0716
	01000502	HEAD COVER	100K0716
	010006	OIL FILTER	100K0716
	010007	DIPSTICK AND GUIDE	100K0716
	010100	MAIN BEARING CASE	100K0716
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100K0716
	010102	PISTON AND CRANKSHAFT	100K0716
	010103	FLYWHEEL	100K0716
	010105	FUEL CAMSHAFT AND GOVERNOR SHAFT	100K0716
	010200	IDLE APPARATUS	100K0716
	010202	INJECTION PUMP	100K0716
	01020401	GOVERNOR	100K0716
	01020402	GOVERNOR	100K0716
	010205	SPEED CONTROL PLATE	100K0716
	0102601	NOZZLE HOLDER AND GLOW PLUG	100K0716
	0102602	NOZZLE HOLDER AND GLOW PLUG	100K0716
	01026701	NOZZLE HOLDER [COMPONENT PARTS]	100K0716
	01026702	NOZZLE HOLDER [COMPONENT PARTS]	100K0716
	010301	FUEL PUMP(MECHANICAL)	100K0716
	010500	WATER FLANGE AND THERMOSTAT	100K0716
	010501	WATER PUMP	100K0716
	010600	VALVE AND ROCKER ARM	100K0716
	01060101	INLET MANIFOLD	100K0716
	01060102	INLET MANIFOLD	100K0716
	010602	EXHAUST MANIFOLD	100K0716
	010603	AIR CLEANER	100K0716
	010605	MUFFLER	100K0716
	010900	UPPER GASKET KIT	100K0716
	01090001	UPPER GASKET KIT	100K0716
	010901	LOWER GASKET KIT	100K0716
	01A001	ACCELERATOR LEVER	100K0716
FUEL SYSTEM	01A101	FUEL TANK	100K0716
	01A110	FUEL PIPE	100K0716
	01A130	FUEL FILTER [COMPONENT PARTS]	100K0716
COOLING WATER SYSTEM	01A401	FAN	100K0716
	01A410	WATER PIPE	100K0716
	01A420	RADIATOR	100K0716
	01A430	RESERVE TANK	100K0716
ELECTRICAL SYSTEM	01A510	STOP SOLENOID	100K0716
	01A521	DYNAMO	100K0716
	01A523	DYNAMO [COMPONENT PARTS]	100K0716
	01A525	STARTER	100K0716
	01A530	STARTER [COMPONENT PARTS]	100K0716
	01A535	BATTERY	100K0716
	01B10101	SWITCH [MID PTO TYPE]	100K0716
	01B10102	SWITCH [MID PTO TYPE]	100K0716

Item	Part No.	Description	Book
ELECTRICAL SYSTEM	01B10103	SWITCH [EXCEPT MID PTO TYPE]	100K0716
	01B10104	SWITCH [EXCEPT MID PTO TYPE]	100K0716
	01B115	PANEL BOARD	100K0716
	01B120	PANEL BOARD [COMPONENT PARTS]	100K0716
	01B301	HEAD LIGHT	100K0716
	01B302	HAZARD LIGHT	100K0716
	01B304	TAIL LIGHT	100K0716
	01B310	WINKER LAMP	100K0716
	01B501	ELECTRICAL WIRING	100K0716
CLUTCH	01C101	CLUTCH	100K0716
	01C110	CLUTCH ROD	100K0716
	01C301	CLUTCH PEDAL	100K0716
	01C401	CLUTCH HOUSING	100K0716
FRAME	01C415	CENTER FRAME	100K0716
	01C417	SUB FRAME	100K0716
TRANSMISSION/REAR AXLE	01C420	TRANSMISSION CASE	100K0716
	01C425	DIFFERENTIAL GEAR CASE	100K0716
	01C427	REAR AXLE CASE	100K0716
	01D001	CLUTCH SHAFT	100K0716
	01D005	PROPELLER SHAFT	100K0716
	01D010	HST	100K0716
	01D0101	HST [COMPONENT PARTS]	100K0716
	01D01502	HST [COMPONENT PARTS]	100K0716
	01D01503	HST [COMPONENT PARTS]	100K0716
	01D103	FRONT SHAFT	100K0716
	01D135	PTO SHAFT	100K0716
	01D13701	MID PTO [MID PTO TYPE]	100K0716
	01D13702	MID PTO [EXCEPT MID PTO TYPE]	100K0716
	01D140	REAR DIFFERENTIAL	100K0716
	01D143	FRONT WHEEL PROPELLER SHAFT	100K0716
	01D149	2ND SHAFT	100K0716
	01D152	3RD SHAFT	100K0716
	01D155	4TH SHAFT	100K0716
	01D301	REAR AXLE	100K0716
SPEED CHANGE LEVER/BRAKE	01E001	BRAKE	100K0716
	01E005	BRAKE ROD	100K0716
	01E015	PARKING BRAKE LEVER	100K0716
	01F030	SPEED SET LEVER	100K0716
	01F107	NEUTRAL HOLDER LINK	100K0716
	01F108	SPEED CONTROL PEDAL	100K0716
	01F110	RANGE GEAR SHIFT LEVER	100K0716
	01F113	FRONT WHEEL DRIVE LEVER	100K0716
	01F12501	PTO GEAR SHIFT LEVER [MID PTO TYPE]	100K0716
	01F12502	PTO GEAR SHIFT LEVER [EXCEPT MID PTO TYPE]	100K0716
	01F143	HYDRAULIC CONTROL LEVER	100K0716
	01F201	BRAKE PEDAL	100K0716
	01F205	DIFFERENTIAL LOCK PEDAL	100K0716
FRONT AXLE	01G101	FRONT AXLE FRAME	100K0716
	01G105	FRONT AXLE CASE	100K0716
	01G115	FRONT DIFFERENTIAL	100K0716
	01G120	DIFFERENTIAL GEAR SHAFT	100K0716

Item	Part No.	Description	Book
FRONT AXLE	01G123	BEVEL GEAR CASE	100K0716
	01G125	FRONT AXLE CASE	100K0716
	01G130	FRONT AXLE	100K0716
	01G135	FRONT DRIVE SHAFT	100K0716
STEERING	01H003	DRAG LINK	100K0716
	01H005	TIE ROD	100K0716
	01H101	STEERING HANDLE	100K0716
	01H105	STEERING POST	100K0716
HYDRAULIC SYSTEM	01J101	HYDRAULIC PUMP(PS)	100K0716
	01J105	HYDRAULIC PUMP(PS) [COMPONENT PARTS]	100K0716
	01J120	HYDRAULIC PUMP	100K0716
	01J125	HYDRAULIC PUMP [COMPONENT PARTS]	100K0716
	01J201	HYDRAULIC OIL LINE(SUCTION)	100K0716
	01J210	HYDRAULIC OIL LINE(DELIVERY)	100K0716
	01J215	HYDRAULIC OIL LINE(STEERING)	100K0716
	01J230	HYDRAULIC OIL LINE(T/M)	100K0716
	01J235	HYDRAULIC OIL LINE(HST)	100K0716
	01J240	HYDRAULIC OIL LINE(OIL COOLER)	100K0716
	01J245	HYDRAULIC OIL LINE(F/M)	100K0716
	01J301	HYDRAULIC CYLINDER	100K0716
	01J305	HYDRAULIC PISTON/LIFT ARM	100K0716
	01J309	FEED BACK LEVER	100K0716
	01J405	CONTROL VALVE	100K0716
	01J410	CONTROL VALVE [COMPONENT PARTS]	100K0716
	01K101	3-POINT LINKAGE 2(LIFT ROD)	100K0716
	01K115	LOWER LINK	100K0716
	01K120	3-POINT LINKAGE 1(TOP LINK)	100K0716
	01K125	CHECK CHAIN	100K0716
HOOD/BONNET	01L117	HITCH/DRAWBAR	100K0716
	01L125	PTO PROTECTOR	100K0716
	01M101	FRONT GRILLE	100K0716
	01M105	BONNET	100K0716
	01M113	PANEL COVER	100K0716
	01M120	SIDE COVER	100K0716
	01M130	SHUTTER PLATE	100K0716
	01M210	FENDER	100K0716
	01M215	FLOOR SEAT	100K0716
	01M21701	SEAT SUPPORT	100K0716
FRONT WHEEL/REAR WHEEL	01M21702	SEAT SUPPORT	100K0716
	01M225	STEP	100K0716
	01M30101	ROPS(RIGID TYPE)	100K0716
	01M30102	ROPS(FOLDABLE TYPE)	100K0716
	01M501	SMV EMBLEM	100K0716
	01R10101	FRONT WHEEL(7-12)	100K0716
	01R10102	FRONT WHEEL(23*8.50-12)	100K0716
	01R10103	FRONT WHEEL(23*8.50-14R4)	100K0716
	01R10104	FRONT WHEEL(24*8.50-14)	100K0716
	01R11001	REAR WHEEL(12.4-16)	100K0716
	01R11002	REAR WHEEL(13.6-16)	100K0716
	01R11003	REAR WHEEL(12.4-16R4)	100K0716
	01R11004	REAR WHEEL(13.6-16)	100K0716

[Buy now](#)

[Kubota B7800HSD Tractor Parts Manual PDF](#)

[With Instant Download](#)