Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

 $Q'ty \rightarrow Quanity of part used on that page.$

S.No. \rightarrow Serial number range of the equipment that this part which fit.

>= Your serial number should be greater than of equal to the number shown.

Your serial number should be lesser that on equal to the serial number shown.

 $I/C \rightarrow$ Interchangeability of part shown.

←→ The part shown will work for the older and later serial number.

The part shown is not intercan able with the other serial number.

← new for old

→ old for new

Remarks -> Notes about this part. Sometimes this may say except [FR] or [CA]

Note about Country Jodes:


The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol Country

A United States of America

CA Canada
FR France
GR Greece
PO Portugal
AU Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

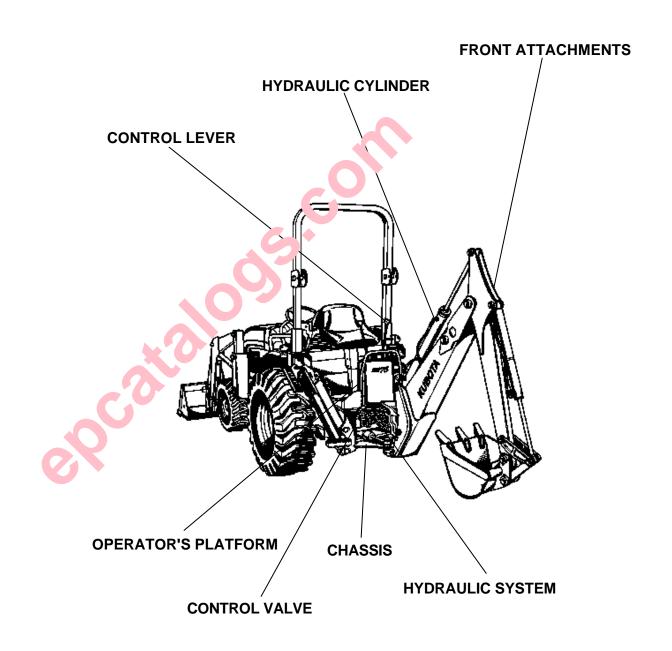


LABELS
ACCESSORIES AND SERVICE PARTS

Ref. BH75 Page 65073

Item	Part No.	Description	Book
CHASSIS	01B001	MAIN FRAME	100A0278
	01B010	SWING FRAME	100A0278
FRONT ATTACHMENTS	01B050	SWING CYLINDER	100A0278
	01B100	ВООМ	100A0278
	01B110	DIPPERSTICK	100A0278
	01B120	BUCKET LINK	100A0278
	01B150	BUCKET	100A0278
	01B160	STABILIZER ARM	100A0278
CONTROL VALVE	01B200	CONTROL VALVE	100A0278
	01B210	CONTROL VALVE [COMPONENT PARTS]	100A0278
HYDRAULIC SYSTEM	01B220	HYDRAULIC HOSE(INTAKE)	100A0278
	01B230	HYDRAULIC HOSE(SWING)	100A0278
	01B240	HYDRAULIC HOSE(BOOM/DIPPER)	100A0278
	01B250	HYDRAULIC HOSE(BUCKET)	100A0278
	01B260	HYDRAULIC HOSE(STABILIZER)	100A0278
HYDRAULIC CYLINDER	01B310	CYLINDER(SWING) [COMPONENT PARTS]	100A0278
	01B320	CYLUD. R(BOOM) [COMPONENT PARTS]	100A0278
	01B330	C' (IN ER(DIPPER) [COMPONENT PARTS]	100A0278
	01B340	VL \IDER(BUCKET) [COMPONENT PARTS]	100A0278
	01B3500	C LINDER(STABILIZER) [COMPONENT	100A0278
	0475 200	~ARTS]	40040070
	01B3、10°	CYLINDER(STABILIZER) [COMPONENT PARTS]	100A0278
OPERATOR'S PLATFORM	401 اد	COVER	100A0278
OPERATOR'S PLATFORM	V1B410	SEAT	100A0278
CONTROL LEVER)1B510	CONTROL LEVER 1	100A0278
CONTROL LEVER	01B520	CONTROL LEVER 2	100A0278
LABELS	01B320 01B710	LABEL	100A0278
ACCESSORIES AND S'LI (IC.) PARTS	01B710 01B82001		100A0278
AGGEGGGRIEG AND CELLIO, LARTO	01B82002	` '	100A0278
	01B82003	MOUNT KIT(D20)	100A0278
	01002003	MOORT RIT(D20)	10040270
6.0			

Ref. BH75 Page 65073

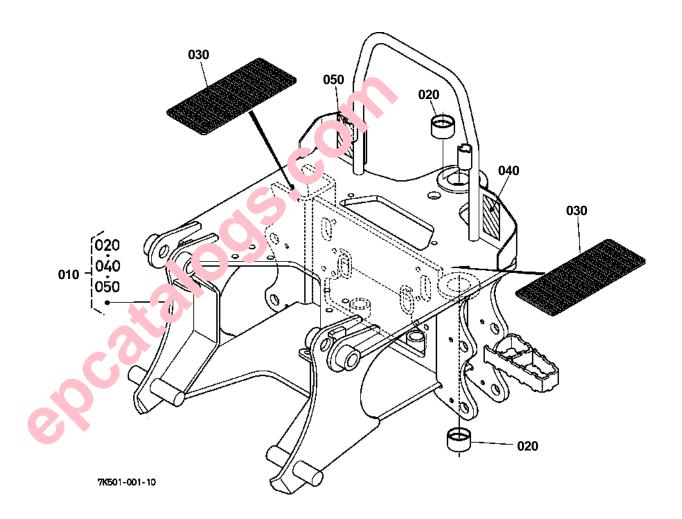

Reference:01B001 Page:1



 \leftrightarrow Interchangeable; \neq not interchangeable; \leftarrow new for old; \rightarrow old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	7K501-90110	FRAME MAIN(LABEL)	1				0	0
020	75596-12250	BUSHING	2	1			0.17	0.374
030	7K501-11510	MAT	2	1			0	0
040	75595-75240	LABEL WARNING	1	İ		•	0.007	0.0154
)50	7K501-75290	LABEL WARNING	1			•	0	0

Reference:01B001 Page:1

Buy now
Kubota BH75 Tractor Parts Manual PDF
With Instant Download