

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]


Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

ALL PRODUCT INDEX
BX22D

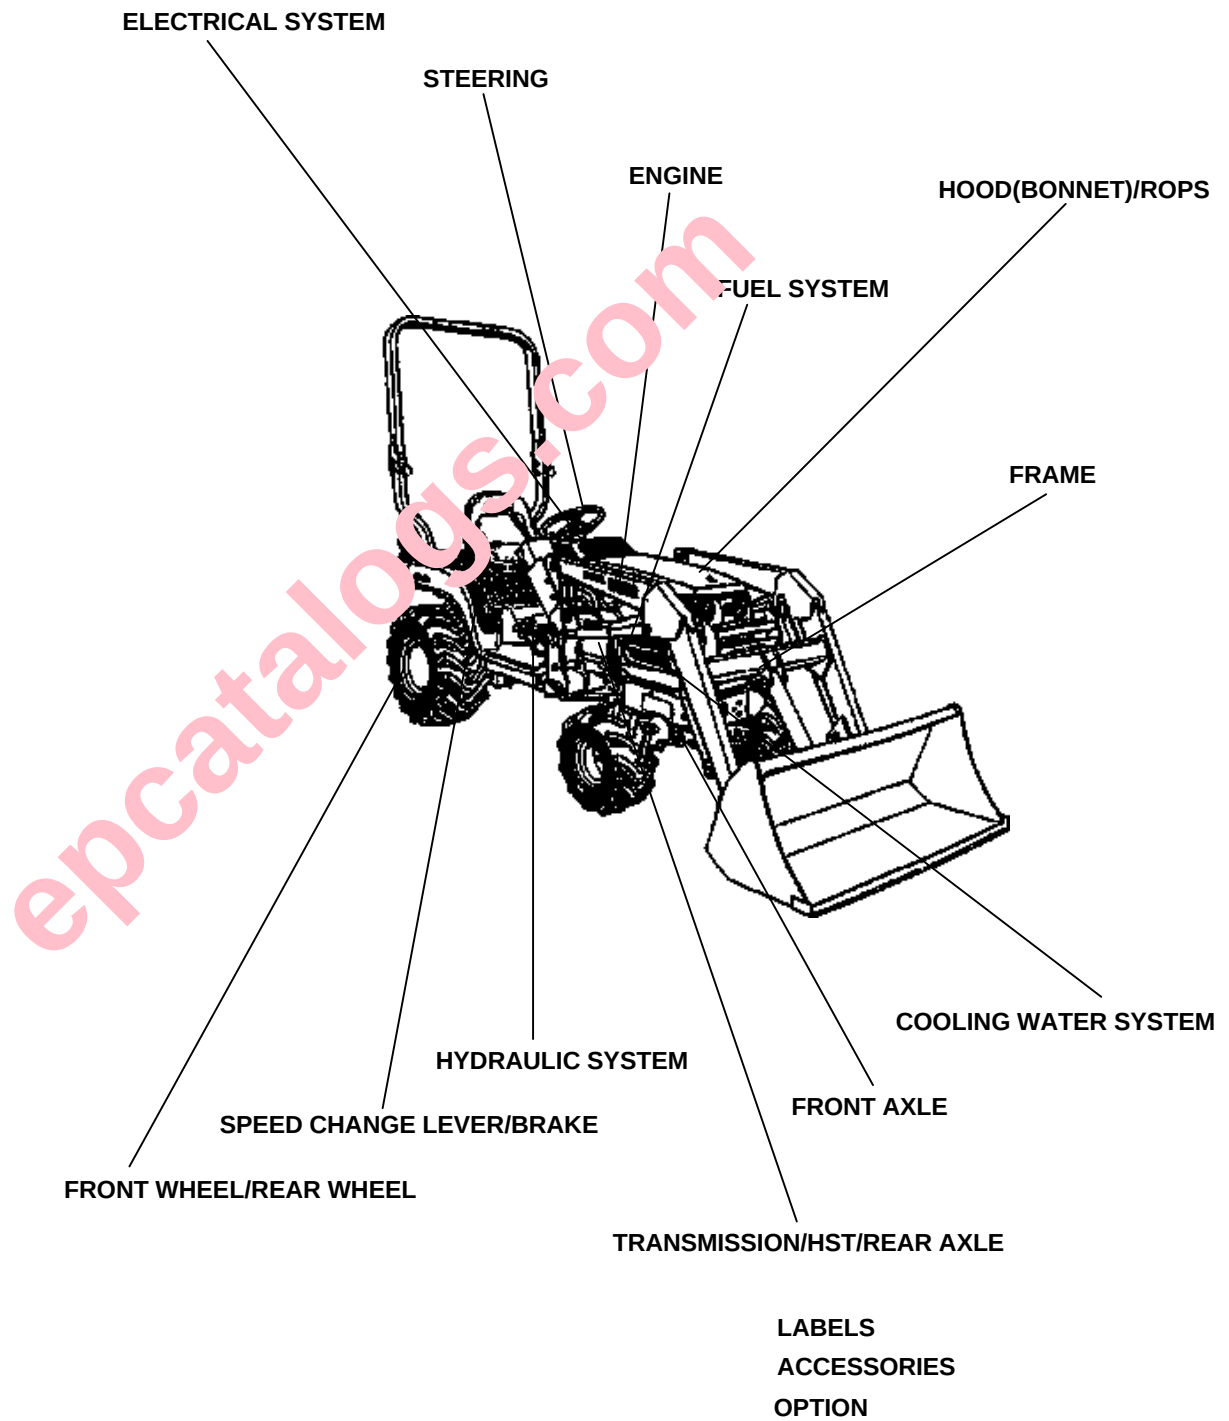

Item	Part No.	Description	Book
ENGINE	010001	CRANKCASE	100K0694
	010002	OIL PAN	100K0694
	010003	CYLINDER HEAD	100K0694
	010004	GEAR CASE	100K0694
	010005	HEAD COVER	100K0694
	010006	OIL FILTER	100K0694
	010007	DIPSTICK AND GUIDE	100K0694
	010100	MAIN BEARING CASE	100K0694
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100K0694
	010102	PISTON AND CRANKSHAFT	100K0694
	010103	FLYWHEEL	100K0694
	010105	FUEL CAMSHAFT AND GOVERNOR SHAFT	100K0694
	010200	IDLE APPARATUS	100K0694
	010201	STOP SOLENOID	100K0694
	010202	INJECTION PUMP	100K0694
	010203	INJECTION PUMP [COMPONENT PARTS]	100K0694
	010204	GOVERNOR	100K0694
	010205	SPEED CONTROL PLATE	100K0694
	010206	NOZZLE HOLDER AND GLOW PLUG	100K0694
	010207	NOZZLE HOLDER [COMPONENT PARTS]	100K0694
	010305	COVER	100K0694
	010406	CUT SWITCH/THERMOMETER AND PLUG	100K0694
	010500	WATER FLANGE AND THERMOSTAT	100K0694
	010501	WATER PUMP	100K0694
	010502	VALVE AND ROCKER ARM	100K0694
	010601	INLET MANIFOLD	100K0694
	010602	EXHAUST MANIFOLD	100K0694
	010703	HYDRAULIC PUMP COVER	100K0694
	010900	UPPER GASKET KIT [OPTION]	100K0694
	010901	LOWER GASKET KIT [OPTION]	100K0694
COOLING WATER SYSTEM	01A401	FAN	100K0694
ELECTRICAL SYSTEM	01A521	DYNAMO	100K0694
	01A523	DYNAMO [COMPONENT PARTS]	100K0694
	01A525	STARTER	100K0694
	01A530	STARTER [COMPONENT PARTS]	100K0694
HYDRAULIC SYSTEM	01J120	HYDRAULIC PUMP	100K0694
	01J125	HYDRAULIC PUMP [COMPONENT PARTS]	100K0694
ENGINE	010603	AIR CLEANER	100K0694
	010605	MUFFLER	100K0694
	01A001	ACCELERATOR LEVER	100K0694
FUEL SYSTEM	01A101	FUEL TANK	100K0694
	01A110	FUEL PIPE	100K0694
COOLING WATER SYSTEM	01A410	WATER PIPE	100K0694
	01A420	RADIATOR	100K0694
ELECTRICAL SYSTEM	01A535	BATTERY	100K0694
	01B115	PANEL BOARD	100K0694
	01B215	SWITCH/SENSOR	100K0694
	01B301	HEAD LIGHT	100K0694
	01B303	HAZARD LIGHT/TAIL LIGHT	100K0694
	01B310	WINKER LAMP	100K0694
	01B501	ELECTRICAL WIRING	100K0694
FRAME	01C413	FRONT FRAME	100K0694
	01C417	SUB FRAME	100K0694
	01C419	ENGINE SUPPORT	100K0694
TRANSMISSION/HST/REAR AXLE	01C420	TRANSMISSION CASE	100K0694
	01C427	REAR AXLE CASE	100K0694

Item	Part No.	Description	Book
TRANSMISSION/HST/REAR AXLE	01D001	CLUTCH SHAFT/OUTPUT SHAFT	100K0694
	01D005	PROPELLER SHAFT	100K0694
	01D010	HST	100K0694
	01D015	HST [COMPONENT PARTS]	100K0694
	01D107	RANGE GEAR SHAFT	100K0694
	01D135	PTO SHAFT	100K0694
	01D137	MID PTO	100K0694
	01D140	REAR DIFFERENTIAL	100K0694
	01D141	FWD IDLE SHAFT	100K0694
	01D142	GP IDLE SHAFT	100K0694
	01D143	FRONT WHEEL PROPELLER SHAFT	100K0694
	01D217	RANGE GEAR SHIFT FORK	100K0694
	01D220	PTO GEAR SHIFT FORK	100K0694
	01D222	PTO GEAR SHIFT ARM	100K0694
	01D225	DIFFERENTIAL LOCK SHIFT FORK	100K0694
	01D301	REAR AXLE	100K0694
SPEED CHANGE LEVER/BRAKE	01E001	BRAKE	100K0694
	01F107	NEUTRAL HOLDER LINK	100K0694
	01F108	SPEED CONTROL PEDAL	100K0694
	01F110	RANGE GEAR SHIFT LEVER	100K0694
	01F113	FRONT WHEEL DRIVE LEVER	100K0694
	01F122	PTO SELECT LEVER	100K0694
	01F125	PTO GEAR SHIFT LEVER	100K0694
	01F143	HYDRAULIC CONTROL LEVER	100K0694
	01F201	BRAKE PEDAL	100K0694
	01F205	DIFFERENTIAL LOCK PEDAL	100K0694
FRONT AXLE	01G110	FRONT DIFFERENTIAL CASE	100K0694
	01G115	FRONT DIFFERENTIAL	100K0694
	01G120	DIFFERENTIAL GEAR SHAFT	100K0694
	01G125	FRONT AXLE CASE	100K0694
	01G130	FRONT AXLE	100K0694
STEERING	01H101	STEERING HANDLE	100K0694
	01H110	STEERING CONTROLLER	100K0694
	01H120	STEERING LINKAGE	100K0694
	01H122	STEERING CYLINDER [COMPONENT PARTS]	100K0694
HYDRAULIC SYSTEM	01J201	HYDRAULIC OIL LINE(SUCTION)	100K0694
	01J210	HYDRAULIC OIL LINE(DELIVERY)	100K0694
	01J215	HYDRAULIC OIL LINE(STEERING)	100K0694
	01J301	HYDRAULIC CYLINDER	100K0694
	01J310	HYDRAULIC PISTON/LIFT ARM	100K0694
	01J405	CONTROL VALVE	100K0694
	01J410	CONTROL VALVE [COMPONENT PARTS]	100K0694
	01K114	TOP LINK	100K0694
	01K115	LOWER LINK	100K0694
	01K116	LIFT ROD	100K0694
HOOD(BONNET)/ROPS	01K123	TOP LINK BRACKET/FENDER BRACKET	100K0694
	01K130	MOWER REAR LINK RH	100K0694
	01K131	MOWER REAR LINK LH	100K0694
	01L125	PTO PROTECTOR	100K0694
	01M100	FRONT GUARD	100K0694
	01M102	FRONT GLILLE SUPPORT	100K0694
	01M105	BONNET	100K0694
	01M110	BONNET SIDE	100K0694
	01M135	CENTER PILLAR	100K0694
	01M201	PANEL FRAME	100K0694
	01M210	FENDER	100K0694

Item	Part No.	Description	Book
HOOD(BONNET)/ROPS	01M217	SEAT SUPPORT	100K0694
	01M220	SEAT	100K0694
	01M225	STEP	100K0694
	01M301	ROPS	100K0694
	01M501	SMV EMBLEM	100K0694
FRONT WHEEL/REAR WHEEL	01R10101	FRONT WHEEL (18*8.50-8)	100K0694
	01R10102	FRONT WHEEL (18*8.50-8)	100K0694
	01R11001	REAR WHEEL (26*12.00-12)	100K0694
	01R11002	REAR WHEEL (26*12.00-12)	100K0694
LABELS	01S10201	LABEL (FRONT) [ENGLISH]	100K0694
	01S10202	LABEL (FRONT) [FRENCH]	100K0694
	01S10301	LABEL (REAR) [ENGLISH]	100K0694
	01S10302	LABEL (REAR) [FRENCH]	100K0694
ACCESSORIES OPTION	01T105	ACCESSORIES AND SERVICE PARTS	100K0694
	01U800	ALTERNATOR KIT [OPTION]	100K0694
	01U802	ALTERNATOR [COMPONENT PARTS] [OPTION]	100K0694
	01U805	WARNING LIGHT KIT [OPTION]	100K0694

[Buy now](#)

[Kubota BX22D Tractor Parts Manual PDF](#)

[With Instant Download](#)