

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:


The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

ALL PRODUCT INDEX
BX23D

FREQUENTLY USED ITEMS

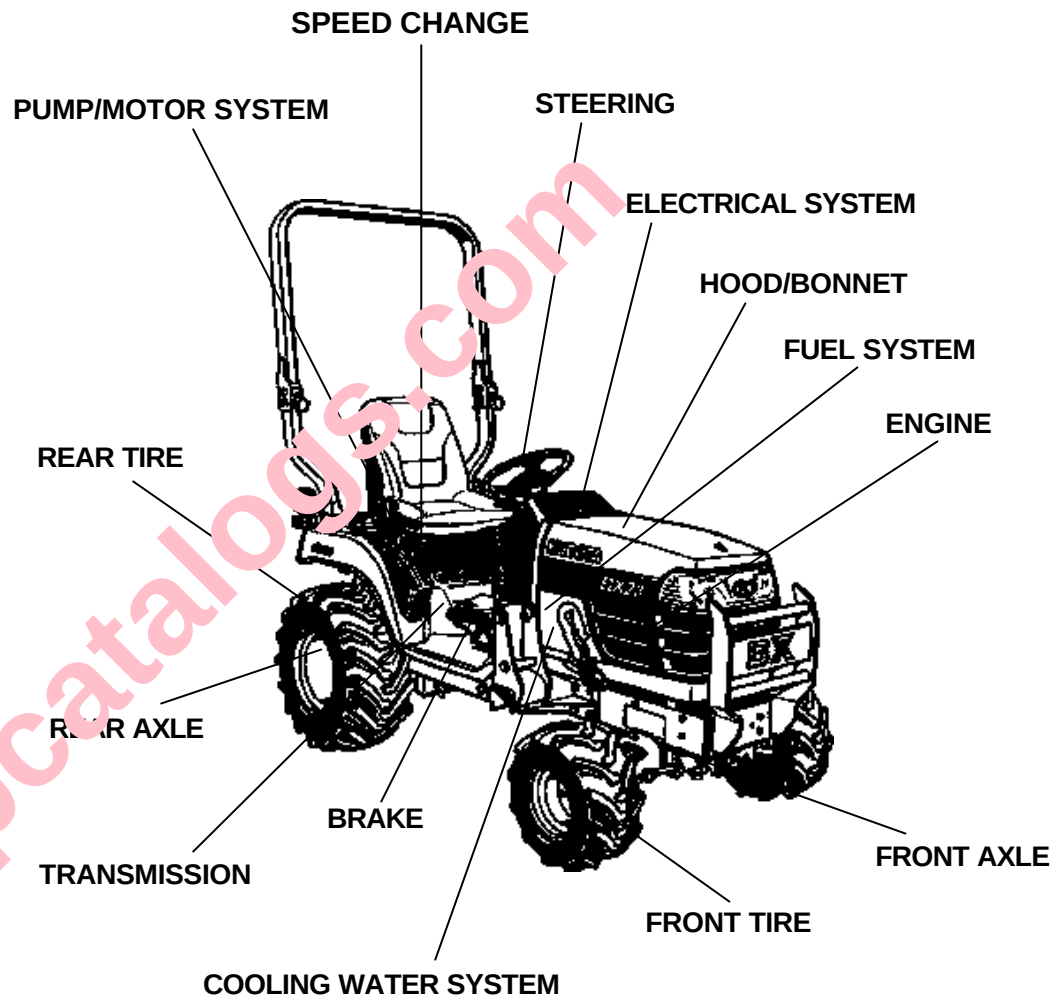

TOP LINK/TOP LINK BRACKET/PTO PROTECTOR

LABELS

ACCESSORIES AND SERVICE PARTS

OPTION

Item	Part No.	Description	Book
FREQUENTLY USED ITEMS ENGINE	000000	FREQUENTLY USED ITEMS	100K0805
	010001	CRANKCASE	100K0805
	01000101	CRANKCASE	100K0805
	010002	OIL PAN	100K0805
	010003	CYLINDER HEAD	100K0805
	010004	GEAR CASE	100K0805
	010005	HEAD COVER	100K0805
	01000501	HEAD COVER	100K0805
	010006	OIL FILTER	100K0805
	010007	DIPSTICK AND GUIDE	100K0805
	010100	MAIN BEARING CASE	100K0805
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100K0805
	010102	PISTON AND CRANKSHAFT	100K0805
	010103	FLYWHEEL	100K0805
	010105	FUEL CAMSHAFT AND GOVERNOR SHAFT	100K0805
	010201	IDLE APPARATUS	100K0805
	010202	INJECTION PUMP	100K0805
	010204	GOVERNOR	100K0805
	010205	SPEED CONTROL PLATE	100K0805
	010206	NOZZLE HOLDER AND GLOW PLUG	100K0805
	01020601	NOZZLE HOLDER AND GLOW PLUG	100K0805
	010207	NOZZLE HOLDER [COMPONENT PARTS]	100K0805
	01020701	NOZZLE HOLDER [COMPONENT PARTS]	100K0805
	010305	COVER	100K0805
	010406	OIL SWITCH/THERMOMETER AND PLUG	100K0805
	010500	WATER FLANGE AND THERMOSTAT	100K0805
	010501	WATER PUMP	100K0805
	010600	VALVE AND ROCKER ARM	100K0805
	010601	INLET MANIFOLD	100K0805
	01060101	INLET MANIFOLD	100K0805
	010602	EXHAUST MANIFOLD	100K0805
	010603	AIR CLEANER	100K0805
	010605	MUFFLER	100K0805
	010703	HYDRAULIC PUMP COVER	100K0805
	010900	UPPER GASKET KIT	100K0805
	010901	LOWER GASKET KIT	100K0805
	01A001	ACCELERATOR LEVER	100K0805
FUEL SYSTEM	01A101	FUEL TANK	100K0805
	01A110	FUEL PIPE	100K0805
COOLING WATER SYSTEM	01A401	FAN	100K0805
	01A410	WATER PIPE	100K0805
	01A420	RADIATOR	100K0805
ELECTRICAL SYSTEM	01A510	STOP SOLENOID	100K0805
	01A521	DYNAMO	100K0805
	01A523	DYNAMO [COMPONENT PARTS]	100K0805

Item	Part No.	Description	Book
ELECTRICAL SYSTEM	01A525	STARTER	100K0805
	01A530	STARTER [COMPONENT PARTS]	100K0805
	01A535	BATTERY	100K0805
	01B115	PANEL BOARD	100K0805
	01B215	SWITCH/SENSOR	100K0805
	01B301	HEAD LIGHT	100K0805
	01B303	HAZARD LIGHT/TAIL LIGHT	100K0805
	01B310	WINKER LAMP	100K0805
	01B501	ELECTRICAL WIRING	100K0805
	01C413	FRONT FRAME	100K0805
FRONT AXLE	01C417	SUB FRAME	100K0805
TRANSMISSION	01C419	ENGINE SUPPORT	100K0805
	01C420	TRANSMISSION CASE	100K0805
	01C427	REAR AXLE CASE	100K0805
	01D001	CLUTCH SHAFT/OUTPUT SHAFT	100K0805
	01D005	PROPELLER SHAFT	100K0805
	01D010	HST	100K0805
	01D015	HST [COMPONENT PARTS]	100K0805
	01D017	RANGE GEAR SHAFT	100K0805
	01D0135	PTO SHAFT	100K0805
	01D0137	MID PTO	100K0805
SPEED CHANGE	01D0140	REAR DIFFERENTIAL	100K0805
	01D0141	FWD IDLE SHAFT	100K0805
	01D0142	GP IDLE SHAFT	100K0805
	01D0143	FRONT WHEEL PROPELLER SHAFT	100K0805
	01D0217	RANGE GEAR SHIFT FORK	100K0805
	01D0220	PTO GEAR SHIFT FORK	100K0805
	01D0222	PTO GEAR SHIFT ARM	100K0805
	01D0225	DIFFERENTIAL LOCK SHIFT FORK	100K0805
	01D0301	REAR AXLE	100K0805
	01E001	BRAKE	100K0805
REAR AXLE	01F107	NEUTRAL HOLDER LINK	100K0805
BRAKE	01F108	SPEED CONTROL PEDAL	100K0805
SPEED CHANGE	01F110	RANGE GEAR SHIFT LEVER	100K0805
	01F113	FRONT WHEEL DRIVE LEVER	100K0805
	01F122	PTO SELECT LEVER	100K0805
	01F125	PTO GEAR SHIFT LEVER	100K0805
	01F143	HYDRAULIC CONTROL LEVER	100K0805
	01F201	BRAKE PEDAL	100K0805
	01F205	DIFFERENTIAL LOCK PEDAL	100K0805
	01G110	FRONT DIFFERENTIAL CASE	100K0805
	01G115	FRONT DIFFERENTIAL	100K0805
	01G120	DIFFERENTIAL GEAR SHAFT	100K0805
PUMP/MOTOR SYSTEM	01G125	FRONT AXLE CASE	100K0805
BRAKE	01G130	FRONT AXLE	100K0805
REAR AXLE	01H101	STEERING HANDLE	100K0805
FRONT AXLE	01H110	STEERING CONTROLLER	100K0805
	01H120	STEERING LINKAGE	100K0805
	01H122	STEERING CYLINDER	100K0805
		[COMPONENT PARTS]	

Item	Part No.	Description	Book
PUMP/MOTOR SYSTEM	01J120	HYDRAULIC PUMP	100K0805
	01J125	HYDRAULIC PUMP [COMPONENT PARTS]	100K0805
	01J201	HYDRAULIC OIL LINE(SUCTION)	100K0805
	01J210	HYDRAULIC OIL LINE(DELIVERY)	100K0805
	01J215	HYDRAULIC OIL LINE(STEERING)	100K0805
	01J301	HYDRAULIC CYLINDER	100K0805
	01J310	HYDRAULIC PISTON/LIFT ARM	100K0805
	01J405	CONTROL VALVE	100K0805
	01J410	CONTROL VALVE [COMPONENT PARTS]	100K0805
TOP LINK/TOP LINK BRACKET/PTO PROTECTOR	01K114	TOP LINK	100K0805
	01K115	LOWER LINK	100K0805
	01K116	LIFT ROD	100K0805
	01K123	TOP LINK BRACKET/FENDER BRACKET	100K0805
	01K124	MOWER REAR LINK RH	100K0805
HOOD/BONNET	01L131	MOWER REAR LINK LH	100K0805
	01L125	PTO PROTECTOR	100K0805
	01M100	FRONT GUARD	100K0805
	01M102	FRONT GLILLE SUPPORT	100K0805
	01M105	BONNET	100K0805
	01M110	BONNET SIDE	100K0805
	01M135	CENTER PILLAR	100K0805
	01M201	PANEL FRAME	100K0805
	01M210	FENDER	100K0805
	01M217	SEAT SUPPORT	100K0805
	01M220	SEAT	100K0805
	01M225	STEP	100K0805
	01M301	ROPS	100K0805
	01M501	SMV EMBLEM	100K0805
FRONT TIRE	01R10101	FRONT WHEEL(18*8.50-8)	100K0805
	01R10102	FRONT WHEEL(18*8.50-8)	100K0805
REAR TIRE	01R11001	REAR WHEEL(26*12.00-12)	100K0805
	01R11002	REAR WHEEL(26*12.00-12)	100K0805
LABELS	01S10201	LABEL(FRONT) [ENGLISH]	100K0805
	01S10202	LABEL(FRONT) [FRENCH]	100K0805
	01S10301	LABEL(REAR) [ENGLISH]	100K0805
	01S10302	LABEL(REAR) [FRENCH]	100K0805
ACCESSORIES AND SERVICE PARTS	01T105	ACCESSORIES AND SERVICE PARTS	100K0805
OPTION	01U800	ALTERNATOR KIT [OPTION]	100K0805
	01U802	ALTERNATOR [COMPONENT PARTS] [OPTION]	100K0805
	01U805	WORKING LIGHT KIT [OPTION]	100K0805
	01U980	SPACER KIT [OPTION]	100K0805

[Buy now](#)

[Kubota BX23D Tractor Parts Manual PDF](#)

[With Instant Download](#)