

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]


Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.


ALL PRODUCT INDEX
L175

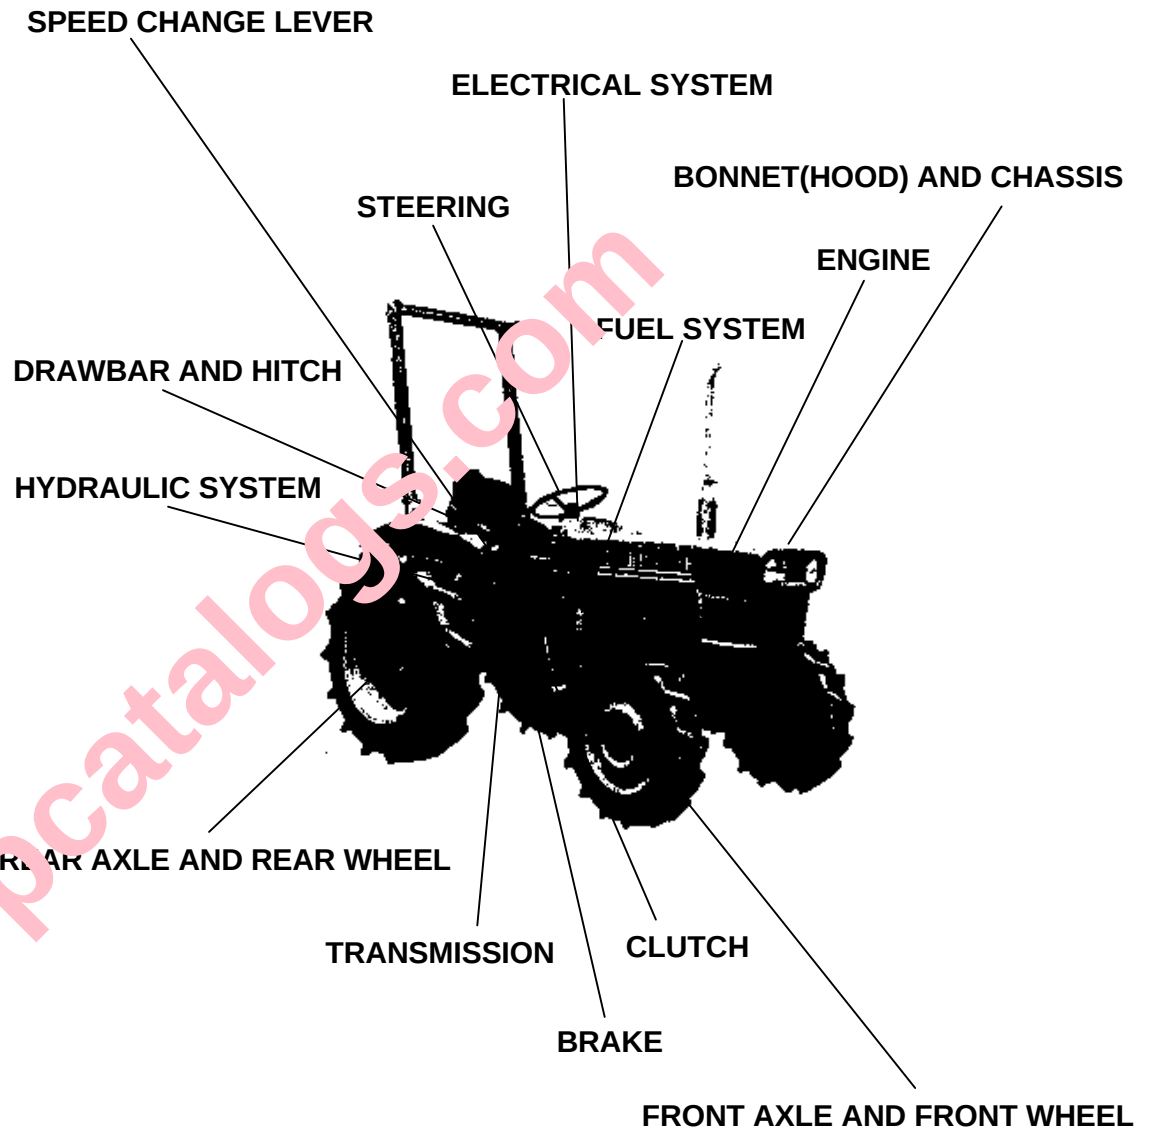

ACCESSORIES

Item	Part No.	Description	Book
ENGINE	0101	CRANK CASE	100K0133
	0102	GEAR CASE [A]	100K0133
	0104	VALVE HEAD COVER ROCKER ARM	100K0133
	0105	CRANK SHAFT	100K0133
	0106	CAM SHAFT	100K0133
	0107	FUEL CAMSHAFT	100K0133
	0108	BREATHER INJECTION PUMP	100K0133
	0109	COOLING FAN RADIATOR [A]	100K0133
	0112	AIR CLEANER MUFFLER [A]	100K0133
	0133	STARTER	100K0133
	0134	FUEL INJECTION PUMP	100K0133
	0135	GENERATOR	100K0133
	0136	OIL FILTER	100K0133
	0137	NOZZLE	100K0133
FRONT AXLE AND FRONT WHEEL	0114	FRONT WHEEL	100K0133
	0115	FRONT AXLE	100K0133
CLUTCH	0116	CLUTCH HOUSING MISSION CASE	100K0133
	0117	CLUTCH PEDAL	100K0133
STEERING	0118	STEERING	100K0133
SPEED CHANGE LEVER	0119	HAND ACCEL	100K0133
BONNET(HOOD) AND CHASSIS AND CANOPY	0120	HOOD	100K0133
	0121	SEAT FENDER [A]	100K0133
TRANSMISSION	0123	TRANSMISSION GEAR	100K0133
	0124	DIFFERENTIAL [A]	100K0133
SPEED CHANGE LEVER	0126	SPEED CHANGE	100K0133
REAR AXLE AND REAR WHEEL	0127	REAR WHEEL SHAFT	100K0133
BRAKE	0128	BRAKE	100K0133
FUEL SYSTEM	0129	FUEL TANK	100K0133
HYDRAULIC SYSTEM	0130	HYDRAULIC	100K0133
	0131	HYDRAULIC	100K0133
DRAWBAR AND HITCH	0132	3-POINT LINKAGE	100K0133
ELECTRICAL SYSTEM	0138	ELECTRICAL	100K0133
ACCESSORIES	0139	ACCESSORIES AND SERVICE PARTS	100K0133

CRANK CASE

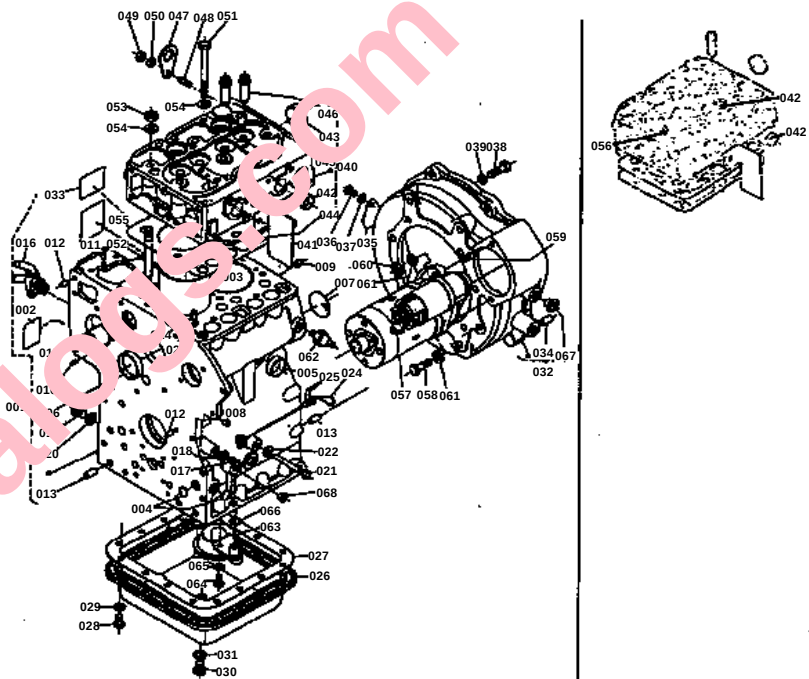



CRANK CASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	15222-01010	ASSY CRANK CASE	1				0	0
002	15103-94590	LABEL DRAIN	1				0.001	0.0022
003	15221-02314	LINER CYLINDER	2			HONE IINER AFTER INSERTING IN CRANKCASE	0	0
004	06311-75015	PLUG BELCH	3				0.002	0.0044
005	15221-03383	PLUG	3				0	0
006	15221-03392	PLUG	2				0	0
007	06311-75045	PLAG BELCH	1				0.026	0.0572
008	15221-33630	PLUG PIN	2				0.001	0.0022
009	15221-33640	PLUG	1				0.003	0.0066
010	05012-00408	PIN	2				0.001	0.0022
011	05012-00609	PIN	2				0.003	0.0066
012	05012-00612	PIN	2				0.003	0.0066
013	05012-01018	PIN	3				0.012	0.0264
014	15221-33650	PIN PIPE	1				0.004	0.0088
015	15221-72842	PIPE WATER 3	1				0	0
016	14412-73110	ASSY COCK DRAIN	1				0.09	0.198
017	15221-33610	PLUG	3				0.009	0.0198
018	15021-33660	GASKET	3				0.001	0.0022
019	15221-33752	PLAG	1				0	0
020	15109-33660	GASKET	1				0.001	0.0022
021	15221-04552	BOLT KNOCK	1				0	0
022	15021-33660	GASKET	1				0.001	0.0022
023	15221-33700	O RING	1				0.001	0.0022
024	15221-36413	GALVE OIL	1				0	0
025	04811-00050	PLUG	2				0.001	0.0022
026	15221-01612	COVER OIL	1				0	0
027	15221-01622	GASKET OIL COVER	1				0	0
028	01053-50812	BOLT	16				0.011	0.0242
029	04512-00080	WASHER LOCK	16				0	0
030	15221-33752	PLUG	1				0	0
031	15109-33660	GASKET	1				0.001	0.0022
032	34159-14183	ASSY HOUSING FLYWHEEL	1				0	0
033	15103-94590	LABEL	1				0.001	0.0022
034	05012-01018	PIN	2				0.012	0.0264
035	31220-14172	COVER	1				0	0
036	01053-50812	BOLT	1				0.009	0.0198
037	04512-00080	WASHER LOCK	1				0	0
038	01073-51030	BOLT	11				0.028	0.0616
039	04512-00100	WASHER LOCK	11				0	0
040	15221-03024	ASSY HEAD CYLINDER	1				0	0
041	34150-18070	PLATE BAFFLE 2	1				0.045	0.099
042	15221-03373	PLUG	6	<=3439			0	0
042	15221-03373	PLUG	2	>=3440			0	0
043	15221-03493	PLUG	1				0	0
044	15131-01380	PLUG	2				0.001	0.0022
045	15221-13585	GUIDE INLET VALVE	2			REAM QUIDE AFTER INSERTING IN HEAD	0	0
046	15601-13560	GUIDE EXHAUST VALVE	2	>=10584			0	0
047	15221-01750	HOOK ENGINE	2				0.04	0.088

[Buy now](#)

[Kubota L175 Tractor Parts Manual PDF](#)

[With Instant Download](#)