

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]

 
Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

ALL PRODUCT INDEX
L245DT



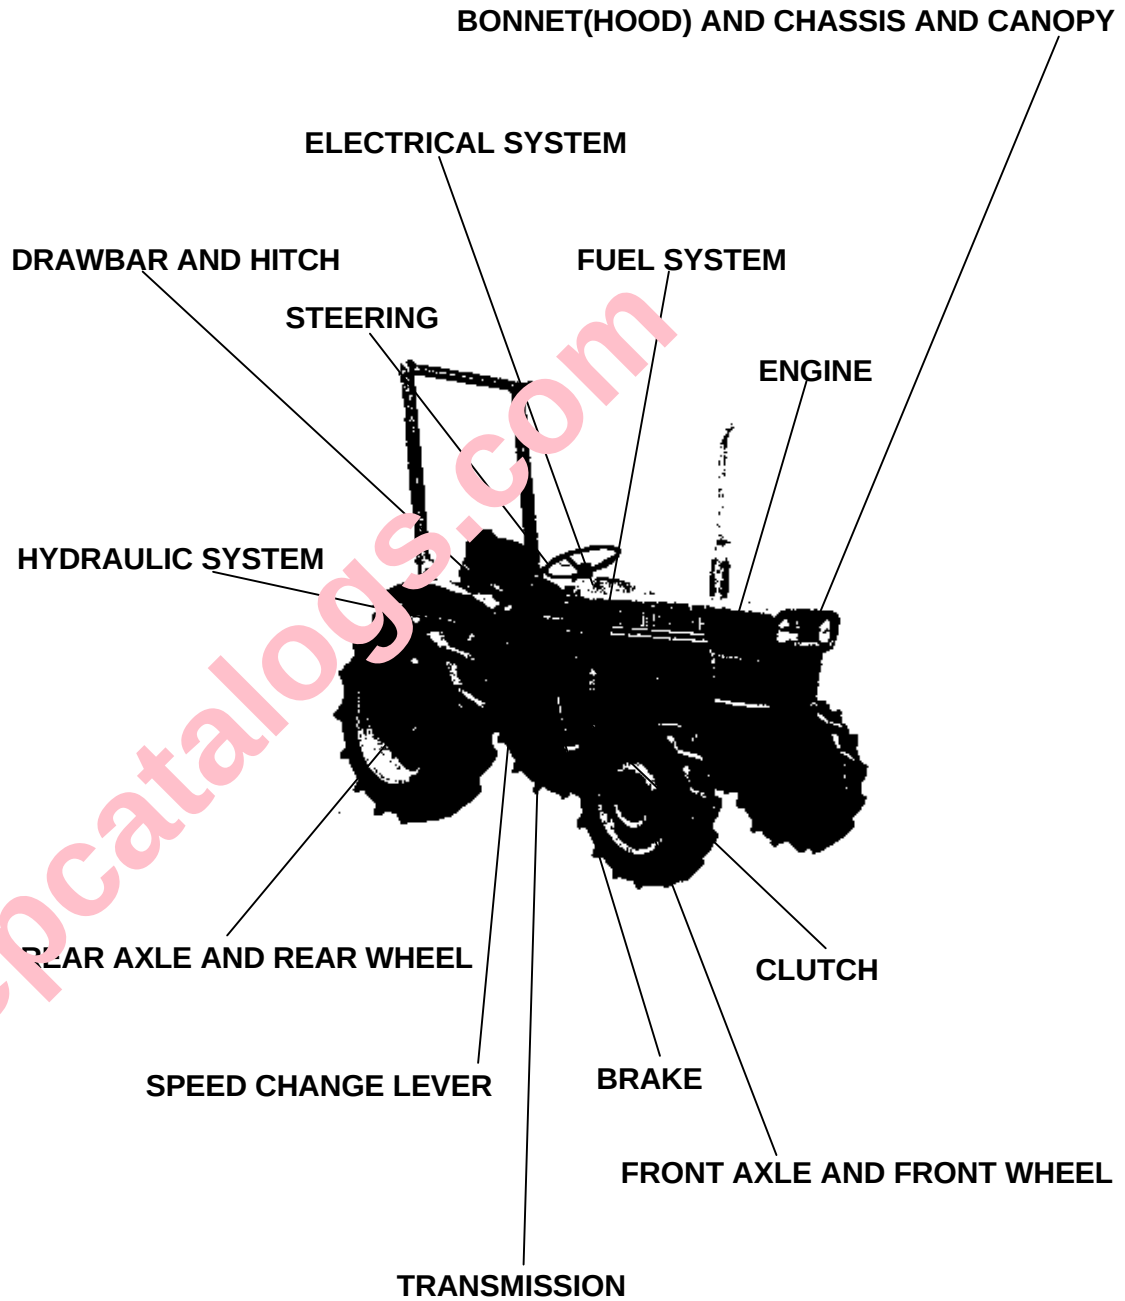


ACCESSORIES

Item	Part No.	Description	Book
ENGINE	01001	CRANKCASE	100K0129
	01002	CYLINDER HEAD	100K0129
	01003	GEAR CASE	100K0129
	01004	BEARING CASE	100K0129
	01005	BREATHER	100K0129
	01006	AIR CLEANER	100K0129
	0100701	MUFFLER [L245DT]	100K0129
	0100702	MUFFLER [L245]	100K0129
	01008	VALVE,ROCKER ARM	100K0129
	01009	HEAD COVER	100K0129
	01010	CAMSHAFT	100K0129
	01011	PISTON CRANKSHAFT	100K0129
	01012	FLYWHEEL	100K0129
	01013	NOZZLE HOLDER	100K0129
	01014	FUEL CAMSHAFT	100K0129
	01015	SPEED CONTROL PLATE	100K0129
	01016	GOVERNOR	100K0129
	01017	DYNAMO	100K0129
	01018	RADIATOR	100K0129
	01019	WATER PUMP	100K0129
	01020	NAME PLATE	100K0129
	01023	OIL FILTER 2 [SECTION PARTS]	100K0129
	01064	STARTER	100K0129
	01065	NOZZLE HOLDER	100K0129
	01066	INJECTION PUMP	100K0129
	01067	DYNAMO	100K0129
ELECTRICAL SYSTEM	01024	BATTERY	100K0129
CLUTCH	01025	CLUTCH HOUSING	100K0129
	01026	CLUTCH	100K0129
	01027	CLUTCH PEDAL	100K0129
STEERING	01028	STEERING	100K0129
SPEED CHANGE LEVER	01029	HAND ACCEL	100K0129
BONNET(HOOD) AND CHASSIS AND CANOPY	01030	BONNET	100K0129
ELECTRICAL SYSTEM	01031	MIRROR LAMP	100K0129
BONNET(HOOD) AND CHASSIS AND CANOPY	01032	SEAT	100K0129
TRANSMISSION	01033	TRANSMISSION CASE	100K0129
	01034	GEAR DRIVE SYSTEM 1	100K0129
	01035	GEAR DRIVE SYSTEM 2	100K0129
	01036	GEAR DRIVE SYSTEM 3	100K0129
SPEED CHANGE LEVER	01037	SPEED CHANGE SYSTEM 1	100K0129
	01038	SPEED CHANGE SYSTEM 2	100K0129
	01039	CHANGE LAVER	100K0129
REAR AXLE AND REAR WHEEL	01040	DIFFERENTIAL SYSTEM 1	100K0129
	01041	DIFFERENTIAL SYSTEM 2	100K0129
	01042	REAR AXLE	100K0129
BRAKE	01043	AXLE CASE	100K0129
	01044	BRAKE	100K0129
	01045	BRAKE PEDAL	100K0129
BONNET(HOOD) AND CHASSIS AND CANOPY	0104602	FENDER [U.S.A]	100K0129
ELECTRICAL SYSTEM	01047	ELECTICAL 1	100K0129
	01048	ELECTICAL 2	100K0129
	01049	ELECTICAL 3	100K0129
FUEL SYSTEM	01050	FUEL TANK	100K0129
HYDRAULIC SYSTEM	01051	FUEL FILTER	100K0129
	01052	OIL PRESSURE 1	100K0129
	01053	OIL PRESSURE 2	100K0129
	01054	O/P CYLINDER	100K0129

Item	Part No.	Description	Book
HYDRAULIC SYSTEM FRONT AXLE AND FRONT WHEEL	01055	O/P LIFT ARM SYSTEM	100K0129
	01056	FRONT WHEEL [L245DT]	100K0129
	01057	FRONT WHEEL DRIVE [L245DT]	100K0129
	01058	DIFF GEAR CASE [L245DT]	100K0129
	01059	FRONT AXLE SUPPORT [L245DT]	100K0129
	01060	DRIVE CASE [L245DT]	100K0129
	01061	PROPELLER SHAFT [L245DT]	100K0129
	01062	FRONT AXLE BRACKET	100K0129
	01068	OIL PRESSURE PUMP	100K0129
	01069	CONTROL VALVE	100K0129
HYDRAULIC SYSTEM	01070	RELIEF VALVE	100K0129
STEERING	01072	DRAG LINK [INTEGRAL POWER STEERING] [L245DT]	100K0129
	01073	POWER STEERING [INTEGRAL POWER STEERING]	100K0129
	01074	FLOW PRIORITY VALVE [INTEGRAL POWER STEERING]	100K0129
	01075	FUEL TANK [INTEGRAL POWER STEERING]	100K0129
	01076	OIL PRESSURE [INTEGRAL POWER STEERING]	100K0129
	01077	STEERING JOINT [INTEGRAL POWER STEERING]	100K0129
	01078	3-POINT LINKAGE [3P]	100K0129
DRAWBAR AND HITCH ACCESSORIES	01079	ACCESSORIES AND SERVICE PARTS	100K0129

   CRANKCASE

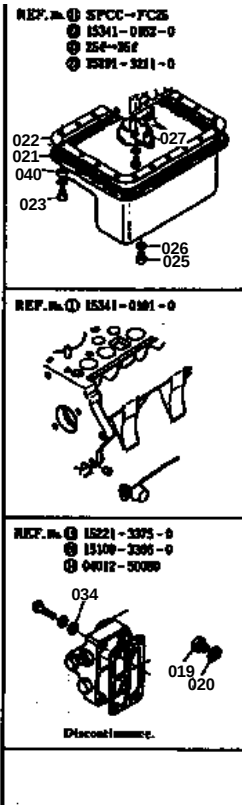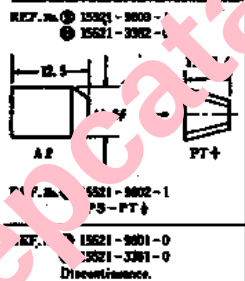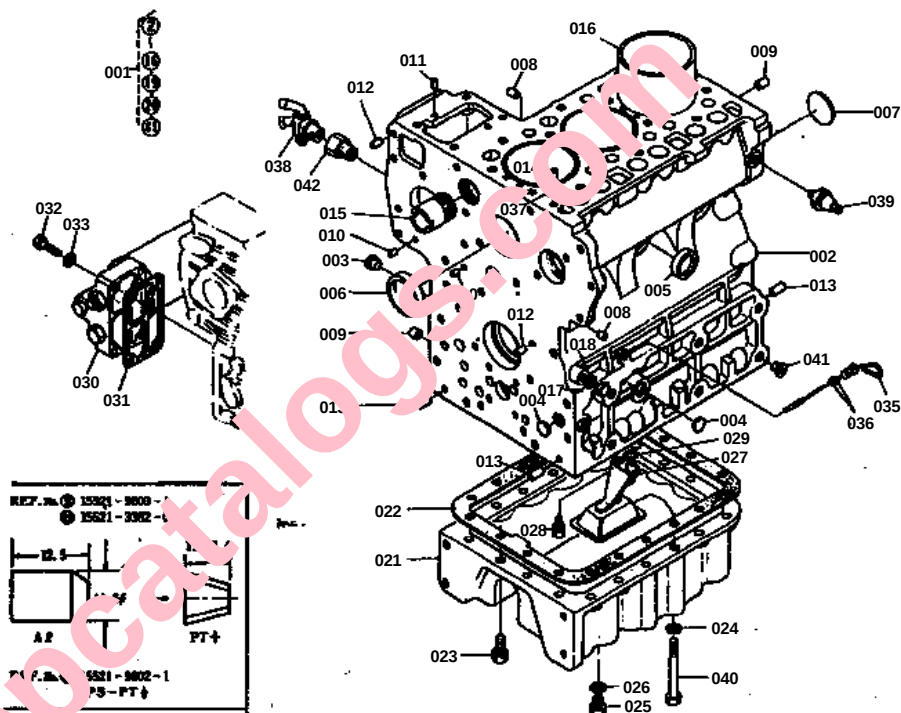

[Buy now](#)

[Kubota L245DT Tractor Parts Manual PDF](#)

[With Instant Download](#)