

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]


Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.


ALL PRODUCT INDEX
L355SS

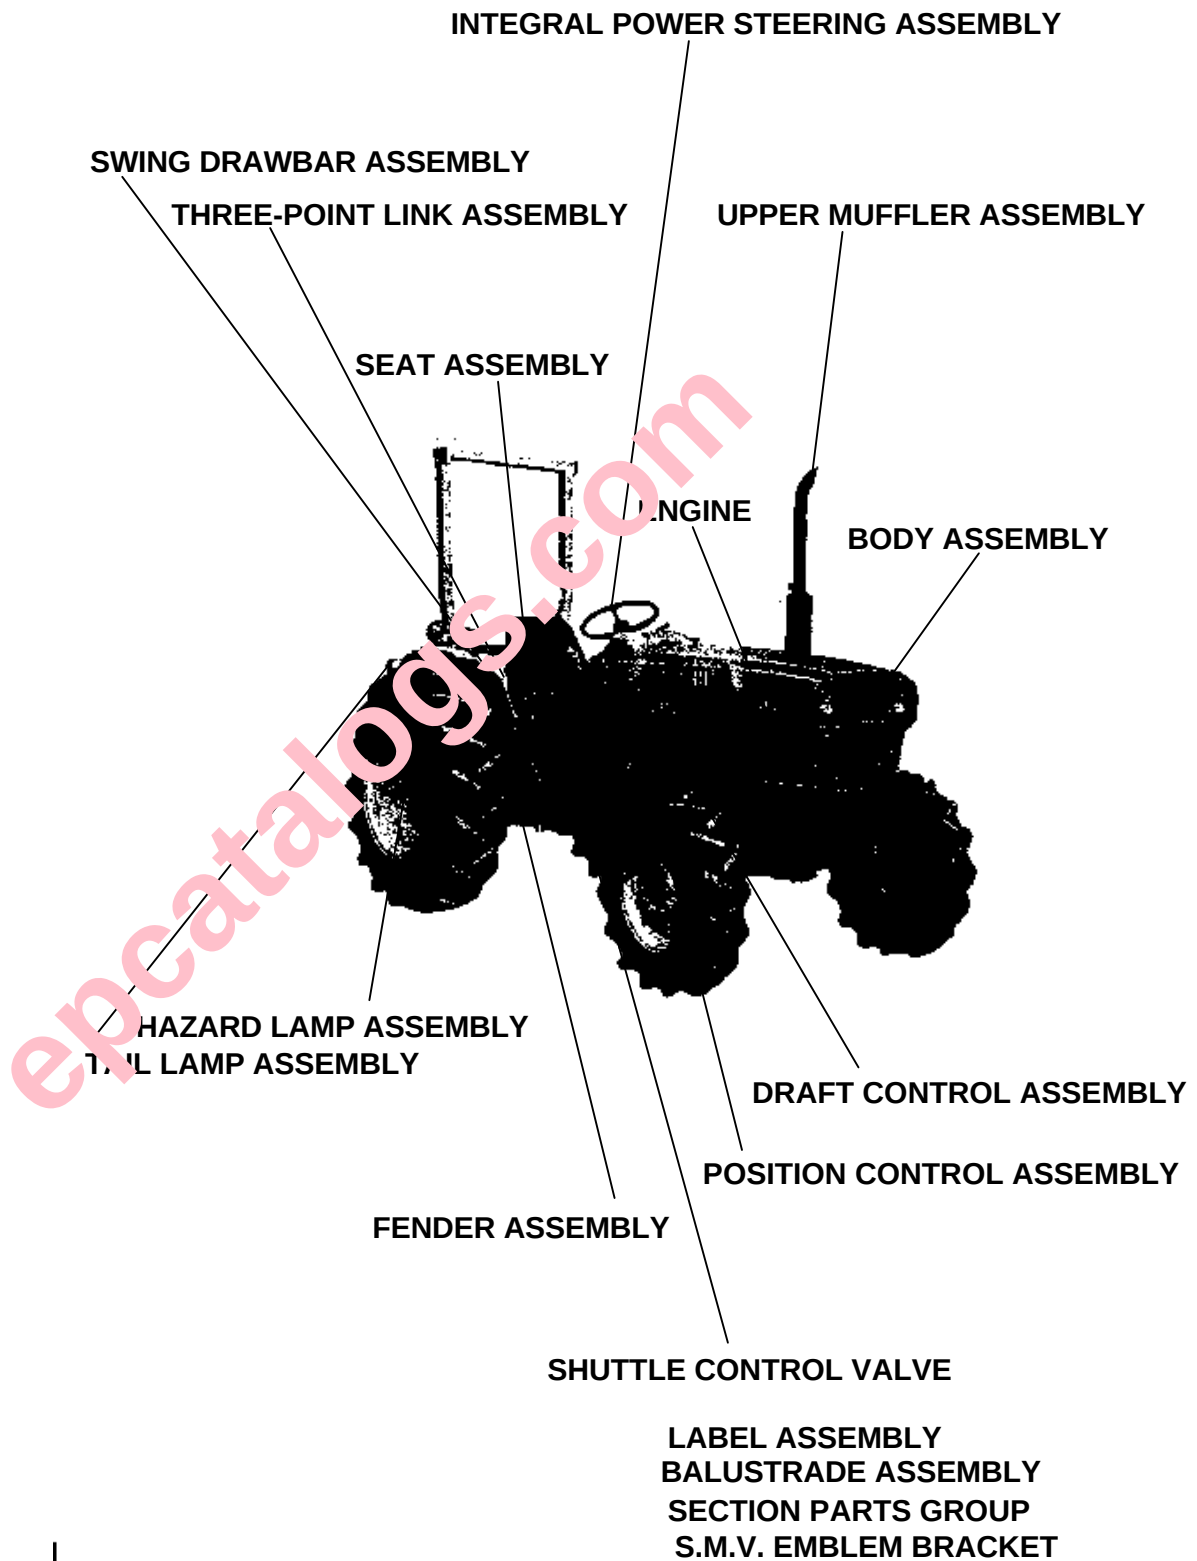

Item	Part No.	Description	Book
ENGINE	01001	CRANKCASE	100K0347
	01002	OIL PAN	100K0347
	01003	CYLINDER HEAD	100K0347
	01004	GEAR CASE	100K0347
	01005	MAIN BEARING CASE	100K0347
	01006	AIR CLEANER	100K0347
	01007	EXHAUST MANIFOLD	100K0347
	01008	VALVE,ROCKER ARM	100K0347
	01009	HEAD COVER	100K0347
	01010	CAMSHAFT	100K0347
	01011	PISTON,CRANKSHAFT	100K0347
	01012	FLYWHEEL	100K0347
	01013	STARTER SECTION PARTS	100K0347
	01014	FUEL CAMSHAFT	100K0347
	01015	GOVERNOR	100K0347
	01016	SPEED CONTROL PLATE	100K0347
	01017	ENGINE STOP LEVER	100K0347
	01018	DYNAMO	100K0347
	01019	DYNAMO SECTION PARTS	100K0347
	01020	RADIATOR	100K0347
	01021	WATER PUMP	100K0347
	01022	INJECTION PUMP	100K0347
	01023	INJECTION PUMP SECTION PARTS	100K0347
	01024	NOZZLE HOLDER	100K0347
	01025	NOZZLE HOLDER SECTION PARTS	100K0347
	01026	OIL HYDRAULIC PUMP	100K0347
	01027	OIL HYDRAULIC PUMP SECTION PARTS	100K0347
BODY ASSEMBLY	01028	AIR CLEANER SUPPORT	100K0347
	01029	FLYWHEEL HOUSING	100K0347
	01030	CLUTCH HOUSING	100K0347
	01031	OIL HYDRAULIC MANIFOLD	100K0347
	01032	CLUTCH SHAFT UPPER	100K0347
	01033	CLUTCH SHAFT LOWER	100K0347
	01034	REVERSE SHAFT	100K0347
	01035	CLUTCH	100K0347
	01036	CLUTCH PEDAL	100K0347
	01037	HAND ACCELERATOR	100K0347
	01038	HOOD 1	100K0347
	01039	HOOD 2	100K0347
	01040	TRANSMISSION CASE	100K0347
	01041	MAIN SHAFT	100K0347
	01042	COUNTER SHAFT	100K0347
	01043	PTO COUNTER SHAFT	100K0347
	01044	SPIRAL BEVEL PINION	100K0347
	01045	POWER TAKE-OFF SHAFT	100K0347
	01046	MAIN SHIFT LEVER	100K0347
	01047	MAIN SHIFT FORK	100K0347
	01048	HI-LO GEAR SHIFT LEVER	100K0347
	01049	PTO GEAR SHIFT LEVER	100K0347
	01050	SHUTTLE LEVER	100K0347
	01051	DIFFERENTIAL SYSTEM	100K0347
	01052	DIFF LOCK PEDAL	100K0347
	01053	DIFF YOKE SHAFT	100K0347
	01054	REAR AXLE	100K0347
	01055	AXLE CASE	100K0347
	01056	BRAKE	100K0347
	01057	BRAKE PEDAL	100K0347

Item	Part No.	Description	Book
BODY ASSEMBLY	01058	STEP	100K0347
	01059	PANEL	100K0347
	01060	HOUR METER AND SWITCH	100K0347
	01061	REGULATOR	100K0347
	01062	BATTERY	100K0347
	01063	HEAD LAMP	100K0347
	01064	WIRING DIAGRAM	100K0347
	01065	FUEL FILTER	100K0347
	01066	FUEL FILTER SECTION PARTS	100K0347
	01067	OIL HYDRAULIC SYSTEM	100K0347
	01068	CONTROL VALVE SECTION PARTS	100K0347
	01069	RELIEF VALVE SECTION PARTS	100K0347
	01070	CONTROL LEVER	100K0347
	01071	LEVER GUIDE	100K0347
	01072	OIL HYDRAULIC CYLINDER	100K0347
	01073	OIL HYDRAULIC CYLINDER COVER	100K0347
	01074	LIFT ARM	100K0347
	01075	OIL HYDRAULIC PIPING	100K0347
	01076	FRONT DIFF GEAR CASE	100K0347
	01077	FRONT DIFF CASE	100K0347
	01078	FRONT AXLE SUPPORT	100K0347
	01079	AXLE CASE	100K0347
	01080	BEVEL GEAR SHAFT	100K0347
	01081	FRONT AXLE	100K0347
	01082	TIE ROD	100K0347
	01083	FRONT AXLE BRACKET	100K0347
	01084	CENTER PIN	100K0347
	01085	PROPELLER SHAFT	100K0347
	01086	DRIVE CASE	100K0347
	01087	DRIVE SHAFT	100K0347
THREE-POINT LINK ASSEMBLY	01088	3-POINT LINK 1	100K0347
	01089	3-POINT LINK 2	100K0347
INTEGRAL POWER STEERING ASSEMBLY	01090	POWER STEERING	100K0347
	01091	OIL TANK	100K0347
	01092	FUEL TANK	100K0347
SWING DRAWBAR ASSEMBLY	01093	SWING DRAWBAR	100K0347
TAIL LAMP ASSEMBLY	01094	TAIL LAMP	100K0347
HAZARD LAMP ASSEMBLY	01095	HAZARD LAMP	100K0347
LABEL ASSEMBLY	01096	LABEL	100K0347
BALUSTRADE ASSEMBLY	01097	BALUSTRADE	100K0347
SEAT ASSEMBLY	01098	SEAT	100K0347
S.M.V. EMBLEM BRACKET	01099	S.M.V. EMBLEM BRACKET	100K0347
FENDER ASSEMBLY	01100	FENDER	100K0347
SHUTTLE CONTROL VALVE	01101	CONTROL VALVE	100K0347
	01102	CONTROL VALVE SECTION PARTS 1	100K0347
	01103	CONTROL VALVE SECTION PARTS 2	100K0347
UPPER MUFFLER ASSEMBLY	01104	UPPER MUFFLER	100K0347
POSITION CONTROL ASSEMBLY	01105	TOP LINK HOLDER	100K0347
DRAFT CONTROL ASSEMBLY	01106	DRAFT CONTROL VALVE	100K0347
	01107	DRAFT CONTROL VALVE SECTION PARTS	100K0347
	01108	TOP LINK BRACKET	100K0347
SECTION PARTS GROUP	01109	VALVE, FLOW PRIORITY	100K0347
	01110	INTEGRAL TYPE POWER STEERING	100K0347

CRANKCASE

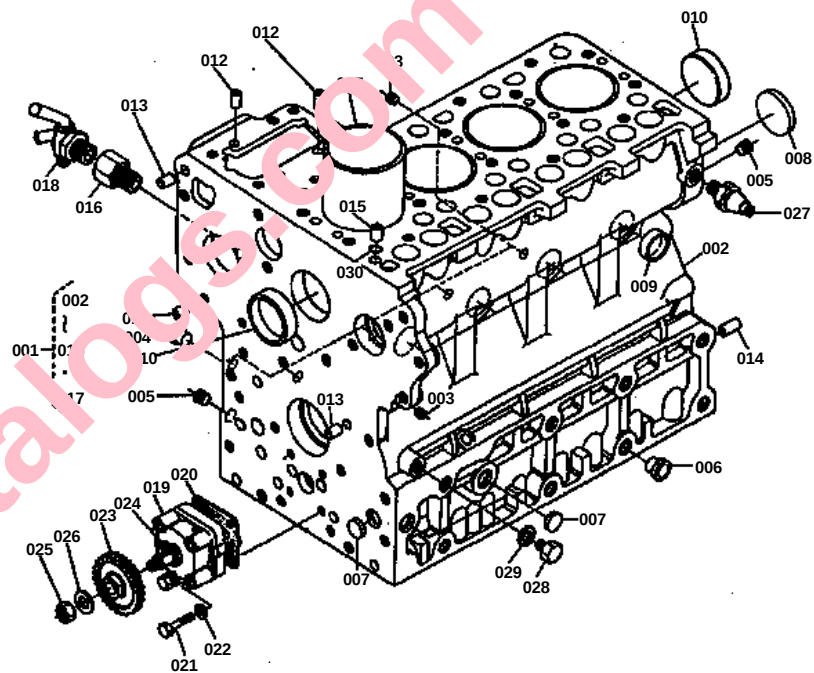

[Buy now](#)

[Kubota L355SS Tractor Parts Manual PDF](#)

[With Instant Download](#)