

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Description of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol Country

A United States of America

CA Canada

FR France

GR Greece

PO Portugal

AU Australia

If the remark column says for example EXCEPT [FR] this part works in all countries except France.

That means it will work here in the USA.

Excavators & Wheel Loaders


Country symbols sometimes used:

KCL - Kubota Canada Ltd

KTA - Kubota Tractor Australia

KTC - Kubota Tractor Corp. (USA)

ALL PRODUCT INDEX
L2500F

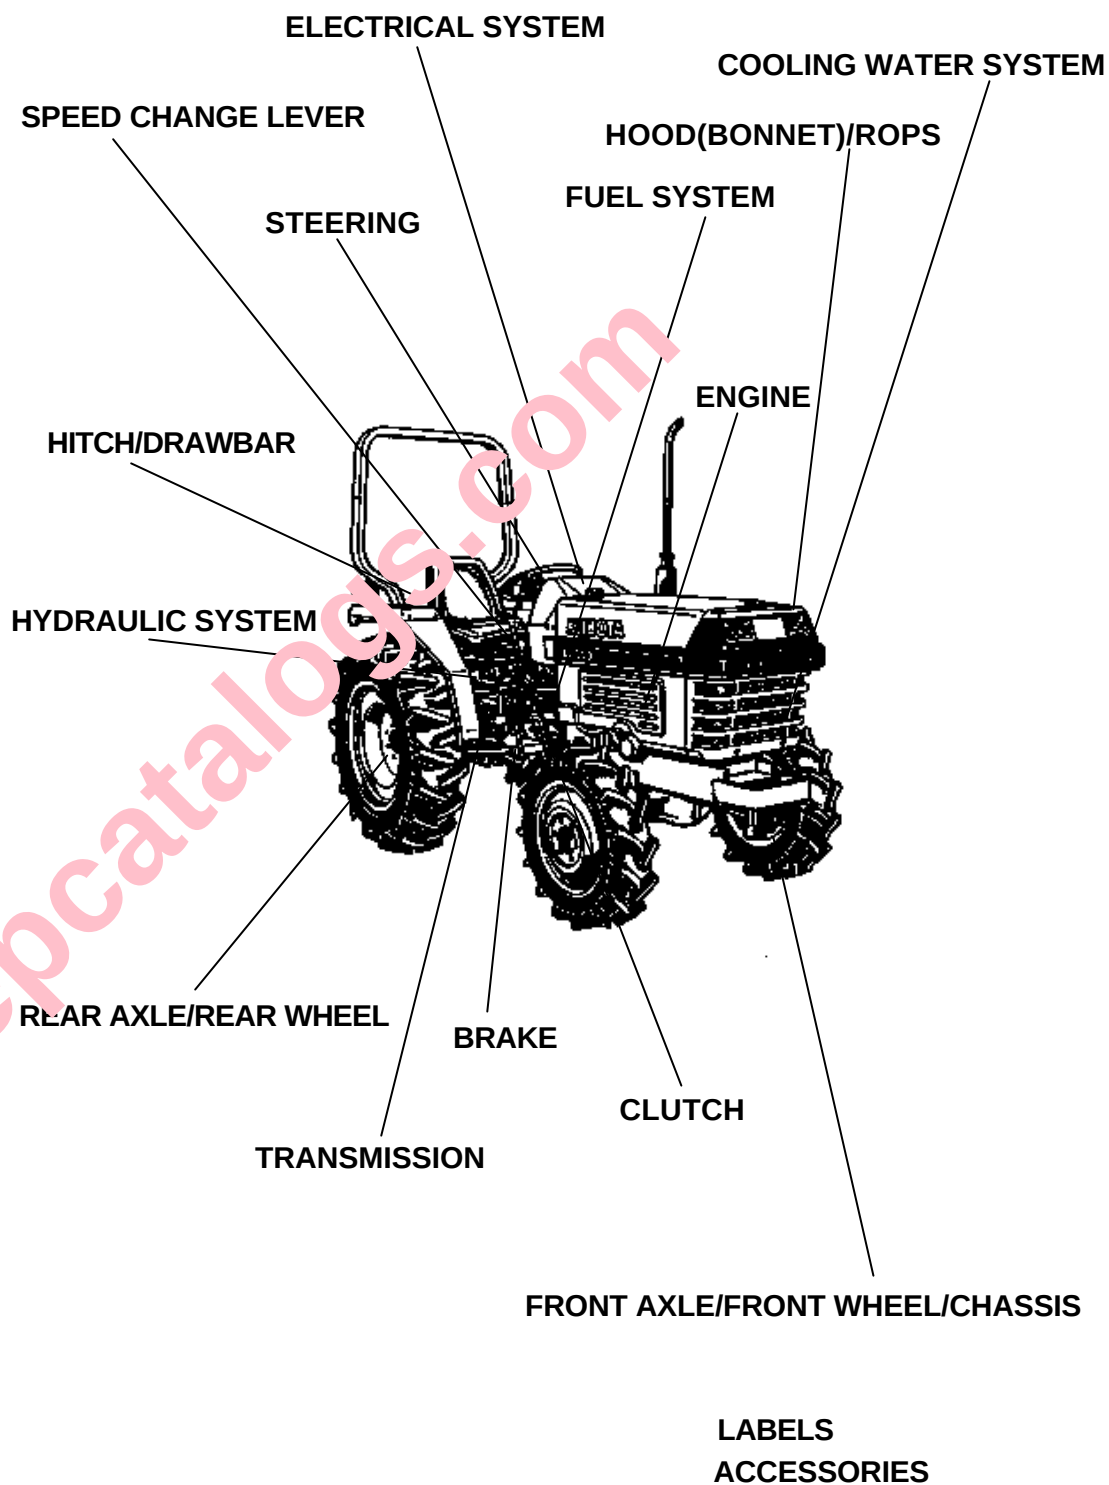

Item	Part No.	Description	Book
ENGINE	01T001	CRANKCASE	100K0362
	01T002	OIL PAN	100K0362
	01T003	PISTON/CRANKSHAFT	100K0362
	01T004	MAIN BEARING CASE	100K0362
	01T005	FLYWHEEL	100K0362
	01T006	CYLINDER HEAD	100K0362
	01T007	VALVE AND ROCKER ARM	100K0362
	01T008	NOZZLE HOLDER/GLOW PLUG	100K0362
	01T009	NOZZLE HOLDER [COMPONENT PARTS]	100K0362
	01T010	CYLINDER HEAD COVER	100K0362
	01T011	INLET MANIFOLD	100K0362
	02T012	AIR CLEANER	100K0362
	01T013	EXHAUST MANIFOLD	100K0362
	02T01401	MUFFLER	100K0362
	02T01402	UNDER MUFFLER [OPTION]	100K0362
	01T015	CAMSHAFT	100K0362
	01T016	GEAR CASE	100K0362
	01T017	WATER PUMP	100K0362
	01T018	WATER FLANGE AND THERMOSTAT	100K0362
	01T019	DUEL CAMSHAFT	100K0362
	01T020	INJECTION PUMP	100K0362
	01T021	INJECTION PUMP [COMPONENT PARTS]	100K0362
	01T022	ENGINE STOP LEVER	100K0362
	01T023	SPEED CONTROL PLATE	100K0362
FUEL SYSTEM	01T024	GOVERNOR	100K0362
	01T025	UPPER GASKET KIT	100K0362
	01T026	LOWER GASKET KIT	100K0362
COOLING WATER SYSTEM	02T027	STOP ROD	100K0362
	02T028	HAND ACCELERATOR LEVER	100K0362
	02T02901	FUEL TANK	100K0362
ELECTRICAL SYSTEM	02T030	FUEL FILTER/FUEL PIPE	100K0362
	02T031	FAN	100K0362
	02T032	WATER PIPE	100K0362
	02T033	RADIATOR	100K0362
	02T03401	SHUTTER [MANUAL STRG.]	100K0362
	02T035	ALTERNATOR	100K0362
	02T036	ALTERNATOR [COMPONENT PARTS]	100K0362
	02T037	STARTER	100K0362
	02T038	STARTER [COMPONENT PARTS]	100K0362
	02T039	BATTERY	100K0362
CLUTCH	02T040	SWITCH	100K0362
	02T041	LIGHT	100K0362
	02T042	METER	100K0362
	02T04301	ELECTRICAL WIRING	100K0362
	02T044	CLUTCH	100K0362
TRANSMISSION	02T045	CLUTCH LEVER	100K0362
	02T046	CLUTCH PEDAL	100K0362
	02T047	CLUTCH HOUSING	100K0362
	02T048	TRANSMISSION CASE	100K0362
	02T049	MAIN SHAFT	100K0362
	02T050	COUNTERSHAFT	100K0362
	02T051	PTO COUNTERSHAFT	100K0362

Item	Part No.	Description	Book
TRANSMISSION SPEED CHANGE LEVER	02T052	REVERSE SHAFT	100K0362
	02T053	MAIN GEAR SHIFT LEVER	100K0362
	02T054	PTO GEAR SHIFT LEVER	100K0362
	02T055	MAIN GEAR SHIFT FORK	100K0362
	02T056	PTO GEAR SHIFT FORK	100K0362
REAR AXLE/REAR WHEEL	02T057	RANGE GEAR SHIFT FORK AND LEVER	100K0362
	02T058	SPIRAL BEVEL PINION	100K0362
	02T059	REAR DIFFERENTIAL	100K0362
	02T060	DIFFERENTIAL LOCK PEDAL	100K0362
	02T061	REAR AXLE	100K0362
	02T06201	REAR WHEEL (9.5-24)	100K0362
	02T06202	REAR WHEEL (11.2-24)	100K0362
	02T06203	REAR WHEEL (13.6-16)	100K0362
	02T06204	REAR WHEEL (355/80-D20)	100K0362
	02T06301	BRAKE	100K0362
BRAKE	02T064	BRAKE PEDAL	100K0362
	02T065	PARKING BRAKE LEVER	100K0362
FRONT AXLE/FRONT WHEEL/CHASSIS	02T066	FRONT AXLE	100K0362
	02T067	KNICKLE SHAFT	100K0362
	02T06801	FRONT WHEEL (4.00-15)	100K0362
	02T06802	FRONT WHEEL (5.00-15)	100K0362
	02T06803	FRONT WHEEL (23X8.50-12)	100K0362
	02T06804	FRONT WHEEL (25X8.50-14)	100K0362
	02T069	FRONT AXLE FRAME	100K0362
	02T080	STEERING LINKAGE (DRAG LINK)	100K0362
STEERING	02T081	STEERING LINKAGE (TIE ROD)	100K0362
	02T08401	MANUAL STEERING AND HANDLE (MS)	100K0362
	02T08501	MANUAL STEERING [COMPONENT PARTS]	100K0362
	02T08601	HYDRAULIC PUMP	100K0362
HYDRAULIC SYSTEM	02T08701	HYDRAULIC PUMP [COMPONENT PARTS]	100K0362
	02T08801	HYDRAULIC OIL LINE	100K0362
	02T090	CONTROL VALVE	100K0362
	02T09101	CONTROL VALVE (POSITION CONTROL) [COMPONENT PARTS]	100K0362
	02T09102	CONTROL VALVE (DRAFT) [OPTION] [COMPONENT PARTS]	100K0362
	02T092	DRAFT CONTROL VALVE [OPTION]	100K0362
	02T093	DRAFT CONTROL VALVE [OPTION] [COMPONENT PARTS]	100K0362
	02T094	HYDRAULIC CYLINDER	100K0362
	02T095	CYLINDER FRONT COVER	100K0362
	02T096	LIFT ARM	100K0362
	02T097	FEED BACK LEVER	100K0362
	02T098	POSITION CONTROL LEVER	100K0362
	02T099	3-POINT LINKAGE 1 (LOWER LINK/TOP LINK)	100K0362
	02T100	3-POINT LINKAGE 2 (LIFT ROD)	100K0362
	02T101	TOP LINK BRACKET/LOWER LINK HOLDER	100K0362
	02T102	TOP LINK BRACKET (WITH DRAFT CONTROL) [OPTION]	100K0362
HITCH/DRAWBAR	02T103	DRAWBAR/HITCH	100K0362
	02T104	PTO SHAFT PROTECTOR	100K0362

Item	Part No.	Description	Book
HOOD(BONNET)/ROPS	02T105	FRONT GRILLE	100K0362
	02T106	HOOD (BONNET)	100K0362
	02T107	HOOD (SIDE COVER)	100K0362
	02T108	REAR HOOD (BONNET)	100K0362
	02T109	FENDER	100K0362
	02T110	FENDER SUPPORT	100K0362
	02T111	SEAT	100K0362
	02T112	STEP	100K0362
	02T113	ROPS	100K0362
	02T114	LABEL 1	100K0362
LABELS	02T115	LABEL 2	100K0362
ACCESSORIES	02T116	ACCESSORIES AND SERVICE PARTS	100K0362

[Buy now](#)

[Kubota L2500F Tractor Parts Manual PDF](#)

[With Instant Download](#)