

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new


Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

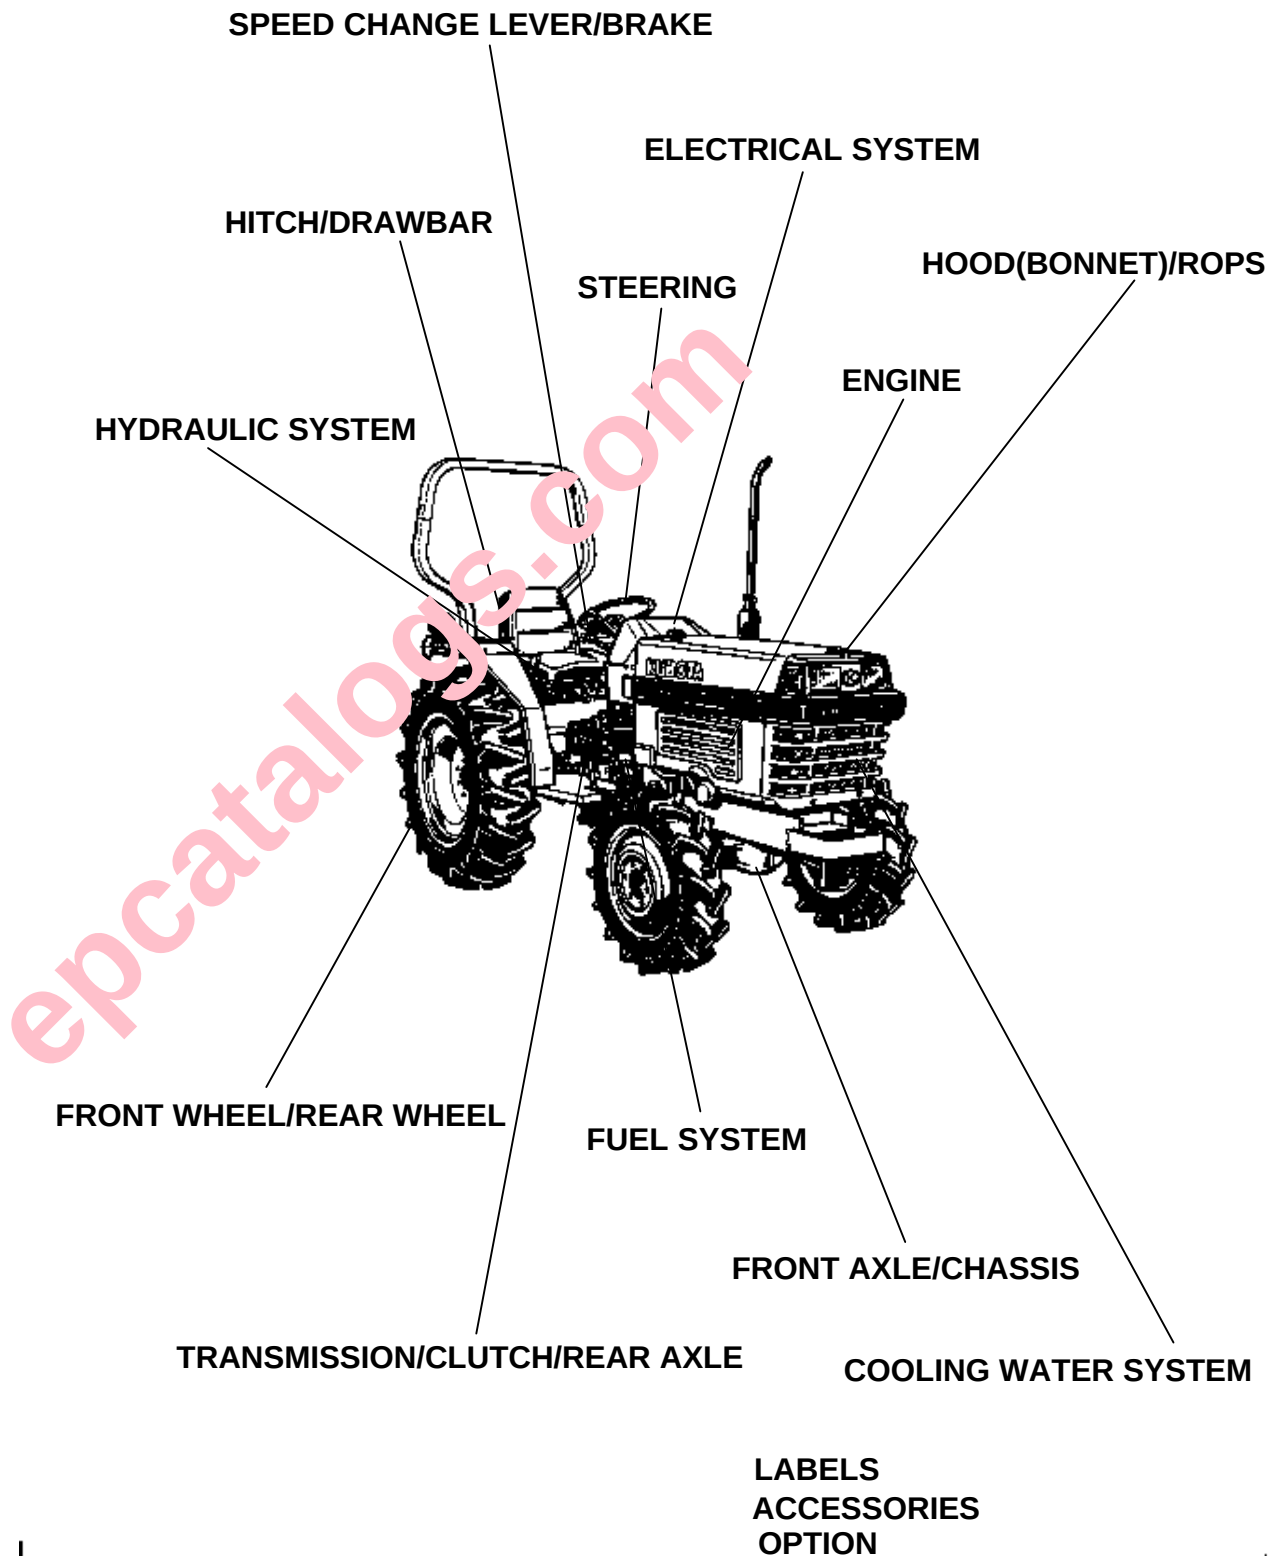

Item	Part No.	Description	Book
ENGINE	010001	CRANKCASE	100K0570
	010002	OIL PAN	100K0570
	010003	CYLINDER HEAD	100K0570
	010004	GEAR CASE	100K0570
	010005	HEAD COVER	100K0570
	010100	MAIN BEARING CASE	100K0570
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100K0570
	010102	PISTON AND CRANKSHAFT	100K0570
	01010301	FLYWHEEL	100K0570
	01010502	FUEL CAMSHAFT	100K0570
	010200	ENGINE STOP LEVER	100K0570
	01020201	INJECTION PUMP	100K0570
	010203	INJECTION PUMP [COMPONENT PARTS]	100K0570
	010204	GOVERNOR	100K0570
	010205	SPEED CONTROL PLATE	100K0570
	010206	NOZZLE HOLDER AND GLOW PLUG	100K0570
	010207	NOZZLE HOLDER [COMPONENT PARTS]	100K0570
	010500	WATER FLANGE AND THERMOSTAT	100K0570
	010501	WATER PUMP	100K0570
	010600	VALVE AND ROCKER ARM	100K0570
	010601	INLET MANIFOLD	100K0570
	010602	EXHAUST MANIFOLD	100K0570
	01090101	UPPER GASKET KIT	100K0570
	01090201	LOWER GASKET KIT	100K0570
	010604	AIR CLEANER	100K0570
	010606	MUFFLER	100K0570
	01A003	ENGINE STOP ROD	100K0570
	01A00001	ACCELERATOR LEVER	100K0570
	01A0025	ACCELERATOR LINKAGE	100K0570
FUEL SYSTEM	01A101	FUEL TANK	100K0570
	01A11001	FUEL PIPE AND FUEL FILTER	100K0570
COOLING WATER SYSTEM	01A130	FUEL FILTER [COMPONENT PARTS]	100K0570
	01A401	FAN	100K0570
	01A410	WATER PIPE	100K0570
ELECTRICAL SYSTEM	01A420	RADIATOR	100K0570
	01A51501	ALTERNATOR	100K0570
	01A520	ALTERNATOR [COMPONENT PARTS]	100K0570
	01A525	STARTER	100K0570
	01A530	STARTER [COMPONENT PARTS]	100K0570
	01A535	BATTERY	100K0570
	01B102	SWITCH 1	100K0570
	01B10301	SWITCH 2	100K0570
	01B115	PANEL BOARD	100K0570
	01B120	PANEL BOARD [COMPONENT PARTS]	100K0570
	01B301	LIGHT	100K0570
	01B50102	ELECTRICAL WIRING	100K0570
TRANSMISSION/CLUTCH/REAR AXLE	01C10101	CLUTCH	100K0570
	01C20101	CLUTCH LEVER	100K0570
	01C30101	CLUTCH PEDAL	100K0570
	01C40101	CLUTCH HOUSING	100K0570
	01C42002	TRANSMISSION CASE	100K0570
	01D10101	MAIN SHAFT	100K0570
	01D10501	COUNTERSHAFT	100K0570
	01D116	REVERSE SHAFT	100K0570
	01D117	RANGE GEAR SHAFT	100K0570
	01D12502	SPIRAL BEVEL PINION	100K0570
	01D12701	REAR DIFFERENTIAL	100K0570
	01D13002	PTO COUNTERSHAFT	100K0570
	01D135	PTO SHAFT	100K0570
	01D20101	MAIN GEAR SHIFT FORK	100K0570

Item	Part No.	Description	Book
TRANSMISSION/CLUTCH/REAR AXLE	01D217	RANGE GEAR SHIFT FORK	100K0570
	01D22001	PTO GEAR SHIFT FORK	100K0570
	01D30101	REAR AXLE	100K0570
SPEED CHANGE LEVER/BRAKE	01D40102	BRAKE	100K0570
	01D415	HAND BRAKE	100K0570
	01E10101	MAIN GEAR SHIFT LEVER	100K0570
	01E110	RANGE GEAR SHIFT LEVER	100K0570
	01E12501	PTO GEAR SHIFT LEVER	100K0570
	01E140	FRONT WHEEL DRIVE LEVER	100K0570
	01E201	BRAKE PEDAL	100K0570
	01E205	DIFFRENTIAL LOCK PEDAL	100K0570
	01F10502	FRONT AXLE FRAME	100K0570
	01F107	FRONT AXLE BRACKET	100K0570
FRONT AXLE/CHASSIS	01F120	PROPELLER SHAFT	100K0570
	01F122	FRONT WHEEL DRIVE SHAFT	100K0570
	01F125	FRONT DIFFERENTIAL CASE	100K0570
	01F135	FRONT DIFFERENTIAL	100K0570
	01F140	FRONT AXLE CASE	100K0570
	01F145	DIFFERENTIAL GEAR SHAFT	100K0570
	01F150	FRONT AXLE	100K0570
	01G10102	STEERING HANDLE [PS]	100K0570
	01G11202	STEERING [PS] [COMPONENT PARTS]	100K0570
	01G11902	STEERING LINKAGE (DRAG LINK)	100K0570
STEERING	01G12002	STEERING LINKAGE (TIE ROD)	100K0570
	01H12002	HYDRAULIC PUMP	100K0570
	01H12502	HYDRAULIC PUMP [COMPONENT PARTS]	100K0570
	01H205	HYDRAULIC OIL LINE (PS)	100K0570
	01H22502	HYDRAULIC OIL LINE	100K0570
	01H30102	HYDRAULIC CYLINDER	100K0570
	01H303	CYLINDER FRONT COVER	100K0570
	01H320	LIFT ARM	100K0570
	01H330	FEED BACK LEVER	100K0570
	01H405	CONTROL VALVE	100K0570
HYDRAULIC SYSTEM	01H410	CONTROL VALVE [COMPONENT PARTS]	100K0570
	01H440	POSITION CONTROL LEVER	100K0570
	01J101	TOP LINK HOLDER	100K0570
	01J105	TOP LINK	100K0570
	01J110	3-POINT LINKAGE 1 (LOWER LINK)	100K0570
	01J115	3-POINT LINKAGE 2 (LIFT ROD)	100K0570
	01K105	DRAWBAR	100K0570
	01K125	PTO PROTECTOR	100K0570
	01L10101	FRONT GRILLE	100K0570
	01L105	HOOD(BONNET)	100K0570
HITCH/DRAWBAR	01L110	HOOD(BONNET) SIDE	100K0570
	01L13001	SHUTTER PLATE	100K0570
HOOD(BONNET)/ROPS	01L20102	PANEL FRAME	100K0570
	01L210	FENDER	100K0570
	01L213	FENDER SUPPORT	100K0570
	01L21702	FLOOR SEAT COVER	100K0570
	01L220	SEAT	100K0570
	01L22501	STEP	100K0570
	01L301	ROPS	100K0570
	01L501	SMV EMBLEM	100K0570
	01P10105	FRONT WHEEL (6-14)	100K0570
	01P10106	FRONT WHEEL (7-16)	100K0570
FRONT WHEEL/REAR WHEEL	01P10107	FRONT WHEEL (24*8.50-14)	100K0570
	01P11001	REAR WHEEL (9.5-24)	100K0570
	01P11002	REAR WHEEL (11.2-24)	100K0570
	01P11003	REAR WHEEL (13.6-16)	100K0570
	01R10501	LABEL 1	100K0570
LABELS			

Item	Part No.	Description	Book
LABELS	01R11001	LABEL 2	100K0570
ACCESSORIES	01S105	ACCESSORIES AND SERVICE PARTS	100K0570
OPTION	01T104	UNDER MUFFLER [OPTION]	100K0570
	01T127	CONTROL VALVE (WITH DRAFT) [OPTION]	100K0570
	01T128	CONTROL VALVE (WITH DRAFT) [COMPONENT PARTS]	100K0570
	01T135	DRAFT CONTROL LEVER (WITH DRAFT) [OPTION]	100K0570
	01T136	DRAFT CONTROL VALVE (WITH DRAFT) [COMPONENT PARTS]	100K0570
	01T140	TOP LINK HOLDER (WITH DRAFT) [OPTION]	100K0570

epcatalogs.com

[Buy now](#)

[Kubota L2600DT Tractor Parts Manual PDF](#)

[With Instant Download](#)