


ALL PRODUCT INDEX
L2900F

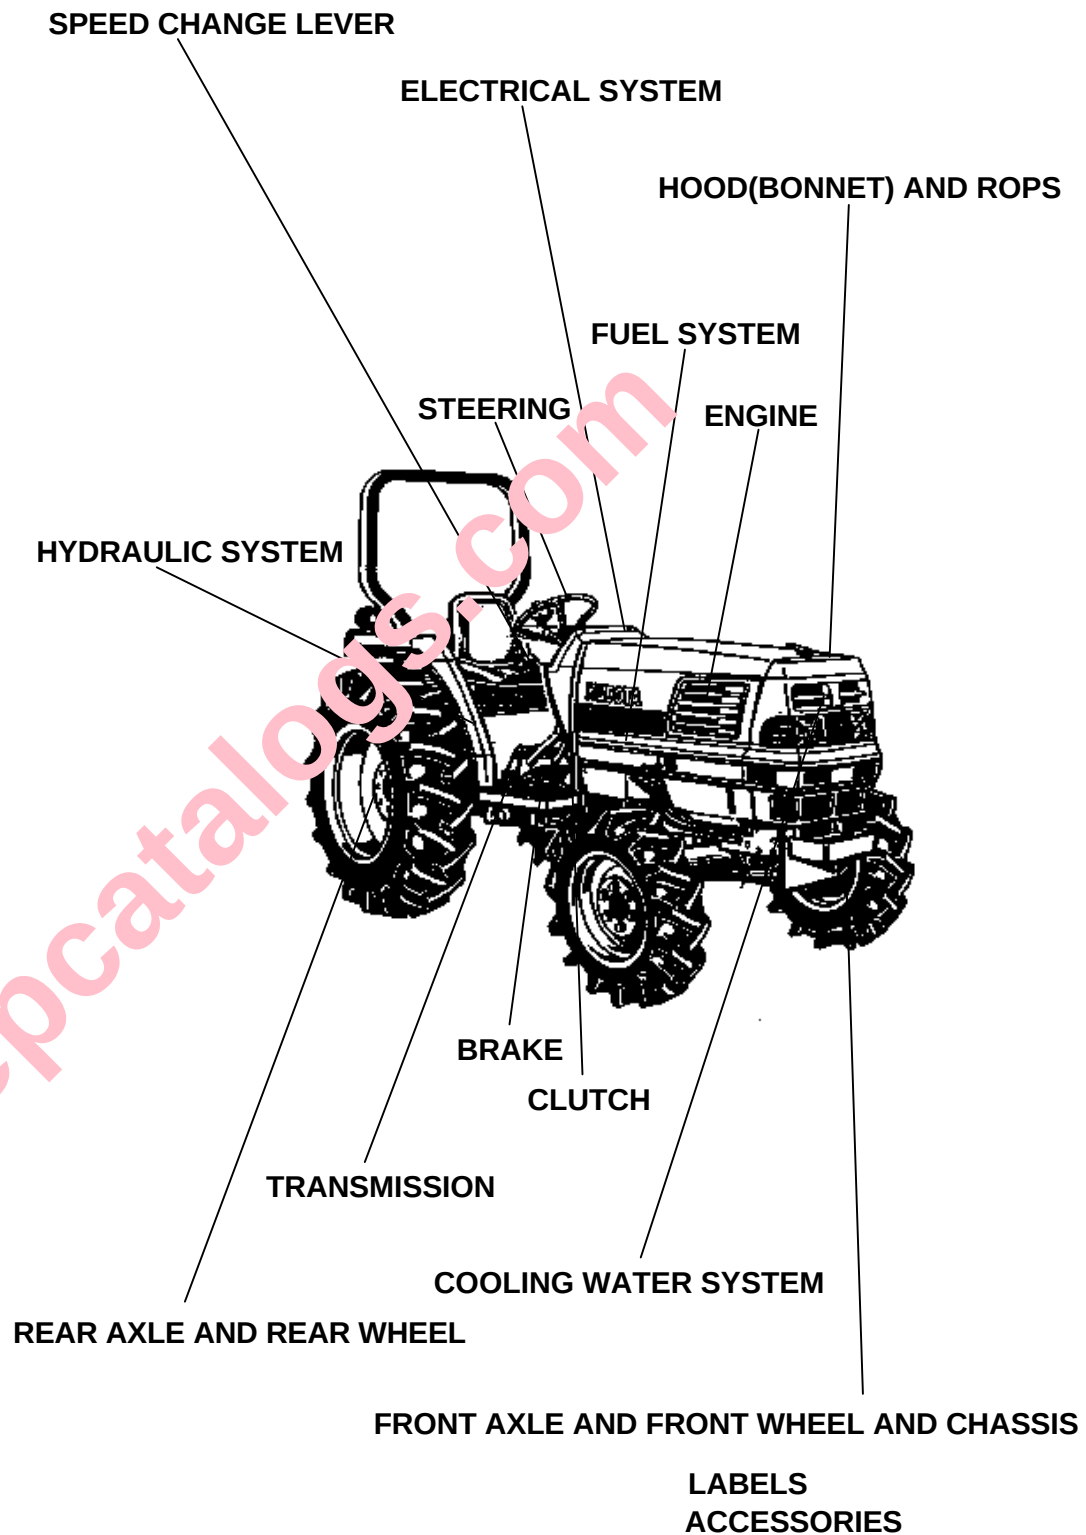

Item	Page No.	Description	Book
ENGINE	01T001	CRANKCASE	100K0394
	01T002	OIL PAN	100K0394
	01T003	PISTON AND CRANKSHAFT	100K0394
	01T004	MAIN BEARING CASE	100K0394
	01T00501	FLYWHEEL [W/O IND-PTO]	100K0394
	01T00502	FLYWHEEL [WITH IND-PTO]	100K0394
	01T006	CYLINDER HEAD	100K0394
	01T007	VALVE AND ROCKER ARM	100K0394
	01T008	NOZZLE HOLDER/GLOW PLUG	100K0394
	01T009	NOZZLE HOLDER [COMPONENT PARTS]	100K0394
	01T010	CYLINDER HEAD COVER	100K0394
	01T011	INLET MANIFOLD	100K0394
	01T014	CAMSHAFT	100K0394
	01T015	GEAR CASE	100K0394
	01T016	WATER PUMP	100K0394
	01T017	WATER FLANGE AND THERMOSTAT	100K0394
	01T018	FUEL CAMSHAFT	100K0394
	01T019	INJECTION PUMP	100K0394
	01T020	INJECTION PUMP [COMPONENT PARTS]	100K0394
	01T021	ENGINE STOP LEVER	100K0394
	01T022	SPEED CONTROL PLATE	100K0394
	01T023	GOVERNOR	100K0394
	01T02401	UPPER GASKET KIT	100K0394
	01T025	LOWER GASKET KIT	100K0394
	02T01201	AIR CLEANER	100K0394
	02T01202	DOUBLE AIR CLEANER [OPTION]	100K0394
	02T013	EXHAUST MANIFOLD AND MUFFLER	100K0394
	02T026	STOP SOLENOID AND ENGINE STOP WIRE	100K0394
	02T027	ACCELERATOR LEVER	100K0394
	02T028	ACCELERATOR LINKAGE	100K0394
	02T029	ACCELERATOR ROD	100K0394
FUEL SYSTEM	02T030	FUEL TANK	100K0394
	02T031	FUEL PIPE AND FUEL FILTER	100K0394
	02T032	FUEL FILTER [COMPONENT PARTS]	100K0394
COOLING WATER SYSTEM	02T033	FAN	100K0394
	02T034	WATER PIPE	100K0394
	02T035	RADIATOR	100K0394
ELECTRICAL SYSTEM	02T036	RESERVE TANK	100K0394
	02T037	ALTERNATOR	100K0394
	02T038	ALTERNATOR [COMPONENT PARTS]	100K0394
	02T039	STARTER	100K0394
	02T040	STARTER [COMPONENT PARTS]	100K0394
	02T041	BATTERY	100K0394
	02T042	SWITCH	100K0394
	02T043	PANEL BOARD	100K0394
	02T044	PANEL BOARD [COMPONENT PARTS]	100K0394

Item	Page No.	Description	Book
ELECTRICAL SYSTEM	02T045	LIGHT	100K0394
	02T046	ELECTRICAL WIRING	100K0394
CLUTCH	02T047	CLUTCH	100K0394
	02T048	CLUTCH LEVER	100K0394
	02T049	CLUTCH PEDAL	100K0394
	02T05001	CLUTCH HOUSING [MANUAL T/M TYPE]	100K0394
	02T05101	MID CASE [MANUAL T/M TYPE] [WITH IND-PTO]	100K0394
TRANSMISSION	02T052	TRANSMISSION CASE	100K0394
	02T05302	MAIN SHAFT [WITH IND-PTO]	100K0394
	02T054	COUNTERSHAFT	100K0394
	02T05601	SHUTTLE SHAFT [MANUAL T/M TYPE]	100K0394
	02T05701	RANGE GEAR SHAFT [MANUAL T/M TYPE]	100K0394
	02T05801	PTO COUNTERSHAFT [WITH IND-PTO]	100K0394
	02T05901	PTO CLUTCH [WITH IND-PTO]	100K0394
	02T06001	PTO SHAFT [W/O MID-PTO]	100K0394
	02T06002	PTO SHAFT [WITH MID-PTO]	100K0394
	02T061	MID PTO [WITH MID-PTO]	100K0394
SPEED CHANGE LEVER	02T06201	MAIN GEAR SHIFT LEVER [MANUAL T/M TYPE]	100K0394
	02T06301	MAIN GEAR SHIFT FORK [MANUAL T/M TYPE]	100K0394
	02T064	SHUTTLE SHIFT LEVER	100K0394
	02T06501	SHUTTLE SHIFT FORK [MANUAL T/M TYPE]	100K0394
	02T06601	RANGE GEAR SHIFT LEVER [MANUAL T/M TYPE] [W/O CREEP]	100K0394
	02T06602	RANGE GEAR SHIFT LEVER/CREEP GEAR SHIFT LEVER [MANUAL T/M TYPE] [WITH CREEP]	100K0394
	02T06701	RANGE GEAR SHIFT FORK AND CREEP GEAR SHIFT FORK [MANUAL T/M TYPE]	100K0394
	02T068	MID PTO SHIFT LEVER [WITH MID-PTO]	100K0394
	02T06901	PTO CLUTCH CONTROL LEVER [WITH IND-PTO]	100K0394
	02T07001	SPIRAL BEVEL PINION [W/O CREEP]	100K0394
	02T07002	SPIRAL BEVEL PINION AND CREEP [WITH CREEP]	100K0394
	02T071	REAR DIFFERENTIAL	100K0394
	02T072	DEFFERENTIAL LOCK SHIFT FORK	100K0394
REAR AXLE AND REAR WHEEL	02T073	REAR AXLE	100K0394
	02T07401	REAR WHEEL (11.2-24)	100K0394
	02T07402	REAR WHEEL (12.4-24)	100K0394
	02T07404	REAR WHEEL (13.6-16)	100K0394
	02T07405	REAR WHEEL (41X14.00-20)	100K0394
	02T07407	REAR WHEEL (355/80-D20)	100K0394

Item	Page No.	Description	Book
BRAKE	02T075	BRAKE	100K0394
	02T076	BRAKE PEDAL	100K0394
	02T077	BRAKE ROD 1	100K0394
	02T078	BRAKE ROD 2	100K0394
FRONT AXLE AND FRONT WHEEL AND CHASSIS	02T079	FRONT AXLE	100K0394
	02T080	KNUCKLE SHAFT	100K0394
	02T08101	FRONT WHEEL (5.00-15)	100K0394
	02T08102	FRONT WHEEL (23*8.50-12)	100K0394
	02T08103	FRONT WHEEL (25*8.50-14)	100K0394
	02T082	FRONT AXLE FRAME [2WD]	100K0394
	02T089	FRONT WHEEL DRIVE SHAFT	100K0394
STEERING	02T09301	STEERING LINKAGE [2WD]	100K0394
	02T094	STEERING CYLINDER	100K0394
	02T095	STEERING CYLINDER [COMPONENT PARTS]	100K0394
	02T096	STEERING CONTROLLER	100K0394
HYDRAULIC SYSTEM	02T097	STEERING HANDLE	100K0394
	02T098	HYDRAULIC OIL LINE (PS)	100K0394
	02T100	REGULATOR VALVE	100K0394
	02T10101	PTO HYDRAULIC OIL LINE [WITH IND-PTO] [MANUAL T/M TYPE]	100K0394
	02T102	HYDRAULIC PUMP	100K0394
	02T103	HYDRAULIC PUMP [COMPONENT PARTS]	100K0394
	02T104	HYDRAULIC OIL LINE (INLET)	100K0394
	02T105	HYDRAULIC OIL LINE (DELIVERY)	100K0394
	02T106	HYDRAULIC OUTLET BLOCK	100K0394
	02T107	HYDRAULIC CYLINDER	100K0394
	02T108	LIFT ARM	100K0394
	02T109	CONTROL VALVE	100K0394
	02T110	CONTROL VALVE [COMPONENT PARTS]	100K0394
	02T111	FEED BACK LEVER	100K0394
	02T112	POSITION CONTROL LEVER	100K0394
	02T113	DRAFT AND POSITION CONTROL LEVER 1 [OPTION]	100K0394
	02T114	DRAFT AND POSITION CONTROL LEVER 2 [OPTION]	100K0394
	02T115	TOP LINK HOLDER [OPTION]	100K0394
	02T11601	DRAWBAR AND PTO PROTECTOR	100K0394
	02T11602	SWINGING DRAWBAR AND CLEVIS DRAWBAR [OPTION]	100K0394
	02T11701	REMOTE CONTROL VALVE LEVER 1 [OPTION]	100K0394
	02T11702	REMOTE CONTROL VALVE LEVER 2 [OPTION]	100K0394
	02T11703	REMOTE CONTROL VALVE LEVER 3 [OPTION]	100K0394
	02T11801	REMOTE CONTROL VALVE COUPLER 1 [OPTION]	100K0394
	02T11802	REMOTE CONTROL VALVE COUPLER 2 [OPTION]	100K0394
	02T11803	REMOTE CONTROL VALVE COUPLER 3 [OPTION]	100K0394

Item	Page No.	Description	Book
HYDRAULIC SYSTEM	02T119	3-POINT LINKAGE 1 (LOWER LINK)	100K0394
	02T120	3-POINT LINKAGE 2 (LIFT ROD)	100K0394
HOOD(BONNET) AND ROPS	02T121	FRONT GRILLE	100K0394
	02T122	FRONT GRILLE SUPPORT	100K0394
	02T123	HOOD (BONNET)	100K0394
	02T124	SIDE COVER	100K0394
	02T125	SIDE COVER LOWER	100K0394
	02T126	SHUTTER PLATE	100K0394
	02T127	PANEL FRAME	100K0394
	02T128	FENDER	100K0394
	02T129	FLOOR SEAT	100K0394
	02T130	SEAT	100K0394
	02T131	STEP	100K0394
	02T132	ROPS	100K0394
LABELS	02T133	LABEL 1	100K0394
	02T134	LABEL 2	100K0394
ACCESSORIES	02T135	ACCESSORIES AND SERVICE PARTS	100K0394

[Buy now](#)

[Kubota L2900F Tractor Parts Manual PDF](#)

[With Instant Download](#)