

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]


Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

ALL PRODUCT INDEX
L4400DT

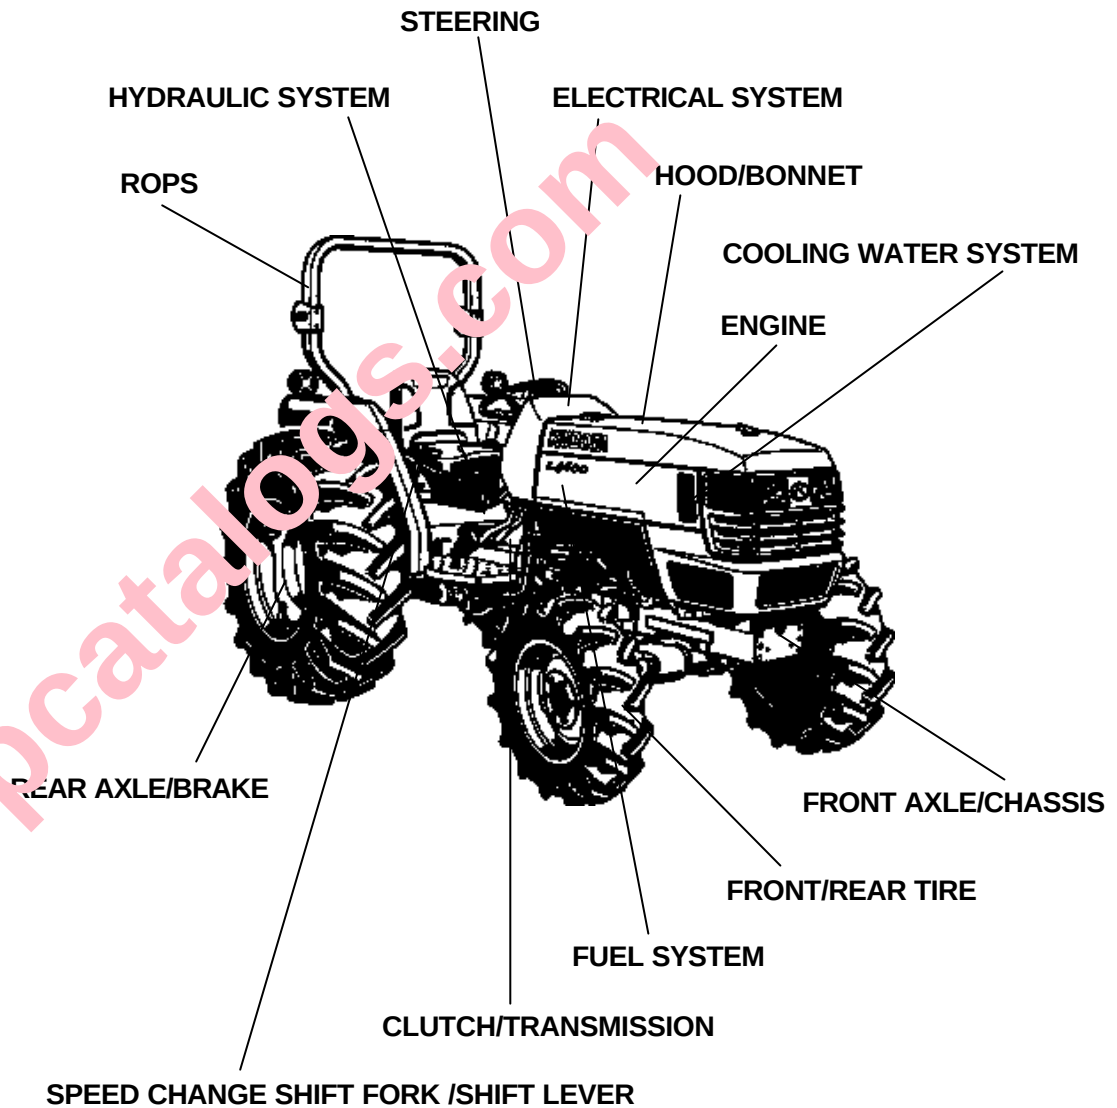

3-POINT LINKAGE/DRAWBAR/HITCH

LABELS

ACCESSORIES AND SERVICE PARTS

OPTION

Item	Part No.	Description	Book
ENGINE	010001	CRANKCASE	100K0825
	010002	OIL PAN	100K0825
	010003	CYLINDER HEAD	100K0825
	010004	GEAR CASE	100K0825
	010005	HEAD COVER	100K0825
	010100	MAIN BEARING CASE	100K0825
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100K0825
	010102	PISTON AND CRANKSHAFT	100K0825
	01010302	FLYWHEEL	100K0825
	010105	FUEL CAMSHAFT	100K0825
	010200	ENGINE STOP LEVER	100K0825
	010202	INJECTION PUMP	100K0825
	010204	GOVERNOR	100K0825
	010205	SPEED CONTROL PLATE	100K0825
	010206	NOZZLE HOLDER AND GLOW PLUG	100K0825
	010207	NOZZLE HOLDER [COMPONENT PARTS]	100K0825
	010500	WATER FLANGE AND THERMOSTAT	100K0825
	010501	WATER PUMP	100K0825
	010600	VALVE AND ROCKER ARM	100K0825
	010601	INLET MANIFOLD	100K0825
	010603	EXHAUST MANIFOLD/MUFFLER	100K0825
	010604	AIR CLEANER	100K0825
	010901	UPPER GASKET KIT	100K0825
	010902	LOWER GASKET KIT	100K0825
	01A010	ACCELERATOR LEVER	100K0825
	01A025	ACCELERATOR LINKAGE	100K0825
FUEL SYSTEM	01A101	FUEL TANK	100K0825
	01A110	FUEL PIPE AND FUEL FILTER	100K0825
COOLING WATER SYSTEM	01A130	FUEL FILTER [COMPONENT PARTS]	100K0825
	01A401	FAN	100K0825
	01A410	WATER PIPE	100K0825
	01A420	RADIATOR	100K0825
ELECTRICAL SYSTEM	01A430	RESERVE TANK	100K0825
	01A515	ALTERNATOR	100K0825
	01A520	ALTERNATOR [COMPONENT PARTS]	100K0825
	01A525	STARTER	100K0825
	01A530	STARTER [COMPONENT PARTS]	100K0825
	01A535	BATTERY	100K0825
	01B102	SWITCH 1 / RELAY	100K0825
	01B103	SWITCH 2 / SENSOR	100K0825
	01B115	PANEL BOARD	100K0825
	01B120	PANEL BOARD [COMPONENT PARTS]	100K0825
	01B30301	HEAD LIGHT [OLD TYPE]	100K0825
	01B30302	HEAD LIGHT [NEW TYPE]	100K0825
	01B311	HAZARD LIGHT	100K0825
	01B312	REAR LAMP	100K0825
	01B501	ELECTRICAL WIRING	100K0825
CLUTCH/TRANSMISSION	01C101	CLUTCH	100K0825
	01C201	CLUTCH LEVER	100K0825
	01C301	CLUTCH PEDAL	100K0825
	01C40102	CLUTCH HOUSING	100K0825

Item	Part No.	Description	Book
CLUTCH/TRANSMISSION	01C410	MID CASE	100K0825
	01C42002	TRANSMISSION CASE	100K0825
	01D101	MAIN SHAFT	100K0825
	01D105	COUNTERSHAFT	100K0825
	01D117	RANGE GEAR SHAFT	100K0825
	01D12502	SPIRAL BEVEL PINION	100K0825
	01D127	REAR DIFFERENTIAL	100K0825
	01D130	PTO COUNTERSHAFT	100K0825
	01D132	PTO CLUTCH	100K0825
	01D133	PTO CLUTCH [COMPONENT PARTS]	100K0825
	01D13502	PTO SHAFT	100K0825
SPEED CHANGE SHIFT FORK /SHIFT LEVER	01D201	MAIN GEAR SHIFT FORK	100K0825
	01D217	RANGE GEAR SHIFT FORK	100K0825
	01D225	DIFFERENTIAL LOCK SHIFT FORK	100K0825
	01E101	MAIN GEAR SHIFT LEVER	100K0825
	01E110	RANGE GEAR SHIFT LEVER	100K0825
	01E112	RANGE GEAR SHIFT ROD	100K0825
	01E120	PTO CLUTCH CONTROL LEVER	100K0825
	01E127	PTO CLUTCH VALVE [COMPONENT PARTS]	100K0825
	01E140	FRONT WHEEL DRIVE LEVER	100K0825
	01E151	REAR AXLE LH	100K0825
REAR AXLE/BRAKE	01E152	REAR AXLE RH	100K0825
	01E161	BRAKE LH	100K0825
	01E162	BRAKE RH	100K0825
	01E165	BRAKE ROD 1 (BRAKE PEDAL)	100K0825
	01E170	BRAKE ROD 2 (BRAKE CAM)	100K0825
	01E201	BRAKE PEDAL	100K0825
FRONT AXLE/CHASSIS	01F10502	FRONT AXLE FRAME	100K0825
	01F120	PROPELLER SHAFT	100K0825
	01F122	FRONT WHEEL DRIVE SHAFT	100K0825
	01F125	FRONT DIFFERENTIAL CASE	100K0825
	01F127	BEVEL GEAR (FRONT)	100K0825
	01F130	DIFFERENTIAL (FRONT)	100K0825
	01F141	FRONT AXLE CASE LH	100K0825
	01F142	FRONT AXLE CASE RH	100K0825
	01F145	DIFFERENTIAL GEAR SHAFT	100K0825
	01F150	FRONT AXLE	100K0825
STEERING	01G101	STEERING HANDLE	100K0825
	01G110	STEERING CONTROLLER	100K0825
	01G11701	STEERING SUPPORT [OLD TYPE]	100K0825
	01G11702	STEERING SUPPORT [NEW TYPE]	100K0825
	01G18002	STEERING CYLINDER	100K0825
	01G18502	STEERING CYLINDER [COMPONENT PARTS]	100K0825
HYDRAULIC SYSTEM	01H120	HYDRAULIC PUMP	100K0825
	01H125	HYDRAULIC PUMP [COMPONENT PARTS]	100K0825
	01H145	REGULATOR VALVE	100K0825
	01H205	HYDRAULIC OIL LINE(INLET)	100K0825
	01H210	HYDRAULIC OIL LINE(DELIVERY)	100K0825
	01H21502	HYDRAULIC OIL LINE (PS)	100K0825
	01H230	PTO HYDRAULIC OIL LINE	100K0825

Item	Part No.	Description	Book
HYDRAULIC SYSTEM	01H235	HYDRAULIC OUTLET BLOCK	100K0825
	01H301	HYDRAULIC CYLINDER	100K0825
	01H320	LIFT ARM	100K0825
	01H330	FEED BACK LEVER	100K0825
	01H405	CONTROL VALVE	100K0825
	01H410	CONTROL VALVE [COMPONENT PARTS]	100K0825
3-POINT LINKAGE/DRAWBAR/HITCH	01H440	POSITION CONTROL LEVER	100K0825
	01J105	TOP LINK	100K0825
	01J110	3-POINT LINKAGE 1 (LOWER LINK)	100K0825
	01J115	3-POINT LINKAGE 2 (LIFT ROD)	100K0825
	01K105	DRAWBAR	100K0825
	01K125	PTO PROTECTOR	100K0825
HOOD/BONNET	01L101	FRONT GRILLE	100K0825
	01L102	HOOD(BONNET) FRONT SUPPORT	100K0825
	01L105	HOOD(BONNET)	100K0825
	01L110	HOOD(BONNET) SIDE	100K0825
	01L120	HOOD(BONNET) SIDE COVER	100K0825
	01L130	SHUTTER PLATE	100K0825
	01L135	HOOD(BONNET) REAR	100K0825
	01L210	FENDER	100K0825
	01L213	FENDER SUPPORT	100K0825
	01L217	FLOOR SEAT COVER / FENDER BRACKET	100K0825
	01L220	SEAT	100K0825
	01L225	STEP	100K0825
ROPS	01L240	TOOL BOX	100K0825
	01L30101	ROPS (RIGID TYPE)	100K0825
	01L30102	ROPS (FOLDABLE TYPE)	100K0825
HOOD/BONNET FRONT/REAR TYPE	01L501	SMV EMBLEM	100K0825
	01P10103	FRONT WHEEL (27*8.50-15)	100K0825
	01P10104	FRONT WHEEL (8.3-16)	100K0825
	01P10105	FRONT WHEEL (10.0-16.5)	100K0825
	01P10106	FRONT WHEEL (27-10.50LL15)	100K0825
	01P11001	REAR WHEEL (14.9-24)	100K0825
	01P11002	REAR WHEEL (44*18-20)	100K0825
	01P11003	REAR WHEEL (17.5L-24)	100K0825
	01R105	LABEL 1 (FRONT)	100K0825
LABELS	01R11002	LABEL 2 (REAR)	100K0825
ACCESSORIES AND SERVICE PARTS OPTION	01S105	ACCESSORIES AND SERVICE PARTS	100K0825
	01T121	FRONT BUMPER (W/G No.MX8068) [OPTION]	100K0825
	01T122	FRONT WEIGHT [OPTION]	100K0825
	01T130	POSITION CONTROL LEVER (WITH DRAFT) [OPTION]	100K0825
	01T135	DRAFT CONTROL LEVER (WITH DRAFT) [OPTION]	100K0825
	01T140	TOP LINK HOLDER (WITH DRAFT) [OPTION]	100K0825
	01T141	3-POINT LINKAGE 1 (LOWER LINK) [OPTION]	100K0825
	01T142	3-POINT LINKAGE 2 (LIFT ROD) [OPTION]	100K0825

[Buy now](#)

[KubotaL4400DT Tractor Parts Manual PDF](#)

[With Instant Download](#)