

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

- REF.No** → The number referring to the part on the picture page of the parts book.
Part No. → The number assigned to this part at the time of printing the parts book.
Part Name → Description of part.
Q'ty → Quantity of part used on that page.
S.No. → Serial number range of the equipment that this part will fit.
 >= Your serial number should be greater than or equal to the number shown.
 <= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.
 = The part shown will work for the older and later serial number.
 NI The part shown is not interchangeable with the other serial number.

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]

Note about Country Codes

The parts books we use in the United States of America may also contain information about a part that would be

different in another country. It is important that you are aware of the country codes in some instances.

Symbol Country

A United States of America

CA Canada

FR France

GR Greece


PO Portugal

AU Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.


L4400H

 Figure Num L4400H

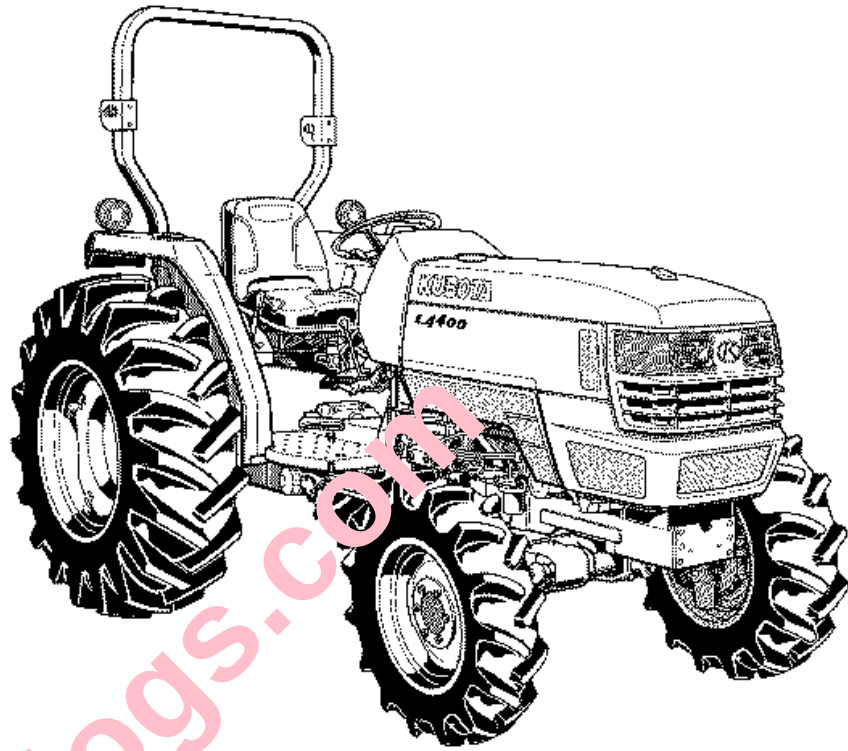

CRANKCASE

 Figure Num 010001

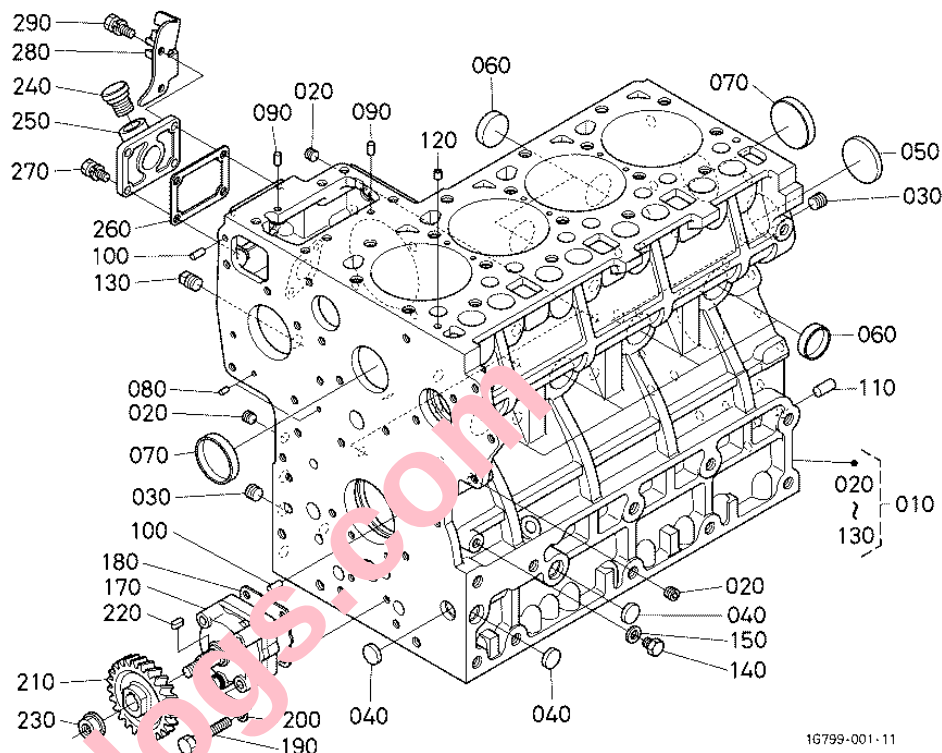

16799-001-11

CRANKCASE


Ref	Part Number	Part Name	Qty	IC	S/N	Lbs	Remarks
010	1G799-01012	COMP.CRANKCASE	1			119.9	
020	15521-96020	PLUG	6			0.006	
030	15521-96030	PLUG	2			0.015	
040	17391-96160	PLUG EXPANSION	3			0.006	
050	16271-96160	PLUG EXPANSION	1			0.055	
060	15221-03380	CAP SEALING	6			0.037	
070	15221-03390	CAP SEALING	2			0.066	

CRANKCASE

Ref	Part Number	Part Name	Qty	IC	S/N	Lbs	Remarks
080	05012-00408	PIN STRAIGHT	2			0.002	
090	05012-00609	PIN STRAIGHT	3			0.006	
100	05012-00612	PIN STRAIGHT	2			0.006	
110	05012-01018	PIN STRAIGHT	1			0.026	
120	15221-33650	PIN PIPE	1			0.008	
130	06312-10020	PLUG	1			0.035	
140	15469-33610	PLUG	1			0.017	
150	15021-33660	GASKET	1			0.002	
170	15471-35013	ASSY PUMP OIL	1			1.21	
180	1A021-35150	GASKET OIL PUMP	1			0.002	
190	01053-50650	BOLT	4			0.024	
200	04512-60060	WASHER SPRING	4			0.002	
210	19202-35660	GEAR OIL PUMP DRIVE	1			0.506	
220	05712-00410	KEY FEATHER	1			0.002	
230	15221-35682	NUT FLANGE	1			0.030	
240	16427-33142	FLANG OIL FILLER	1			0.055	
250	1A021-33110	FLANGE OIL FILLER	1			0.154	
260	1A021-51660	GASKET PUMP COVER	1			0.006	
270	01023-50618	BOLT	2			0.013	
280	1A053-57482	BRACKET ACCEL.CABLE	1			0.169	
290	01023-50622	BOLT	2			0.011	

OIL PAN

 Figure Num 010002

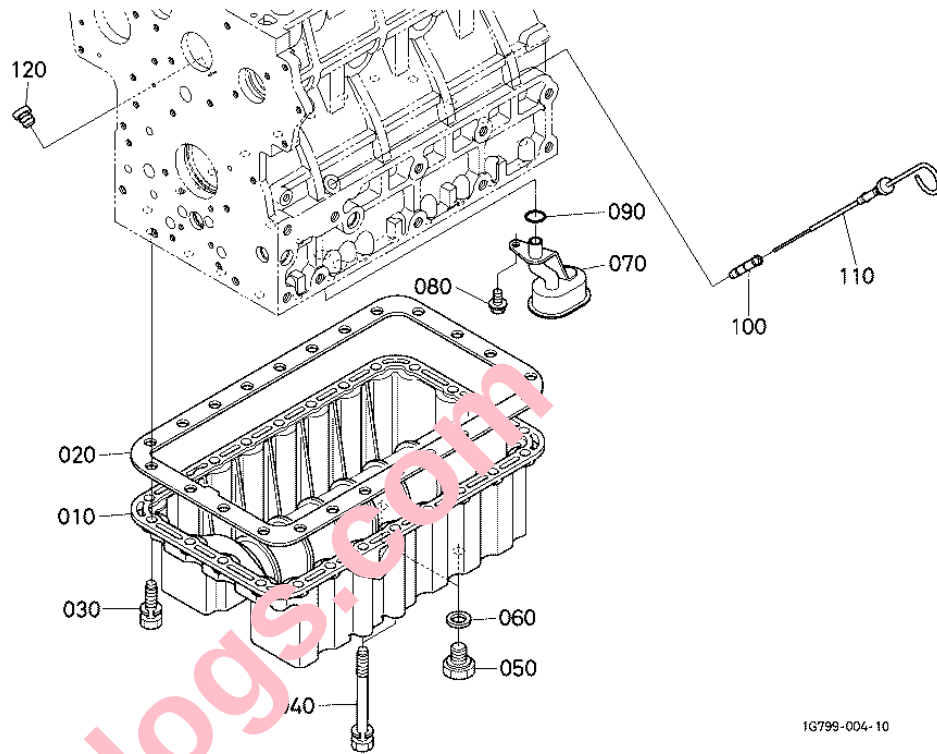

OIL PAN

Ref	Part Number	Part Name	Qty	IC	S/N	Lbs	Remarks
010	17341-01610	OIL PAN	1			9.02	
020	1A091-01620	GASKET OIL PAN	1			0.039	
030	1A091-91010	BOLT	22			0.055	
040	1A091-91020	BOLT	2			0.165	
050	16427-33750	PLUG DRAIN	2			0.066	
060	6C090-58960	GASKET	2			0.004	
070	15411-32110	FILTER OIL	1			0.528	

[Buy now](#)

[Kubota L4400HST Tractor Parts Manual PDF](#)

[With Instant Download](#)