


Linde Electric Truck E 10 Series 334

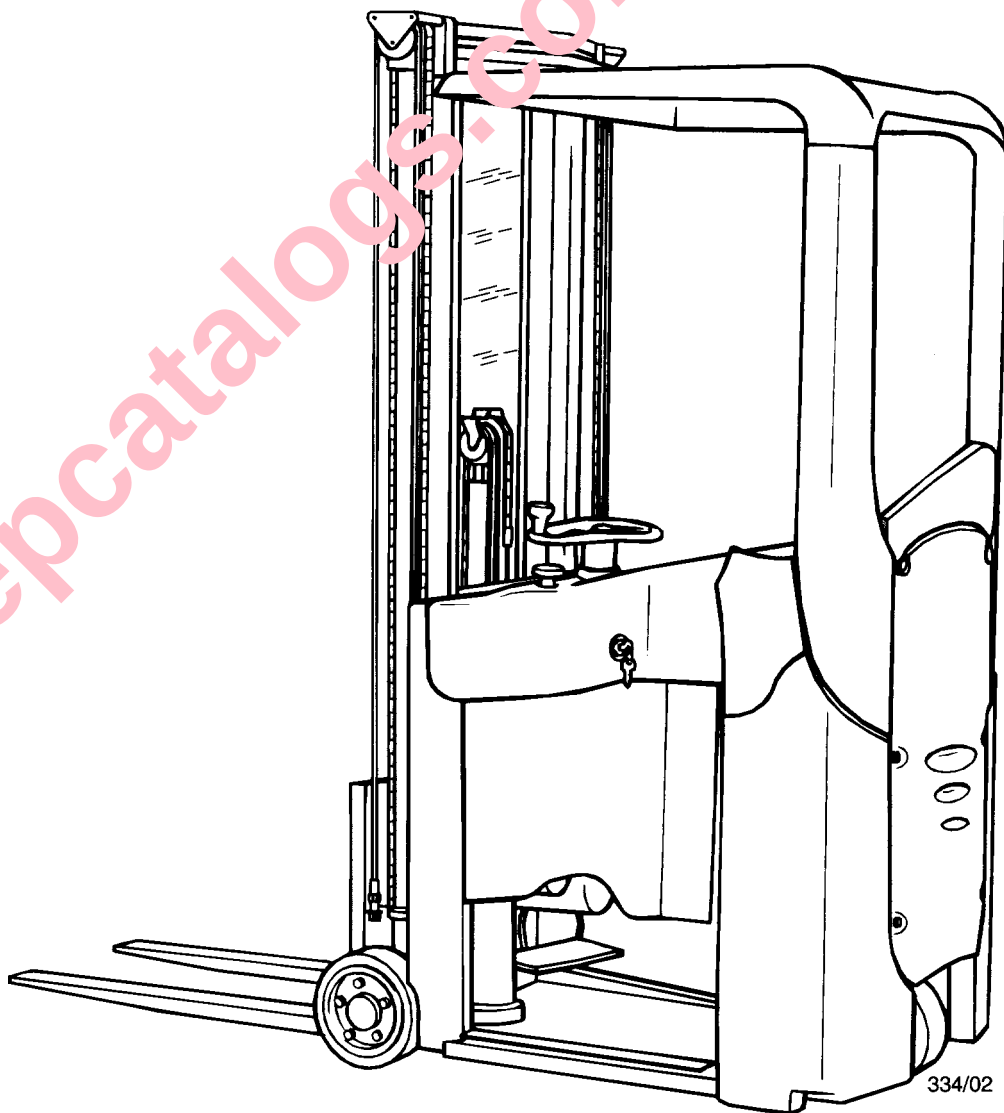

E2 / Register 3
334 804 2411.0999

epcatalogs.com

Service Training

ELECTRIC FORKLIFT TRUCK E 10, SERIES 334

1	Drive - Motor	1
1.1	Travel motor	1
1.1.1	Checking and changing the carbon brushes	1
2	Drive - transmission	1
2.1	Changing the transmission oil	2
2.2	Lubricating the live ring bearing	3
2.3	Mounting the travel motor to the transmission	4
2.4	Transmission assembly	5
3	Vehicle assembly	1
4	Steering system	1
4.1	Adjusting the steering chain tension	2
5	Control elements	1
5.1	Brake control	1
5.1.1	Positions of brake cylinder	3
5.1.2	Adjusting the brake	4
5.1.3	Purging the brake	4
5.2	Multi function handle	4
6	Electrical system	1
6.1	Block diagram E10-01 to 04/97	1
6.2	Digital control 1A1	2
6.3	Location of electrical components	9
6.4	Battery discharge indicator and hour meter	12
6.5	Charger (optional)	13
6.6	Universal Calibration Box UCB 95	15
6.6.1	Programming	16
6.6.2	Function Menu PROGRAM	18
6.6.3	Function Menu TESTER	20
6.6.4	Function menu SAVE	22
6.6.5	Function Menu RESTORE	23
6.6.6	Function Menu ALARM	24

6.6.7	Function Menu PROGRAM VACC	27
6.6.8	Function Menu MOTOR DATA	28
6.6.9	Extended Menus	29
6.6.10	Battery charging	30
6.7	A2 Logic interface	32
6.7.1	Fuses	32
6.7.2	LED`s LOGic interface	32
6.7.3	Connectors	33
6.7.4	Potentiometers	35
6.8	A3 Logic interface	36
6.8.1	Connectors	36
6.8.2	Potentiometers	38
6.9	A4 Logic interface	40
6.10	Description of electrical system functions	42
6.10.1	Switch-on	42
6.10.2	Bleeding the hydraulic brake	43
6.10.3	Forward and reverse travel (FWD - RWD)	44
6.10.4	Lifting	45
6.10.5	Lowering	46
6.10.6	Tilting (optional)	47
6.10.7	Lifting and lowering the driver's platform	48
6.11	Wiring schematic E10 with key switch two stage	50
6.12	Block diagram E10-02/03, Br 334	53
6.13	Digital control 1a1 E10, BR 334	54
6.14	Position of electric components	60
6.15	Battery charge condition gauge and operating hour meter	63
6.16	Battery charger (optional equipment)	64
6.17	Programming	65
6.17.1	Programming with diagnostic unit UCB 98	65
6.17.1.1	Adjustment or alteration of parameters	68
6.17.1.2	Display of voltage values, currents, conditions of control signals	70
6.17.1.3	Saving complete parameter sets	72
6.17.1.4	Transfer of saved parameter sets	73
6.17.1.5	Display of error messages	74
6.17.1.6	Resetting the parameters to factory setting	76
6.17.1.7	Adjustment of multi function lever for travel	77
6.17.1.8	Adjustment of motor to control	78

Service Training

6.17.1.9	Adustment of battery charger to battery	80
6.17.1.10	Activation of certain options	82
6.17.1.11	Adjustment of multi function lever "Lift - Lower"	84
6.17.2	Diagnostics with PC	86
6.17.2.1	Linde interface converter	86
6.17.2.2	Installation of the Diagnostic software "test & Setup"	86
6.17.2.3	Program Setup	88
6.17.2.4	Connection to vehicle	88
6.17.2.5	Program start Linde Program selection	89
6.17.2.6	Starting the Diagnostic program	90
6.17.2.7	The Menus	92
6.17.2.7.1	Main menu "file"	93
6.17.2.7.2	Main menu "utilities"	96
6.17.2.7.3	Main menu "configuration"	103
6.17.2.7.4	Main menu "special"	107
6.17.3	Electric circuit diagram E10 series 334 -02/03	108
7	Hydraulic system	1
7.1	Valve block	2
7.1.1	Adjustment of pressure relief valve	3
7.2	Pump motor	3
7.3	Hydraulic diagram	4
7.4	Hydraulic functions	6
7.4.1	Releasing the brake	6
7.4.2	Lifting	7
7.4.3	Lowering	8
7.4.4	Tilting forward	9
7.4.5	Tilting back	10
7.4.6	Platform up	11
7.4.7	Platform Down	12
7.4.8	Side shift (option)	13
7.4.8.1	Function side shift right	14
7.4.8.2	Function side shift left	15

[Buy now](#)

[Linde Electric Truck E 10 Series 334 Service Training Manual PDF](#)

[With Instant Download](#)