 


MX5100H

Figure Num MX5100H

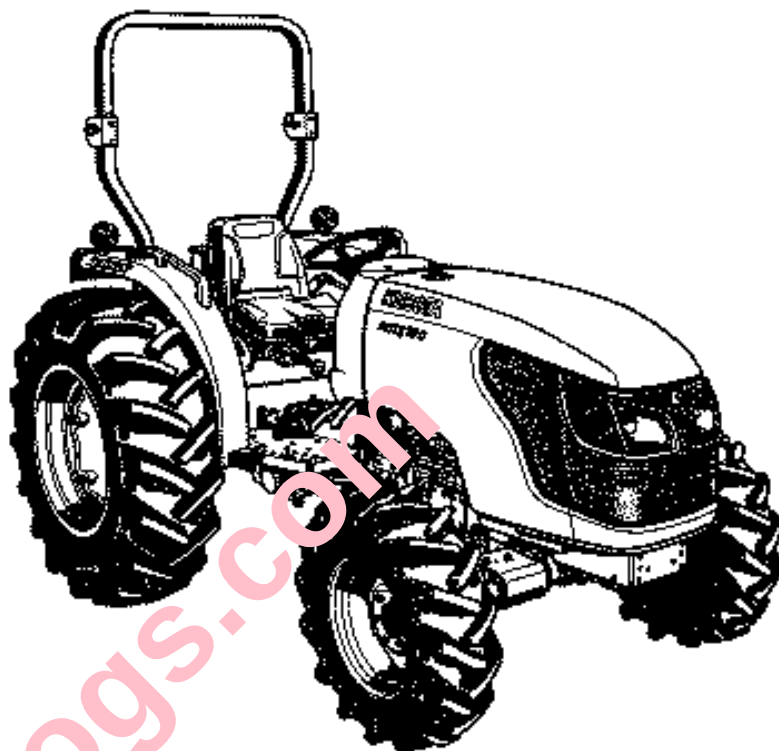

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

- REF.No** → The number referring to the part on the picture page of the parts book.
Part No. → The number assigned to this part at the time of printing the parts book.
Part Name → Description of part.
Q'ty → Quantity of part used on that page.
S.No. → Serial number range of the equipment that this part will fit.
 >= Your serial number should be greater than or equal to the number shown.
 <= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.
 = The part shown will work for the older and later serial number.
 NI The part shown is not interchangeable with the other serial number.

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]

Note about Country Codes

The parts books we use in the United States of America may also contain information about a part that would be

different in another country. It is important that you are aware of the country codes in some instances.

Symbol Country

A United States of America

CA Canada

FR France

GR Greece


PO Portugal

AU Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.


engine

 Figure Num ENGINE

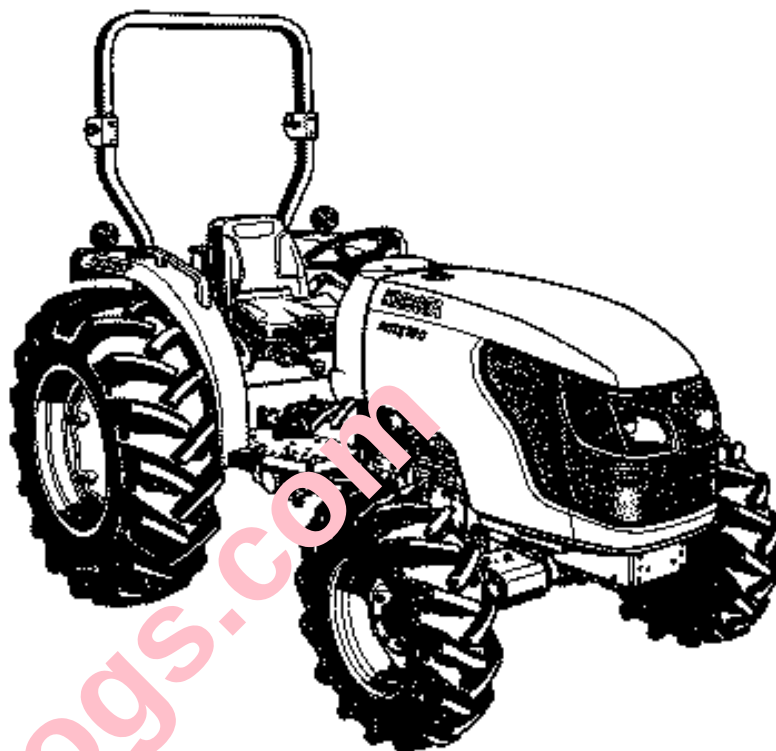

CRANK CASE

 Figure Num 01000102

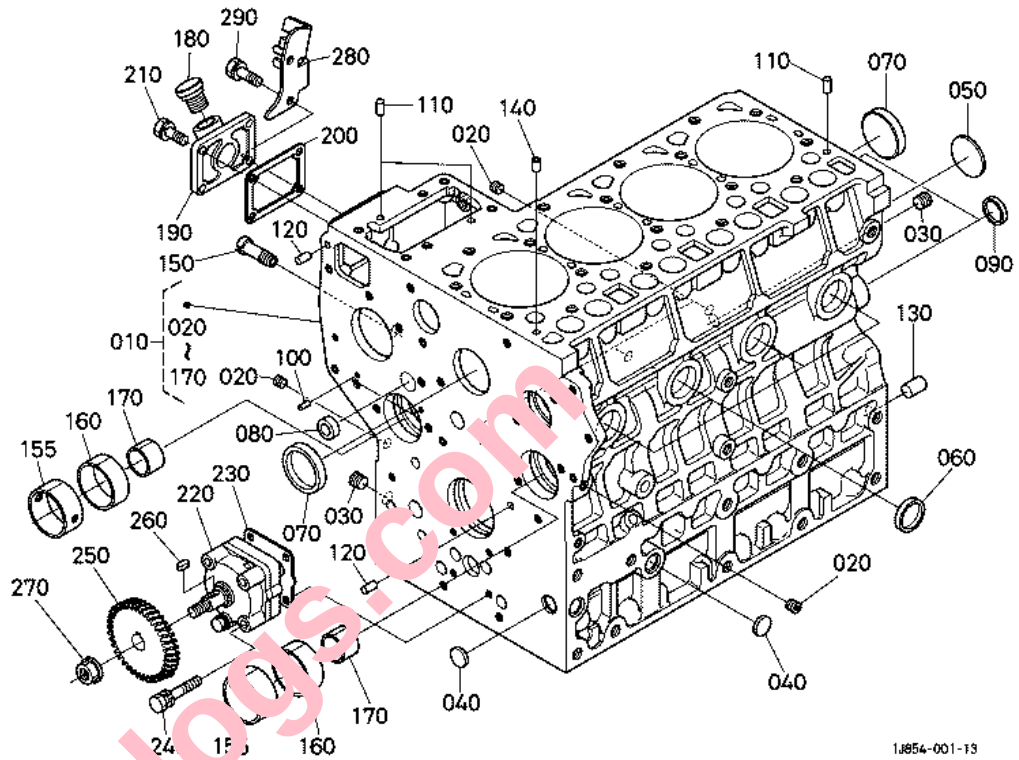

CRANK CASE

Ref	Part Number	Part Name	Qty	IC	S/N	Lbs	Remarks
010	1G928-01015	COMP.CRANKCASE	1			119.9	
020	15521-96020	PLUG	6			0.006	
030	15521-96030	PLUG	2			0.015	
040	17391-96160	PLUG,EXPANSION	3			0.006	
050	16271-96160	PLUG,EXPANSION	1			0.055	
060	15221-03380	CAP,SEALING	6			0.037	
070	15221-03390	CAP,SEALING	2			0.066	

CRANK CASE

Ref	Part Number	Part Name	Qty	IC	S/N	Lbs	Remarks
080	15261-03370	CAP,SEALING	1			0.011	
090	1A091-03380	PLUG,WEIGHT SHAFT	2			0.011	
100	05012-00408	PIN,STRAIGHT	2			0.002	
110	05012-00609	PIN,STRAIGHT	3			0.006	
120	05012-00612	PIN,STRAIGHT	2			0.006	
130	05012-01018	PIN,STRAIGHT	1			0.026	
140	15221-33650	PIN,PIPE	1			0.008	
150	15321-73340	PIPE,WATER RETURN	1			0.035	
155	1A091-26990	METAL,WEIGHT SHAFT	2			0.057	
160	1A091-26980	METAL,WEIGHT SHAFT	2			0.048	
170	1A091-26970	METAL,WEIGHT SHAFT	2			0.026	
180	1J860-33140	PLUG,OIL FILLER	1			0.066	
190	1A021-33110	FLANGE,OIL FILLER	1			0.154	
200	1A021-51660	GASKET,PUMP COVER	1			0.006	
210	01023-50618	BOLT	2			0.013	
220	15471-35013	ASSEMBLY PUMP,OIL	1			1.21	
230	1A021-35150	GASKET,OIL PUMP	1			0.002	
240	01023-50650	BOLT	4			0.033	
250	17301-35663	GEAR,OIL PUMP DRIVE	1			0.473	
260	05712-00410	KEY,FEATHER	1			0.002	
270	15221-35682	NUT,FLANGE	1			0.030	
280	1A053-57482	BRACKET,ACCEL.CABLE	1			0.169	
290	01023-50622	BOLT	2			0.011	

[Buy now](#)

[Kubota MX5100HST Tractor Parts Manual PDF](#)

[With Instant Download](#)