


Service Manual

en

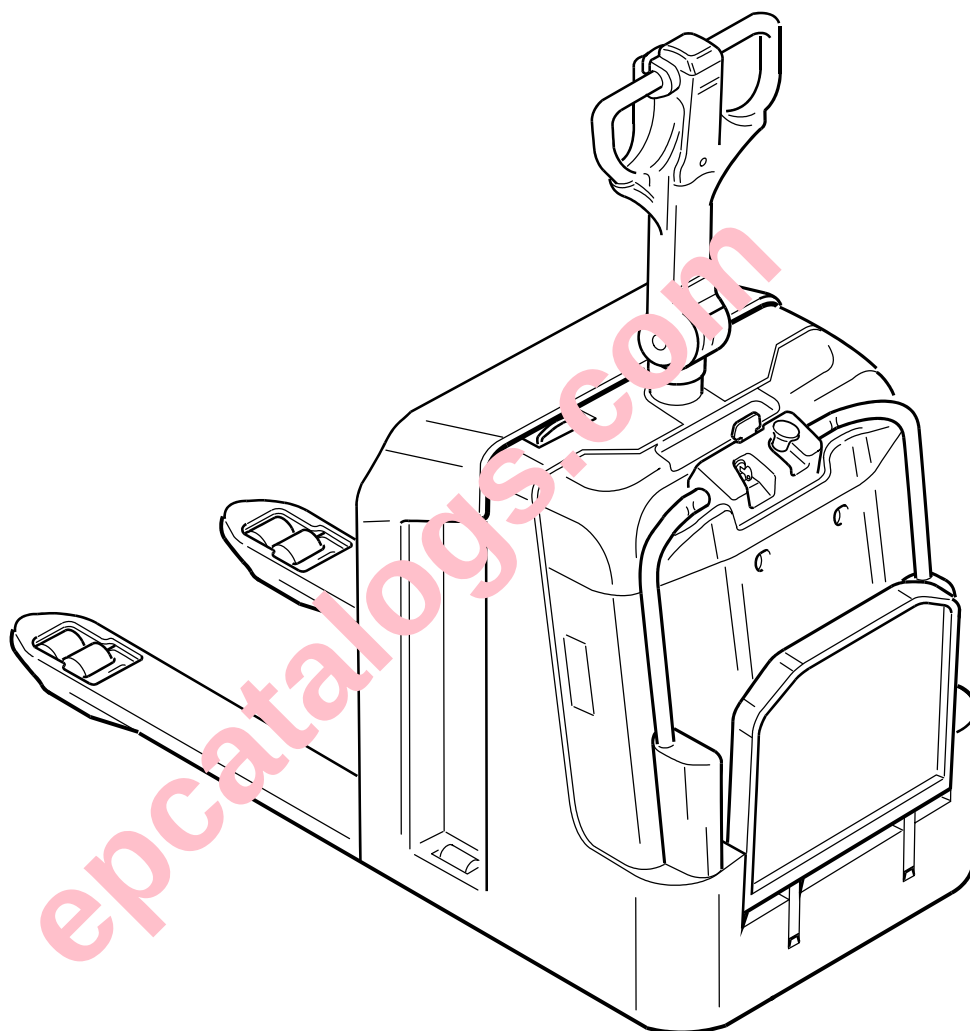

7PLL24

Valid from serial number: 723984--

Order number: 222996-040

Issued: 2005-02-02 ITS

Issue date	Resp.	Changes
2005-02-02	ITS	Completely new issue

This manual covers following truck models:

T-code	Model	Serial number
680	7PLL24	723984-

Table of contents

Valid from serial number 723984--	T-code 680
Order number 222996-040	Date 2005-02-02

1-Table of contents

Technical data – M4 2-1

Installation and maintenance instructions – P1 3-1

Installation of the new truck	1
3.1.1 Lifting the truck	1
3.1.2 Fitting the battery	3
3.1.3 Start up	3
Introduction, maintenance	5
3.2.1 Safety regulations during maintenance work	5
3.2.2 Cleaning and washing	6
3.2.3 Cleaning the exterior	7
3.2.4 Cleaning the motor compartment	7
3.2.5 Electrical components	7
Safe lifting	8

Preventive maintenance – P2 4-1

Maintenance schedule	1
Lubrication chart	7

Oil and grease specification – P3 5-1

Tools – P4 6-1

Super Seal connectors	1
AMP connectors	2
6.2.1 AMP Connectors, 040 series	3
Molex connectors	3
Other tools	4

Table of contents

T-code	Valid from serial number
680	723984--
Date	Order number
2005-02-02	222996-040

Fork carriage – 0380	7-1
Component parts	1
Dismantling the fork carriage	3
Replacing the rollers	5
 Engine suspension – 0450	8-1
Component parts	1
8.1.1 Component List	2
 Electric drive motor – 1760	9-1
Component parts	1
Removing the motor from the truck	3
Refitting the motor in the truck	4
Service and repairs	5
9.4.1 Dismantling the motor	5
9.4.2 Dismantling N-side	6
9.4.3 Dismantling D-side	6
9.4.4 Cleaning	7
Technical data	7
 Mechanical drive gear unit – 2550	10-1
Component parts	2
10.1.1 Technical data	3
Dismantling/Assembly	
Leakage from the upper cover	3
Replacing the drive shaft gasket	4
10.3.1 Dismantling	4
10.3.2 Assembling	5
Replacing wheel bolt	6

Table of contents

Valid from serial number 723984--	T-code 680
Order number 222996-040	Date 2005-02-02

Electromagnetic brake – 3370 11-1

Component parts	1
Dismantling	2
11.2.1 Inspection	2
Assembling	3
Manual release of the brake	3
Adjustment	3
11.5.1 Adjusting the play	3

Steering system – 4000 12-1

Component parts, mechanical steering	1
Component parts, servo steering (Option)....	4
12.2.1 Steering axle, servo steering (Option)	5
Adjustment, steering	9
12.3.1 Adjusting the steering servo	9
12.3.2 Adjusting the steering chain	9
Component parts, tiller arm	10
Adjustment, tiller arm	11
12.5.1 Adjusting the brake microswitch	11
Tiller arm handle	12
Dismantling/Assembly, buttons	14
<i>Change from ignition key to keyboard (2)</i>	<i>14</i>
<i>Change from keyboard to ignition key (2)</i>	<i>14</i>
12.7.1 Replacing the signal button/switch (9, 10)	15
12.7.2 Replacing the lift/lower button (13)	15
12.7.3 Replace the pushbutton (16)	16

Electrical systems – 5000 13-1

Electrical parts	1
Symbol list and electrical diagram	3
13.2.1 Electrical wiring diagram 1(5)	5
13.2.2 Electrical wiring diagram 2(5)	6
13.2.3 Electrical wiring diagram 3(5)	7

[Buy now](#)

[Toyota Truck 7PLL24 Service Manual PDF](#)

[With Instant Download](#)