


# Service Manual

## en

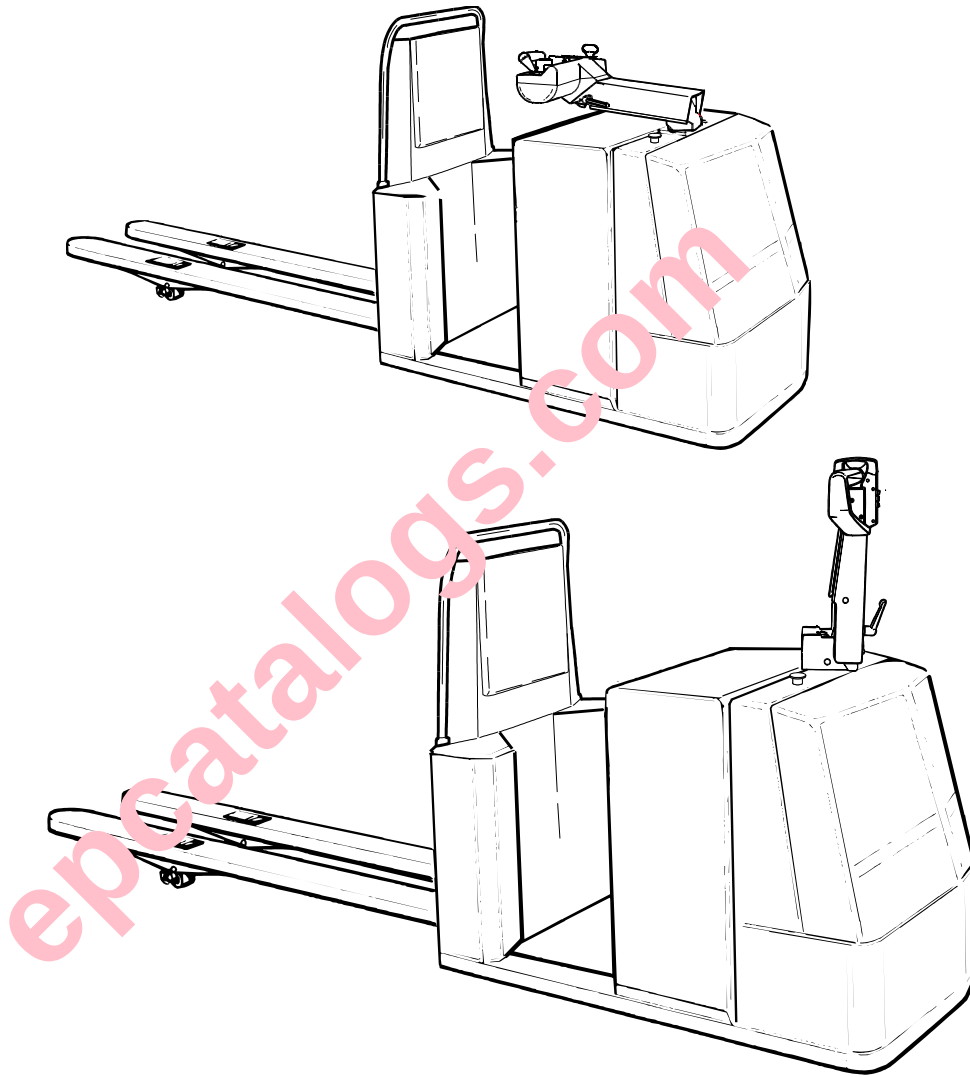

### LOP10

Valid from serial number: 595874-

Order number: 216867-040

Issued: 2004-03-16 ITS

| Issue date | Resp. | Changes                      |
|------------|-------|------------------------------|
| 2004-03-16 | ITS   | Completely new issue (Prel.) |
|            |       |                              |
|            |       |                              |
|            |       |                              |
|            |       |                              |
|            |       |                              |
|            |       |                              |
|            |       |                              |
|            |       |                              |
|            |       |                              |

epcatalogs.com

# Table of contents

|                                            |                           |
|--------------------------------------------|---------------------------|
| <b>Valid from serial number</b><br>595874- | <b>T-code</b><br>348      |
| <b>Order number</b><br>216867-040          | <b>Date</b><br>2004-03-16 |

## 1-Table of contents

|                          |     |
|--------------------------|-----|
| <b>Table of contents</b> | 1-1 |
|--------------------------|-----|

|                                    |     |
|------------------------------------|-----|
| <b>Technical service data – M4</b> | 2-1 |
|------------------------------------|-----|

|                                      |     |
|--------------------------------------|-----|
| <b>Introduction maintenance – P1</b> | 3-1 |
|--------------------------------------|-----|

|                                              |   |
|----------------------------------------------|---|
| Safety regulations with maintenance work.... | 1 |
|----------------------------------------------|---|

|                            |   |
|----------------------------|---|
| Cleaning and washing ..... | 3 |
|----------------------------|---|

|                               |   |
|-------------------------------|---|
| 3.2.1 External cleaning ..... | 3 |
|-------------------------------|---|

|                                            |   |
|--------------------------------------------|---|
| 3.2.2 Cleaning the motor compartment ..... | 3 |
|--------------------------------------------|---|

|                                   |   |
|-----------------------------------|---|
| 3.2.3 Electrical components ..... | 3 |
|-----------------------------------|---|

|                    |   |
|--------------------|---|
| Safe lifting ..... | 4 |
|--------------------|---|

|                                    |     |
|------------------------------------|-----|
| <b>Preventive maintenance – P2</b> | 4-1 |
|------------------------------------|-----|

|                           |   |
|---------------------------|---|
| Maintenance schedule..... | 1 |
|---------------------------|---|

|                                   |   |
|-----------------------------------|---|
| Lubrication table for LOP10 ..... | 7 |
|-----------------------------------|---|

|                                          |     |
|------------------------------------------|-----|
| <b>Oil and grease specification – P3</b> | 5-1 |
|------------------------------------------|-----|

|                                           |   |
|-------------------------------------------|---|
| Approved oil's and grease for LOP10 ..... | 1 |
|-------------------------------------------|---|

|                                    |     |
|------------------------------------|-----|
| <b>Electric drive motor – 1760</b> | 6-1 |
|------------------------------------|-----|

|              |   |
|--------------|---|
| General..... | 1 |
|--------------|---|

|                                  |   |
|----------------------------------|---|
| 6.1.1 Mechanical structure ..... | 2 |
|----------------------------------|---|

|                           |   |
|---------------------------|---|
| 6.1.2 Special tools ..... | 3 |
|---------------------------|---|

|                        |   |
|------------------------|---|
| Removal/assembly ..... | 3 |
|------------------------|---|

|                                               |   |
|-----------------------------------------------|---|
| 6.2.1 Removing the motor from the truck ..... | 3 |
|-----------------------------------------------|---|

|                                               |   |
|-----------------------------------------------|---|
| 6.2.2 Installing the motor in the truck ..... | 4 |
|-----------------------------------------------|---|

# Table of contents

|               |                                 |
|---------------|---------------------------------|
| <b>T-code</b> | <b>Valid from serial number</b> |
| 348           | 595874-                         |
| <b>Date</b>   | <b>Order number</b>             |
| 2004-03-16    | 216867-040                      |

|                                                  |    |
|--------------------------------------------------|----|
| Service/repairs .....                            | 5  |
| 6.3.1 Cleaning .....                             | 5  |
| 6.3.2 Removing the motor .....                   | 6  |
| 6.3.3 Installing the motor .....                 | 7  |
| 6.3.4 Rotor bearing .....                        | 8  |
| <i>Changing the drive end bearing</i> .....      | 8  |
| <i>Changing the commutator end bearing</i> ..... | 9  |
| 6.3.5 Carbon brushes and brush holder .....      | 9  |
| <i>Replacing carbon brushes</i> .....            | 9  |
| 6.3.6 Commutator .....                           | 10 |
| <i>Regrounding the commutator</i> .....          | 10 |
| Storage/transport .....                          | 11 |
| 6.4.1 Storage .....                              | 11 |
| Data .....                                       | 12 |

## Transmission, Gear – 2550 7-1

|                                                 |   |
|-------------------------------------------------|---|
| General description .....                       | 1 |
| 7.1.1 Gear components .....                     | 2 |
| 7.1.2 Gear data .....                           | 3 |
| Dismantling/fitting of gear from/in truck ..... | 4 |
| 7.2.1 Dismantling .....                         | 4 |
| 7.2.2 Fitting .....                             | 5 |
| Filling of oil .....                            | 5 |
| Exchange of oil .....                           | 6 |
| Exchange of drive shaft seal ring .....         | 7 |
| 7.5.1 Dismantling .....                         | 7 |
| 7.5.2 Assembly .....                            | 8 |
| Leakage from the top cover .....                | 9 |

## Electromagnetic brake – 3370 8-1

|                             |   |
|-----------------------------|---|
| General description .....   | 1 |
| 8.1.1 Function LOP10 .....  | 1 |
| Main brake components ..... | 2 |
| Maintenance .....           | 3 |

## Table of contents

|                                            |                           |
|--------------------------------------------|---------------------------|
| <b>Valid from serial number</b><br>595874- | <b>T-code</b><br>348      |
| <b>Order number</b><br>216867-040          | <b>Date</b><br>2004-03-16 |

|                                 |   |
|---------------------------------|---|
| Adjusting the gap .....         | 3 |
| Adjusting the brake force ..... | 4 |
| Replacing the brake disc .....  | 4 |

### **Castor wheel – 3540** 9-1

|                                                           |   |
|-----------------------------------------------------------|---|
| General .....                                             | 1 |
| Main component of castor wheel .....                      | 2 |
| Maintenance .....                                         | 4 |
| 9.3.1 Checking the height of the castor wheel .....       | 4 |
| 9.3.2 Adjusting the castor wheel height .....             | 5 |
| <i>The castor wheel must be adjusted in the following</i> |   |
| <i>circumstances: .....</i>                               | 5 |
| <i>Adjustment procedure .....</i>                         | 5 |
| 9.3.3 Replacing the castor wheel .....                    | 6 |
| <i>Removing the castor wheel assembly .....</i>           | 6 |
| 9.3.4 Changing the wheel .....                            | 6 |
| <i>Removal .....</i>                                      | 6 |
| <i>Assembly .....</i>                                     | 6 |
| 9.3.5 Changing the wheel bearing .....                    | 7 |

### **Tiller arm with servo – 4110** 10-1

|                                          |   |
|------------------------------------------|---|
| General .....                            | 1 |
| Electrical diagram .....                 | 2 |
| Adjustment .....                         | 3 |
| 10.3.1 Instruction for adjustments ..... | 4 |

### **Electric wheel/lever steering – 4310** 11-1

|                          |   |
|--------------------------|---|
| General .....            | 1 |
| Adjustments .....        | 1 |
| Electrical diagram ..... | 2 |

[Buy now](#)

[Toyota LOP10 Service Manual PDF](#)

[With Instant Download](#)