


Service Manual

en

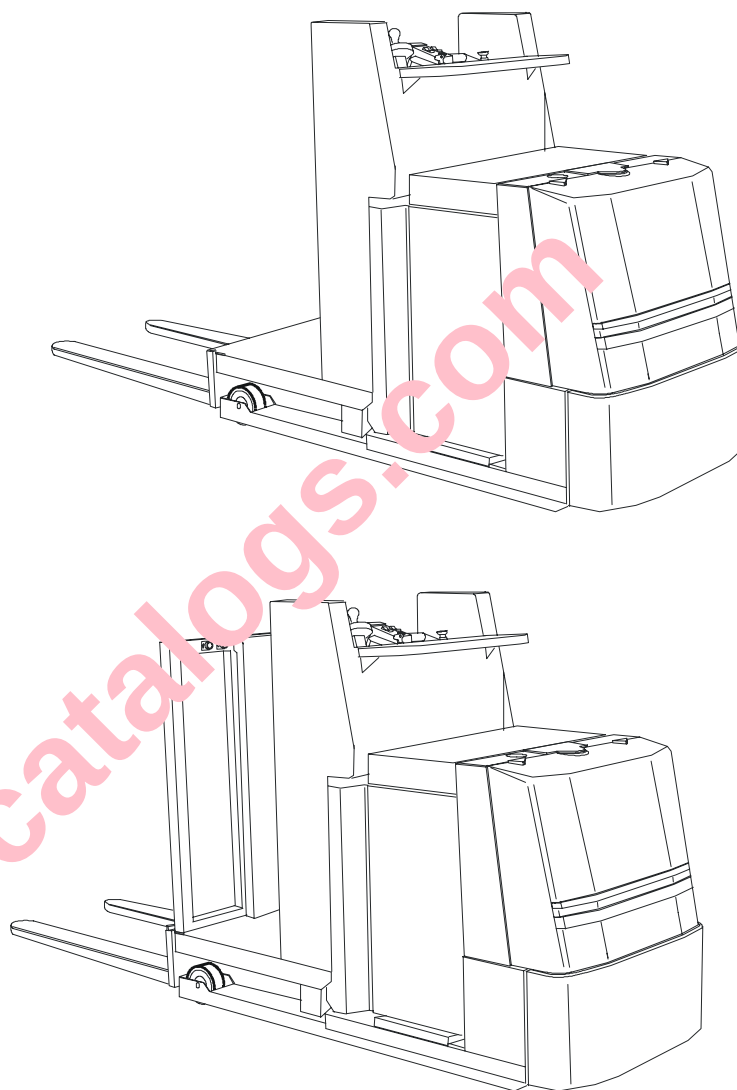

LOP10CW/CF

Valid from serial number: 595874-

Order number: 216869-040

Issued: 2004-03-16 ITS

Issue date	Resp.	Changes
2004-03-16	ITS	Completely new issue (Prel.)

epcatalogs.com

Table of contents

Valid from serial number 595874-	T-code 347, 425
Order number 216869-040	Date 2004-03-16

1-Table of contents

Table of contents	1-1
--------------------------	-----

General product information – M2.1	2-1
---	-----

General description	1
2.1.1 Intended application of the truck	1
2.1.2 Forbidden application of the truck	1
Truck data	2
Truck dimensions	3
Main components	4
Controls and instruments.....	6
Warning and information plates and symbols	7

General product information – M2.2	3-1
---	-----

General description	1
3.1.1 Intended application of the truck	1
3.1.2 Forbidden application of the truck	1
Truck data.....	2
Truck dimensions	3
Main components	4
Controls and instruments.....	6
Warning and information plates and symbols	7

Technical service data – M4	4-1
------------------------------------	-----

Table of contents

T-code	Valid from serial number
347, 425	595874-
Date	Order number
2004-03-16	216869-040

Introduction, maintenance – P1 5-1

Safety regulations with maintenance work.... 1

Cleaning and washing 3

5.2.1 External cleaning 3

5.2.2 Cleaning the motor compartment 3

5.2.3 Electrical components 3

Safe lifting 4

Preventive maintenance – P2 6-1

Maintenance schedule 1

Lubrication table for LOP10CW/CF 6

Oil and grease specification – P3 7-1

Approved oil's and grease for LOP10CW/CF 1

Electric drive motor – 1760 8-1

General 1

8.1.1 Mechanical structure 2

8.1.2 Special tools 3

Removal/assembly 3

8.2.1 Removing the motor from the truck 3

8.2.2 Installing the motor in the truck 4

Service/repairs 5

8.3.1 Cleaning 5

8.3.2 Removing the motor 6

8.3.3 Installing the motor 7

8.3.4 Rotor bearing 8

Changing the drive end bearing 8

Changing the commutator end bearing 9

8.3.5 Carbon brushes and brush holder 9

Replacing carbon brushes 9

8.3.6 Commutator 10

Regrinding the commutator 10

Storage/transport 11

8.4.1 Storage 11

Table of contents

Valid from serial number 595874-	T-code 347, 425
Order number 216869-040	Date 2004-03-16

Data	12
------------	----

Transmission, Gear – 2550 9-1

General description	1
9.1.1 Gear components	2
9.1.2 Gear data	3
Dismantling/fitting of gear from/in truck.....	4
9.2.1 Dismantling	4
9.2.2 Fitting	5
Filling of oil	5
Exchange of oil	6
Exchange of drive shaft seal ring.....	7
9.5.1 Dismantling	7
9.5.2 Assembly	8
Leakage from the top cover	9

Electromagnetic brake – 3370 10-1

General description	1
10.1.1 Function LOP10CW/CF	1
Main brake components	2
Maintenance	3
Adjusting the gap	3
Adjusting the brake force	4
Replacing the brake disc	4

[Buy now](#)

[Toyota LOP10CW/CF Service Manual PDF](#)

[With Instant Download](#)