

epcatalogs.com

Truck terminal

05.10 -


GB

Operating instructions

51147261

05.10

2450  
2475

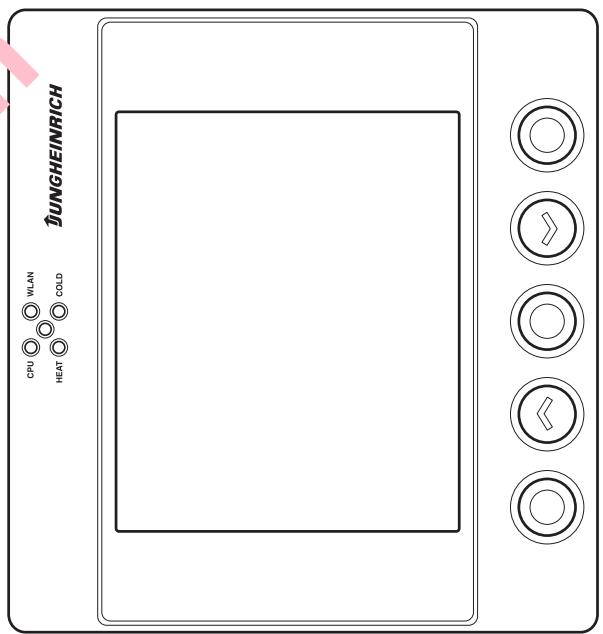

epcatalogs.com

# Foreword

## **Notes on the operating instructions**

The safe operation of the truck terminal requires the application of expertise contained in the present ORIGINAL OPERATING INSTRUCTIONS. The information is presented in a clear and concise manner. The chapters are arranged by letter and the pages are numbered continuously.

Our truck terminals are subject to ongoing development. We reserve the right to alter the design, features and technical aspects of the equipment. No guarantee of particular features of the truck should therefore be assumed from the present operating instructions.

## **Safety notices and text mark-up**

Safety instructions and important explanations are indicated by the following graphics:



Indicates an extremely hazardous situation. Failure to comply with this instruction will result in severe irreparable injury and even death.



Indicates an extremely hazardous situation. Failure to comply with this instruction may result in severe irreparable injury and even death.



Indicates a hazardous situation. Failure to comply with this instruction may result in slight to medium injury.

**NOTE**

copy right

Copy right of these operating instructions remains with JUNGHEINRICH AG.

**Jungheinrich Aktiengesellschaft**

Am Stadtgraben 135  
22047 Hamburg, Germany

Tel: +49 (0) 40/6948-0

[www.jungheinrich.com](http://www.jungheinrich.com)

# Table of Contents

|     |   |    |
|-----|---|----|
| A   | Cover Use and Application .....                         | 7  |
| 1   | General .....   | 7  |
| 2   | Approved application conditions .....                   | 7  |
| 3   | Proprietor responsibilities .....                       | 8  |
| B   | Description of the truck terminal .....                 | 9  |
| 1   | Application .....                                       | 9  |
| 2   | Assembly description .....                              | 10 |
| 2.1 | Truck terminal 2450 .....                               | 10 |
| 2.2 | Truck terminal 2475 .....                               | 11 |
| 3   | Technical Specifications .....                          | 12 |
| 3.1 | Performance data .....                                  | 12 |
| 3.2 | Dimensions / weight .....                               | 13 |
| 3.3 | Conditions of use .....                                 | 13 |
| 4   | Connections / interfaces .....                          | 14 |
| 4.1 | Exposing the connections / interfaces .....             | 14 |
| 4.2 | Truck terminal 2450 .....                               | 15 |
| 4.3 | Truck terminal 2475 .....                               | 16 |
| 4.4 | Covering the connections / interfaces .....             | 17 |
| 5   | Pin assignment of the power supply plug connector ..... | 17 |
| 5.1 | Truck terminal 2450 .....                               | 17 |
| 5.2 | Truck terminal 2475 .....                               | 17 |
| 6   | Data plate .....  | 18 |
| 6.1 | Truck terminal 2450 .....                               | 18 |
| 6.2 | Truck terminal 2475 .....                               | 18 |

[Buy now](#)

[JUNGHEINRICH Truck terminal Operating Instructions PDF](#)

[With Instant Download](#)