

epcatalogs.com


IPC

08.10 -

Operating instructions

51192350

08.10

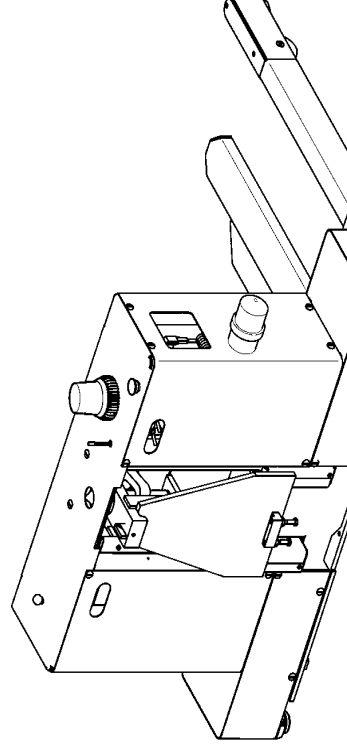

# Foreword

Safe operation of the fork lift truck requires specific knowledge which is imparted by the present operating instructions. The information is presented in concise and clearly laid-out form. The individual chapters are arranged in alphabetical order and every chapter starts with page 1. The individual pages are identified by the chapter letter and the page number.

Example: Page B2 is the second page of chapter B.

Various truck variants are described in these operating instructions. During operation and maintenance work, pay attention that the description appropriate to the truck type is used.

Safety instructions and important notes are identified by the following pictograms:



Used before safety instructions that have to be observed in order to prevent danger to personnel.



Used before notes that have to be observed in order to prevent damage to equipment.



Used before general notes and explanations.

- Used to indicate standard equipment.
- Used to indicate optional equipment.

# Table of Contents

|     |                                                                  |     |
|-----|------------------------------------------------------------------|-----|
| A   | Correct use and application of the truck                         |     |
| B   | Description of the truck                                         |     |
| 1   | Design and Application                                           | B 1 |
| 2   | Description of assembly groups and functions                     | B 2 |
| 2.1 | Truck                                                            | B 3 |
| 3   | Technical data                                                   | B 4 |
| 3.1 | Performance data for standard trucks (IPC load carriage)         | B 4 |
| 3.2 | Dimensions                                                       | B 4 |
| 3.3 | Truck types / pallet formats (stacking depth underlined)         | B 5 |
| 3.4 | EN standards                                                     | B 7 |
| 3.5 | Conditions for application                                       | B 7 |
| 4   | Label positions and identification plates                        | B 8 |
| 4.1 | Truck identification plate                                       | B 9 |
| 4.2 | Capacity Plate                                                   | B 9 |
| C   | Transportation and commissioning                                 |     |
| 1   | Loading on lift trucks                                           | C 1 |
| 2   | Mounting the docking station at the lift truck                   | C 1 |
| 3   | Commissioning                                                    | C 2 |
| D   | Battery - Servicing, recharging, replacement                     |     |
| 1   | Safety regulations governing the handling of lead-acid batteries | D 1 |
| 2   | Battery types                                                    | D 2 |
| 3   | Battery charge condition                                         | D 2 |
| 4   | Charging the battery with AC 230 V                               | D 3 |

|       |                                                                                                                                                                       |      |
|-------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| 4     | Operating the industrial truck (IPC load carriage) .....                                                                                                              | E 5  |
| 4.1   | Safety regulations applicable when operating the truck .....                                                                                                          | E 5  |
| 4.2   | Picking up the device .....                                                                                                                                           | E 6  |
| 4.3   | Travelling .....                                                                                                                                                      | E 7  |
| 4.4   | Picking up a pallet from the ground .....                                                                                                                             | E 7  |
| 4.5   | Stacking a pallet .....                                                                                                                                               | E 7  |
| 4.5.1 | Introducing and removing the IPC load carriage to the<br>pallet channel (in channel: automatic mode)<br>[not: for stacking the last pallet in the channel] .....      | E 7  |
| 4.5.2 | Stacking the furthest pallet in the channel [manual mode] .....                                                                                                       | E 10 |
| 4.6   | Retrieving a pallet .....                                                                                                                                             | E 10 |
| 4.6.1 | Introducing and removing the IPC load carriage to the<br>pallet channel (in channel: automatic mode)<br>[not for retrieving the furthest pallet in the channel] ..... | E 11 |
| 4.6.2 | Retrieving the furthest pallet in the channel [manual mode] .....                                                                                                     | E 11 |
| 4.7   | Adjusting the pallet stop (option) .....                                                                                                                              | E 12 |
| 4.8   | Stacking and Retrieving Pallets on Contact .....                                                                                                                      | E 12 |
| 4.9   | Disconnecting the IPC load carriage from the truck –<br>safe parking .....                                                                                            | E 13 |
| 4.9.1 | Parking in the rack: .....                                                                                                                                            | E 13 |
| 4.9.2 | Parking on the ground: .....                                                                                                                                          | E 13 |
| 4.10  | Status and request messages .....                                                                                                                                     | E 13 |
| 4.11  | IPC spare fork instructions (assembly status: ETV coupling) .....                                                                                                     | E 14 |
| 4.12  | Quick reference card .....                                                                                                                                            | E 15 |
| 4.13  | Operating instructions for the Jungheinrich IPC rack .....                                                                                                            | E 16 |
| 4.14  | Jungheinrich IPC rack “FIFO” operating mode (○) .....                                                                                                                 | E 19 |
| 4.15  | Rescuing a IPC truck from the channel (IPC load carriage) .....                                                                                                       | E 21 |

## F Maintenance of the fork lift truck

|   |                                                          |     |
|---|----------------------------------------------------------|-----|
| 1 | Operational safety and environmental protection .....    | F 1 |
| 2 | Safety regulations applicable to truck maintenance ..... | F 1 |

|     |                                            |      |
|-----|--------------------------------------------|------|
| 7.1 | Fault location and error recognition ..... | F 8  |
| 7.2 | Fault location .....                       | F 8  |
| 8   | Error messages .....                       | F 9  |
|     | Final de-commissioning, disposal .....     | F 12 |

[Buy now](#)

[JUNGHEINRICH Truck IPC Operating Instructions PDF](#)

[With Instant Download](#)