


epcatalogs.com

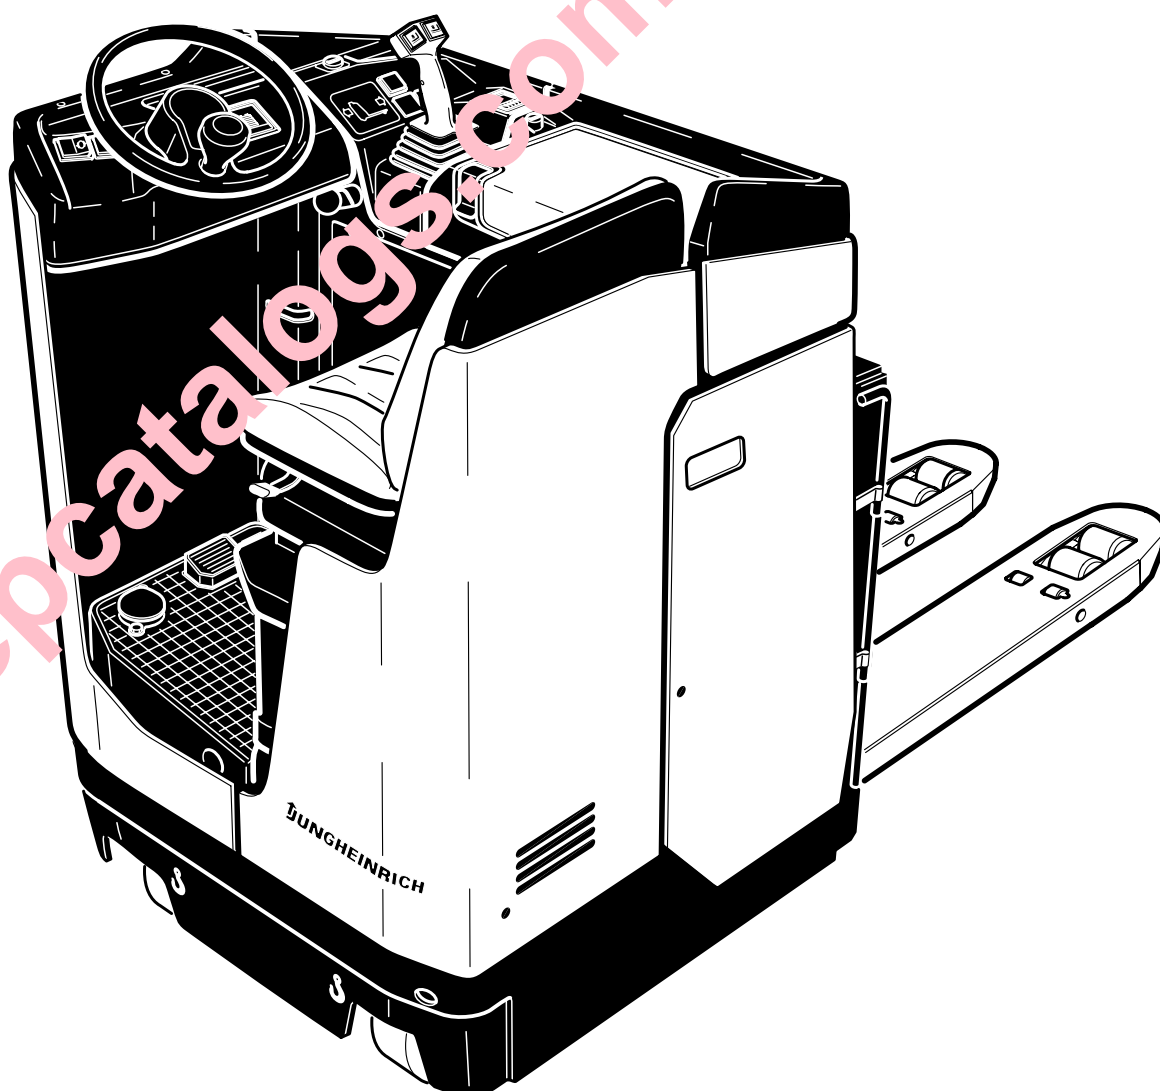

Operating instructions
10001339
09.97



EKE

20
02.94-

Foreword

The present ORIGINAL OPERATING INSTRUCTIONS are designed to provide sufficient instruction for the safe operation of the industrial truck. The information is provided clearly and concisely. The chapters are arranged by letter. Each chapter starts with page 1. The page identification consists of a chapter letter and a page number. For example: Page B 2 is the second page in chapter B.

The operating instructions detail different truck models. When operating and servicing the truck, make sure that the instructions apply to your truck model.

Safety instructions and important explanations are indicated by the following graphics:



Used before safety instructions which must be observed to avoid danger to personnel.



Used before notices which must be observed to avoid material damage.



Used before notices and explanations.



Used to indicate standard equipment.



Used to indicate optional equipment.

Our trucks are subject to ongoing development. Jungheinrich reserves the right to alter the design, equipment and technical features of the truck. No guarantee of particular features of the truck should therefore be assumed from the present operating instructions.

Copyright

Copyright of these operating instructions remains with *JUNGHEINRICH AG*

Jungheinrich Aktiengesellschaft

Am Stadtrand 35
D-22047 Hamburg - Germany

Telephone: +49 (0) 40/6948-0

www.jungheinrich.com

Table of contents

A	Correct use and application of the truck	A1
B	Truck description	
1	Application	B1
2	Assemblies	B2
3	Technical data	B3
3.1	Performance data for standard trucks	B3
3.2	Dimensions	B4
3.3	EN standards	B5
3.4	Conditions for application	B5
4	Marking positions and identification labels	B6
4.1	Truck identification plate	B7
C	Transportation and commissioning	
1	Transportation by train	C1
2	Commissioning	C1
3	Moving the truck with the drive unit inoperative	C2
D	Battery Servicing, recharging, replacement	
1	Safety regulations governing the handling of lead-acid batteries	D1
2	Battery types	D2
3	Exposing the battery	D2
3.1	Trucks manufactured until September '96	D2
3.2	Trucks manufactured from October '96 onwards	D2
4	Charging the battery	D3
5	Removing and installing the battery	D4
6	Combined instrument	D5
E	Operation	
1	Safety regulations governing the operation of the fork-lift truck	E1
2	Description of the operating controls and indicating instruments	E2
3	Start-up of truck	E4
4	Operation of the fork-lift truck	E6
4.1	Safety regulations applicable when operating the truck	E6
4.2	Driving, steering, braking	E7
4.3	Picking up and setting down loads	E9
4.4	Rendering the truck safe when parking	E9
4.5	Fault locating operations	E10

F	Maintenance of the fork-lift truck	
1	Operational safety and environmental protection	F1
2	Safety regulations applicable to truck maintenance	F1
3	Servicing and inspection	F3
4	Servicing check list EKE	F4
5	Lubricating schedule EKE	F6
5.1	Fuels and oils	F7
6	Instructions for the servicing operations	F8
6.1	Preparing the truck for the performance of servicing and maintenance operations	F8
6.2	Tilting up the armrest	F8
6.3	Opening the battery door and the rear hood	F9
6.4	Opening the hood	F9
6.5	Checking the electric fuses	F10
6.5.1	Trucks manufactured until September '96	F10
6.5.2	Trucks manufactured from October '96 onwards	F11
6.6	Recommissioning the truck	F12
7	Decommissioning of the fork-lift truck	F12
7.1	Operations to be performed prior to decommissioning	F12
7.2	Measures to be taken during decommissioning	F12
7.3	Recommissioning the truck	F13
8	Safety checks to be performed at regular intervals and following any untoward incidents (Ⓓ: Accident pre- vention check according to VGB 36)	F13

A Correct use and application of the truck



The „Guidelines for the Correct Use and Application of Industrial Trucks“ (VDMA) are included in the scope of delivery for this truck. The guidelines are part of these operating instructions and must always be heeded. National regulations are fully applicable.

The fork-lift truck described in these operating instructions is a truck that is suitable for lifting and transporting loads.

It must be used, operated and maintained according to the information in these operating instructions. Any other uses are outside the design envelope and can lead to injury to persons or damage to equipment and property. Above all, overloading caused by excessively heavy or unbalanced loads must be avoided. The max. admissible load to be picked up is indicated on the identification plate or load diagram label shown on the truck. The fork-lift truck must not be operated in spaces subject to fire or explosion hazards, or in spaces where corrosive or very dusty atmospheres prevail.

Duties of the user: A „user“ within the meaning of these operating instructions is defined as any natural or legal person who either uses the fork-lift truck himself, or on whose behalf it is used. In special cases (e.g. leasing or renting), the user is considered the person, who, in accordance with existing contractual agreements between the owner and the user of the fork-lift truck, is charged with the observance of the operating duties.

The user must ensure that the truck is not abused and only used within its design limits and that all danger to life and limb of the operator, or third parties, is avoided. In addition to this, it must be ensured that the relevant accident prevention regulations and further safety-related provisions, as well as the operating, servicing and maintenance guidelines, are observed. The user must also ensure that all persons operating the truck have read and understood these operating instructions.



If these Operating Instructions are not observed the warranty becomes void. The same applies if improper works are carried out at the device by the customer and/or third parties without permission of our Customer Service.

Mounting of attachments: The mounting or installation of any attachments which will interfere with, or supplement, the functions of the truck is permitted only after written approval by the manufacturer has been obtained. If necessary, the approval of local authorities has to be obtained.

Any approval obtained from local authorities does not, however, make the approval by the manufacturer unnecessary.

[Buy now](#)

[JUNGHEINRICH Truck EKE Operating Instructions PDF](#)

[With Instant Download](#)