

CURSOR TIER 3 SERIES

Industrial application

C87

C87 ENT X - CURSOR 87 TE X

Technical and Repair manual

This publication provides unit and relevant component repair data, specifications, instructions and methodologies.

This publication has been drawn up for qualified and specialised personnel.

Before performing any operation check that the part relevant to the unit on which you must work is available along with all safety devices for accident-prevention, such as, goggles, helmet, gloves, shoes, etc. and hoisting and transporting equipment.

Operations are to be performed by following the indications included here, using the special equipment indicated and assuring proper repair, compliance with schedule and operator's safety requirements.

Each repair must aim to restore operating efficiency and safety in compliance with the FPT provisions.

FPT cannot be held liable for modifications, alterations or other interventions non authorised by FPT on the vehicle and if the unit is warranted the above mentioned interventions will cause its expiration.

FPT is not liable for repairing interventions.

FPT will provide further details required to carry out the interventions and all the instructions that are not included on this publication.

Data included in this publication may not be up-to-date therefore subject to Manufacturer's modifications that can be added at any time for technical or commercial purposes and also to meet new law regulations in other Countries.

If issues on this publication differ from what is actually noticed on the unit, please get in touch with the FPT network before starting any intervention".

It is forbidden to copy this text or any of its parts and all illustrations included.

Produced by:



B.U. TECHNICAL PUBLISHING
Iveco Technical Publications
Lungo Stura Lazio, 15/19
10156 Turin - Italy

F2C CURSOR ENGINES

Cursor F2C

Part 1

Cursor engines application G-Drive

Part 2

epcatalogs.com

epcatalogs.com

Introduction

	Page
PREFACE TO USER'S GUIDELINE MANUAL	3
SYMBOLS	3
<input type="checkbox"/> Warnings	3
<input type="checkbox"/> Service operations	3
GENERAL WARNINGS	5
GENERAL WARNINGS ON THE ELECTRIC SYSTEM	7
<input type="checkbox"/> Bonding and screening	8
OPTIONAL ELECTRICAL AND MECHANICAL PARTS INSTALLATIONS	9
CONVERSIONS BETWEEN THE MAIN UNITS OF MEASUREMENT OF THE INTERNATIONAL SYSTEM AND MOST USED DERIVED QUANTITIES	9
KEY OF LECTURE OF THE HEADINGS AND FOOTNOTES	10

[Buy now](#)

[Iveco Engines C87 ENT X - Cursor 87 TE X Technical & Repair Manual
PDF](#)

[With Instant Download](#)