

Solar 220LC-V

Shop Manual

2023-7115AE

Serial Number 0001 and Up

Danco reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

epcatalogs.com



Product Label



Instructions

**Trim Out The Label Along
The Lines And Insert Into
Pocket On The Binder Spine**

epcatalogs.com

epcatalogs.com

TABLE OF CONTENTS

Safety

Track Excavator Safety.....	S0102000
-----------------------------	----------

Specifications

Specifications for Solar 220LC-V.....	S0205000
---------------------------------------	----------

General Maintenance

General Maintenance Procedures.....	S0302000
Standard Torques.....	S0309000

Upper Structure

Cab.....	S0402000
Counterweight.....	S0403000
Fuel Tank.....	S0405000
Fuel Transfer Pump.....	S0405500
Swing Bearing.....	S0407000
Swing Reduction Gear box.....	S0408010

Lower Structure and Chassis

Track Assembly.....	S0505030
---------------------	----------

Engine and Drive Train

Air-Conditioner.....	S0605010
Drive Coupling (Main Pump).....	S0609000

Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment.....	S0702070
Accumulator.....	S0703000
Center Joint (Swivel).....	S0704010
Cylinders.....	S0705000

[Buy now](#)

[Daewoo Daioo Doosan Solar Series Track Excavators Shop + Operation
Maintenance Manuals PDF](#)

[With Instant Download](#)