

Concrete Pump


Used With Remote
Attachment Control



Bobcat®

Service Manual

S/N 235400101 & Above

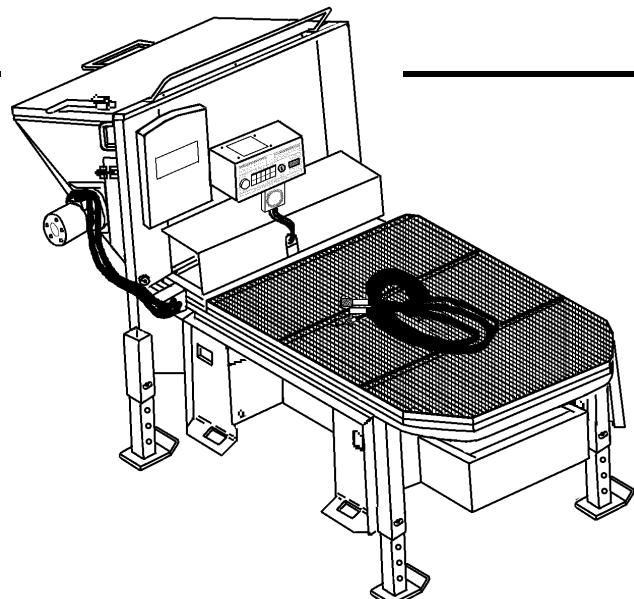

epcatalogs.com

MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT



B-10731a

- ⚠ Never service attachments without instructions. See Operation & Maintenance Manual and Attachment Service Manual.
- ⚠ Cleaning and maintenance are required daily.
- ⚠ Never service or adjust attachment with the engine running unless instructed to do so in manual.
- ⚠ Always lower the attachment to the ground before lubricating or servicing.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.
- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Keep body, loose objects and clothing away from moving parts, electrical contacts, hot parts and exhaust.
- ⚠ Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.

MSW30-0805



ALPHABETICAL INDEX

AGITATOR	30-60-1
AGITATOR CONTROL VALVE.....	20-11-1
AGITATOR HYDRAULIC MOTOR	20-50-1
ATTACHMENT DELIVERY REPORT	III
CONCRETE TUBES	30-20-1
GLOSSARY OF HYDRAULIC SYMBOLS FOR ATTACHMENTS.....	SPEC-40-1
HOPPER	30-70-1
HOPPER CLEAN-OUT	30-90-1
INSPECTION	10-20-1
IDENTIFICATION.....	IV
LUBRICATION	10-30-1
OUTLET HOUSING	30-30-1
PISTON CUP REPLACEMENT	30-10-
PRESSURE GAUGE	20-10-1
PUMP CONTROL VALVE	20-10-
PUMP CYLINDERS	20-20-1
REMOTE ATTACHMENT CONTROL.....	10-10-1
REMOTE CONTROL.....	30-50-1
SERIAL NUMBER LOCATION.....	III
SPECIFICATIONS	SPEC-10-1
SWING VALVE AND CRANK ARM.....	30-80-1
SWING VALVE CYLINDER.....	20-30-1
SWING VALVE PROXIMITY SENSORS	40-20-1
TROUBLESHOOTING.....	10-10-1
WEAR PLATE	30-40-1

[Buy now](#)

[Bobcat Concrete Pump Service Manual PDF](#)

[With Instant Download](#)