


Service Manual E80 Excavator

S/N AETB11'0' & Above S/N AET3 1001 & Above

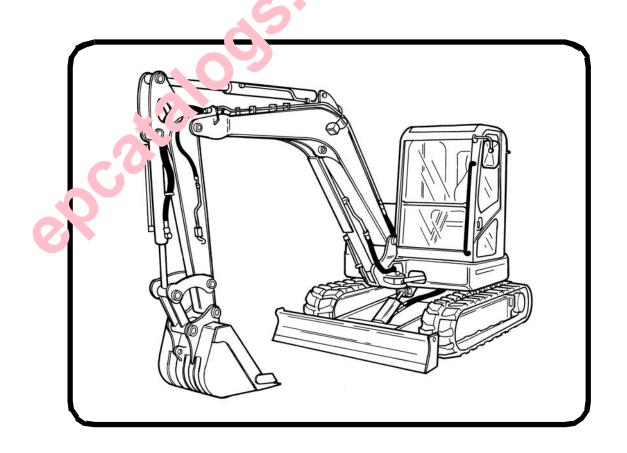




MAINTENANCE SAFETY

WARNING


Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death. W-2003-0807




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

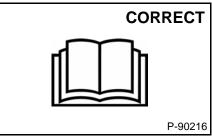

Never service the Bobcat Excavator without instructions.

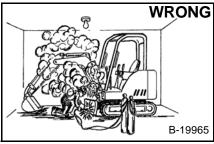

Have good ventilation wher welding or grinding painted it rts Wear dust mask when grind g painted parts. Toxic dust 2 can be produced.

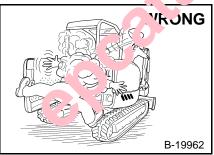


Stop, cool and clean engine of flammable materials before checking fluids.


Never service or adjust machine with the engine running unless instructed to do so in the manual.

Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.


Never fill fuel tank with engine running, while smoking, or when near open flame.

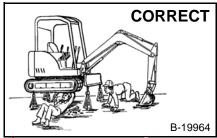

Use the correct produre to lift and support the ex vat

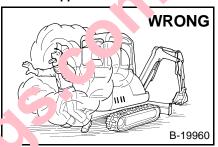

ant exhaust to outside when engine must be run for service. Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.

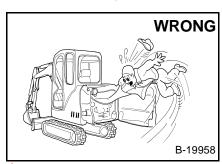


Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.

Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protections approved for type of welding.

Keep tailgate closed except for service. Close and latch tailgate before operating the excavator.



Cleaning and maintenance required daily.

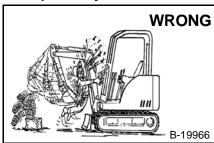

Always lower the bucket and blade to the ground before doing any maintenance.

Never modify equipment or add attachments not approved by **Bobcat Company.**



produce Lead-acid batteries flammable and explosive gases.

Keep arcs, sparks, flames and lighted tobacco away from from batteries.

Batteries contain acid which burns eyes or skin on contact.

Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/ operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. **Always use genuine Bobcat** replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW28-0409



CONTENTS

SAFETY & MAINTENANCE	
HYDRAULIC SYSTEM	20-01
UNDERCARRIAGE	
UPPERSTRUCTURE & SWING SECTION	
ELECTRICAL SYSTEM & ANALYSIS	50-01
ENGINE SERVICE	60-01
HEATING, VENTILATION AND AIR CONDITIONING (HVAC)	70-01
SPECIFICATIONS	SPEC-01
ALPHABETICAL INDEX	INDEX-01

Buy now

Bobcat E80 Excavator Service Manual PDF

With Instant Download