

V518




Bobcat®

VersaHANDLER

Service Manual

S/N 367012501 & Above

S/N 367311001 & Above

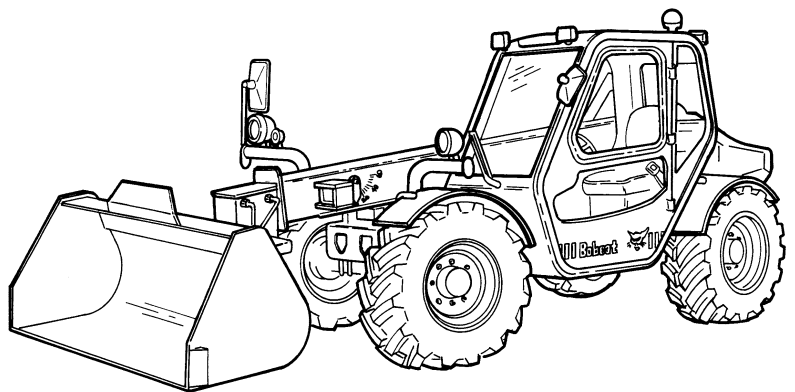

epcatalogs.com

MAINTENANCE SAFETY




WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

CORRECT

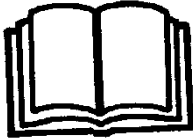


B-10731a

- ⚠ Never service the Bobcat VersaHANDLER without instructions.



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

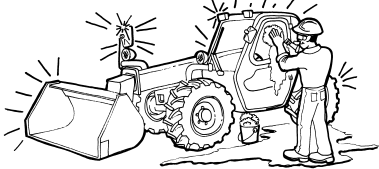

B-16082

- ⚠ Cleaning and maintenance are required daily.


WRONG

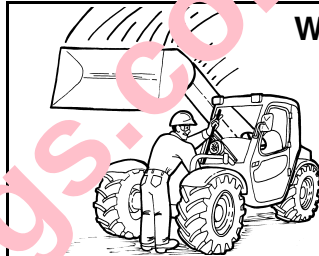

B-16080

- ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause boom to drop. Do not go under boom when raised unless supported by an approved boom stop. Replace if damaged.


WRONG

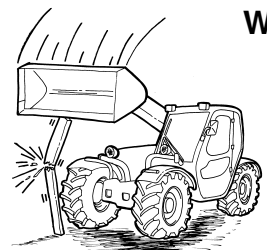

B-16079

- ⚠ Never work on VersaHANDLER with boom up unless boom is held by an approved boom stop. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

WRONG

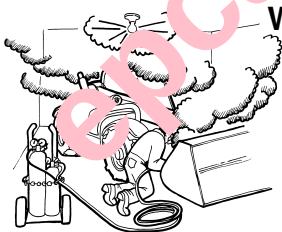

B-16081

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

WRONG



B-16078

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts.

MSW12-0805

epcatalogs.com



Bobcat®

ALPHABETICAL INDEX

ACCUMULATOR	20-01	HEATER ASSEMBLY	80-01
AIR CLEANER	70-01	HYDRAULIC CONNECTION	
AIR CLEANER SERVICE	10-01	SPECIFICATIONS	SPEC-01
AIR CONDITIONING SERVICE	80-01	HYDRAULIC CONTROL VALVE	20-01
AIR CONDITIONING SYSTEM FLOW	80-01	HYDRAULIC/HYDROSTATIC FLUID	
ALTERNATOR	60-01	SPECIFICATIONS	SPEC-01
AXLE AND DIFFERENTIAL (FRONT)	40-01	HYDRAULIC/HYDROSTATIC SYSTEM	10-01
AXLE AND DIFFERENTIAL (REAR)	40-01	HYDRAULIC RESERVOIR	20-01
AXLE TOE-IN	40-01	HYDRAULIC SYSTEM INFORMATION	20-01
AXLES (FRONT AND REAR)	10-01	HYDROSTATIC DRIVE MOTOR	30-01
		HYDROSTATIC PUMP	30-01
		HYDROSTATIC SYSTEM INFORMATION	30-01
BASIC TROUBLESHOOTING	80-01		
BATTERY	60-01	INCHING SWITCH	60-01
BOOM ASSEMBLY	50-01	INNER BOOM	50-01
BOOM STOP	10-01	INSTRUMENT PANEL	60-01
BRAKE LIGHT SWITCH	60-01		
BRAKE VALVE	20-01	JOYSTICK	20-01
BUCKET POSITIONING CYLINDER	20-01	JOYSTICK PANEL	50-01
CANOPY	50-01	LATERAL OPERATOR RESTRAINT SYSTEM	
COMPONENTS	80-01	(LORS™)	10-01, 60-01
COMPRESSOR	80-01	LIFT CYLINDER	20-01
CONDENSER	10-01	LIFTING AND BLOCKING THE VersaHANDLER ...	10-01
CONVERSIONS	SPEC-01	LIGHTS	60-01
		LUBRICATION	10-01
DASH COVER/STEERING COLUMN COVER	50-01		
DRIVE BOX	20-01	MACHINE TORQUE SPECIFICATIONS	SPEC-01
DRIVESHAFT	40-01	MAIN RELIEF VALVE	20-01
		MUFFLER	70-01
ELECTRICAL SYSTEM INFORMATION	60-01		
ENGINE AND ENGINE MOUNTS	70-01	OIL COOLER	30-01
ENGINE COMPONENTS AND TESTING	70-01	OPERATOR CAB	10-01, 50-01
ENGINE COOLING SYSTEM	10-01	OPERATOR SEAT	50-01
ENGINE COVER	10-01, 50-01		
ENGINE/HYDROSTATIC ASSEMBLY	70-01	PARKING BRAKE	20-01, 40-01
ENGINE LUBRICATION SYSTEM	10-01	PEDAL ASSEMBLY	60-01
ENGINE SPECIFICATIONS	SPEC-01	PORT RELIEF VALVES	20-01
ENGINE SPEED CONTROL	70-01	PRESSURE REDUCING VALVE	20-01
EVAPORATOR/LOWER UNIT	80-01	PRESSURE SWITCH	80-01
EXPANSION VALVE	80-01		
EXTENSION CYLINDER	20-01	QUICK TACH	50-01
		QUICK TACH CYLINDER	20-01
FAN MOTOR	20-01		
FENDER	50-01	RADIATOR	70-01
FLOW CONTROL VALVE	20-01	REAR AXLE	40-01
FLYWHEEL AND HOUSING	70-01	REAR WEIGHTS	50-01
FRONT AUXILIARY HYDRAULIC PRESSURE		REAR WIPER MOTOR	60-01
RELEASE VALVE	20-01	RECEIVER/DRIER	80-01
FRONT AXLE	40-01	RECONDITIONING THE ENGINE	70-01
FRONT WIPER MOTOR	60-01	REGULAR MAINTENANCE	80-01
FUEL SYSTEM	10-01		
FUEL TANK	50-01		
GEAR PUMP	20-01		
GENERAL AIR CONDITIONING SERVICE			
GUIDELINES	80-01		

[Buy now](#)

[Bobcat V518 VersaHANDLER Service Manual PDF](#)

[With Instant Download](#)