

SERVICE MANUAL

LM5030

epcatalogs.com

Print No. 84559135



NEW HOLLAND

AGRICULTURE

LM5030

TELEHANDLERS

Repair Manual

Printout no. 84559135 (X - 2011)



THIS WARNING SYMBOL ACCOMPANIES IMPORTANT MESSAGES INVOLVING YOUR SAFETY.

Read the safety instructions carefully, and follow the precautions recommended in order to avoid potential risks and safeguard your health and your safety.

You will find this symbol in the text of this Manual with the following key words:

WARNING - Cautions intended to avoid unsuitable repair operations with potential consequences for the safety of the person performing the repair.

WARNING - Warnings specifically indicating potential dangers for the safety of the operator or other persons directly or indirectly involved.

IMPORTANT WARNINGS

All maintenance and repair operations listed in this Manual must be performed exclusively by the Service Network of the Manufacturer, complying strictly with the indications herein and using the prescribed special tools where indicated.

Any person performing service operations described in the manual and failing to abide strictly by the instructions becomes solely responsible for any consequential damage that could occur.

The Manufacturer and all organizations in the distribution chain associated with the Manufacturer, including national, regional and local dealers though not excluding others, decline all liability for damages attributable to abnormalities in the operation or response of parts and/or components not approved by the Manufacturer, used in the servicing and/or repair of a product built or marketed by the Manufacturer.

In any event, no warranty of any description is offered on or applicable to the product built or marketed by the Manufacturer, in respect of damages resulting from abnormal operation or response of parts and/or components not approved by the Manufacturer.

AVOID ACCIDENTS

Most accidents and injuries that occur in and around factories, on farms, in the home or on the roads, are caused by failure to follow some simple and fundamental rule regarding precautionary procedures and safety. Accordingly, IN THE MAJORITY OF CASES, ACCIDENTS CAN BE AVOIDED: it is sufficient simply to foresee the possible causes, and exercise the necessary caution and prudence.

Whatever the type of equipment, and however well designed and built, it is not possible to eliminate the risk of accident completely without adversely affecting certain essential features instrumental in providing reasonable levels of accessibility and ensuring smooth operation.

A careful and prudent operator is the best insurance against any accident.

The observance of just one elementary safety rule will of itself be sufficient in avoiding many serious accidents.

This rule is: never attempt any cleaning, lubrication or maintenance operation with the machine in motion.



WARNING



Before commencing any kind of maintenance, adjustment or repair work on machines equipped with attachments operated hydraulically, mechanically or by wire ropes (such as front loaders, dozers, scrapers, etc.) make certain the attachment is lowered and resting on the ground.

If the attachment needs to be in the raised position in order to gain access to one part of the machine or another, it must be supported in the raised position by separate equipment, and not held with the machine controls.

MODEL DESIGNATIONS

The models making up the range of telescopic handlers (Telehandlers) described in this manual are identified in the text by reference to the maximum reach of the boom.

The vehicles listed below may not be available in all countries or on all markets. For up to date information on all machines, consult your authorized dealer.

Workshop manual

LM5030

TELESCOPIC HANDLERS

TABLE OF CONTENTS

SECTION 00 - GENERAL

Description	Page
General instructions	1
Safety rules	3
Product identification	6
Environmental considerations	8
Maintenance techniques	9
Specific sealing compounds	10
Minimum tightening values for threaded fasteners	11
Minimum tightening torques for fasteners	12
Load tables	14
Table of lubricating oils	17

SECTION 10 - ENGINE

Description	Page
Main engine specifications	2
Engine model variants	3
Removal and installation of engine and radiator	5
Removal	5
Installation	12
Filling the engine cooling system	14
Bleeding air from the system	14
Important warnings	14

SECTION 21 - TRANSMISSION

Description	Page
Variable displacement motor	2
Exchanging seals	8
Exchanging the controller	9
Sealing the cover	12
Checking	14
Checking beginning of regulation control EP	15
Checking beginning of regulation control HD	16
Checking beginning of regulation control HA	17
Checking beginning of regulation control DA1/4, DA2, 3, 4, 5, 6	18
Variable displacement pump	20
Transmission 2 speed	86

Float setting	88
Disassembly of integrated reduction gear	89
Assembly of integrated reduction gear	103
Special tools	120

SECTION 25 - FRONT AXLE

Description	Page
Wheel toe-in check	3
Component overhaul	3
Front axle removal procedure	4
Planetary reduction 1:6 and the steering case	10
Steering cylinder	36
Differential: normal preloaded differential unit	57
Flanged reduction gear 603 type: integral 603 input gear	73
Bevel pinion: version normal flange and nut version counter version	84
Ring and pinion adjusting: step for preloaded differential	105
Swinging support	110
Planetary reduction: 1:4,23	117
Differential: preloaded limited slip differential unit	122
Differential: with block to space 100%	138
Differential: normal differential	156
Differential: limited slip differential unit (45%)	171
Update limited slip differential	187
Update differential with service, negative and 100% lock brake	204
Bevel pinion: flanged to reductor gear 603	219
Ring and pinion adjusting: version pinion cover and single arm	231
Ring and pinion adjusting: version pinion integral and double arm	237
Drive shaft removal	241
Special tools	244

SECTION 27 - REAR AXLE

Description	Page
Drive shaft removal	2
Reattachment	3
Rear axle removal procedure	4
Overhaul	7
Installation	8

[Buy now](#)

[New Holland Telehandler LM5030 PDF Set of Manuals](#)

[With Instant Download](#)