

GENERAL TABLE OF CONTENTS

TO THE OWNER	1
IDENTIFICATION NUMBERS	3
PRODUCT IDENTIFICATION AND SERIAL NUMBERS	3
SAFETY/DECALS	5
SAFETY	5
FIRE EXTINGUISHER	8
DECALS	9
INFORMATIONAL DECALS	16
INSTRUMENTS/CONTROLS	17
INSTRUMENT PANEL	17
DIGITAL TACHOMETER	20
OPERATING CONTROLS	24
OPERATORS SEAT	45
COMBINE CALIBRATION	47
COMBINE DIAGNOSTICS	54
OPERATING INSTRUCTIONS	57
BEFORE STARTING THE ENGINE	57
AUDIBLE ALARM AND INDICATOR LAMP TEST	58
RUN-IN PROCEDURE	59
NORMAL STARTING PROCEDURE	61
STOPPING THE ENGINE	63
COLD TEMPERATURE OPERATION	64
TRANSPORTING THE COMBINE	69
TOWING	71
AMBER WARNING LAMPS, DIRECTIONAL TURN SIGNAL AND SMV SYMBOL	73
DIGITAL TACHOMETER	74
COMBINE OPERATION	76
HEADER CONTROLS	82
SHAFT SPEED MONITOR	90
GRAIN SCAN MONITOR	92
FEEDER OPERATION	97
UNLOADER OPERATION	104
OPERATORS LADDER	106
FIELD TRACKER (IF EQUIPPED)	110
FIELD OPERATION	115
FIELD OPERATION	115
STANDARD ROTOR - INITIAL CROP SETTINGS	116
SPECIALTY ROTOR - INITIAL CROP SETTINGS	117
TROUBLESHOOTING	118

TRIM THIS EDGE

THRESHING AND SEPARATING SYSTEM	118
CUTTING AND FEEDING	121
THRESHING AND SEPARATING	129
ROTOR	134
CONCAVE	141
GRATES	146
GRAIN CLEANING	148
AUGER BED	152
CLEANING FAN	153
CHAFFER SIEVE	155
SHOE SIEVES	161
GRAIN HANDLING AND MATERIAL DISTRIBUTION	167
ELEVATORS	169
GRAIN TANK AND UNLOADER	171
DISCHARGE BEATER	174
STRAW SPREADERS AND STRAW/CHAFF SPREADERS	175
STRAW CHOPPER (IF EQUIPPED)	179
BALING STRAW	182
SEED LOSS	183
TIRES/WHEELS/TRACKS/SPACING/BALLAST	188
TIRE INFLATION	188
DRIVE WHEELS	190
STEERING WHEELS	194
DRIVE AXLE	196
DRIVE TRACKS (IF EQUIPPED)	198
STEERING AXLE	201
POWER GUIDE WHEEL DRIVE (IF EQUIPPED)	204
STEERING AXLE WEIGHTS	206
LUBRICATION/FILTERS/FLUIDS	208
SHIELDS AND SIDE PANELS	208
ENGINE HOURMETER	210
GREASE FITTINGS - TOP	214
GREASE FITTINGS - LEFT SIDE	217
GREASE FITTINGS - RIGHT SIDE	220
GREASE FITTINGS - REAR AXLE	225
CHAIN AND TRACK LUBRICATION	229
ENGINE LUBRICATION	231
COOLING SYSTEM	235
FUEL SYSTEM	242
AIR INDUCTION SYSTEM	249
TRANSMISSION	254
FINAL DRIVE	255
HYDRAULIC OIL RESERVOIR AND FILTERS	256
PROPULSION SYSTEM AIR REMOVAL	260
PTO HOUSING	262

FEEDER AND CLEANING FAN GEAR CASE	264
LOWER UNLOADER GEAR CASE	265
ROTOR GEAR CASE	266
STRAW CHOPPER (IF EQUIPPED)	267
STEERING WHEEL BEARING LUBRICATION	268
OPERATORS CAB	269
MAINTENANCE/ADJUSTMENTS	271
ENGINE FAN AND ALTERNATOR BELT	271
AIR CONDITIONER COMPRESSOR BELT	273
ROTOR DRIVE BELT	275
SEPARATOR DRIVE BELT	280
AUXILIARY PUMP DRIVE BELT	282
GRAIN TANK UNLOADER DRIVE BELT	285
FEEDER JACKSHAFT DRIVE BELT	291
FEEDER DRIVE BELT	294
CLEANING FAN DRIVE BELT	298
CLEANING FAN JACKSHAFT BELT	301
ELEVATOR DRIVE BELT	305
STRAW SPREADER DRIVE BELT	309
STRAW CHOPPER DRIVE BELT	311
GRAIN TANK UNLOADER CHAIN	313
REAR HORIZONTAL AUGER DRIVE CHAIN	314
ELEVATOR DRIVE SLIP CLUTCH ADJUSTMENT	315
TAILINGS ELEVATOR DRIVE CHAIN	316
TAILINGS ELEVATOR CONVEYOR CHAIN	317
CLEAN GRAIN ELEVATOR DRIVE CHAIN	319
CLEAN GRAIN ELEVATOR CONVEYOR CHAIN	320
FEEDER REVERSER DRIVE CHAIN	322
FEEDER CONVEYOR CHAIN	325
BRAKE PEDAL ADJUSTMENT	327
PROPULSION CONTROL CABLE ADJUSTMENT	328
ENGINE HIGH IDLE SPEED	331
THROTTLE CABLE	332
GEAR SHIFT CABLE ADJUSTMENT	333
FOOT-N-INCH PEDAL ADJUSTMENT	335
NEUTRAL START SWITCH ADJUSTMENT	336
FEEDER ADJUSTMENTS	337
STRAW SPREADER	340
CONCAVES AND GRATES	341
STRAW CHOPPER (IF EQUIPPED)	346
COOLING SYSTEM	348
FUEL INJECTORS	350
ROCKER ARM TO VALVE CLEARANCE ADJUSTMENT	350
ELECTRICAL SYSTEM	351
ELECTRICAL SPECIFICATIONS	351

TRIM THIS EDGE

ALTERNATOR CHARGING SYSTEM	356
BATTERIES	357
HEAD LAMP ADJUSTMENT	361
LAMP BULB REPLACEMENT	362
STORAGE	367
STORAGE PREPARATION	367
REMOVING FROM STORAGE	369
SPECIFICATIONS	373
DIESEL ENGINE	373
POWER TRAIN	374
GENERAL MACHINE	375
APPROXIMATE TRAVEL SPEED	378
APPROXIMATE OVERALL MEASUREMENTS	380
APPROXIMATE SHIPPING HEIGHTS	381
APPROXIMATE SHIPPING WEIGHTS	381
DETAIL INDEX	385

TRIM THIS EDGE

TO THE OWNER

Read this manual before you start the engine or operate the Axial Flow® Combine. If you need more information, see your dealer.

If your combine is equipped with AFS Yield Monitor and Global Positioning System, refer to your Case IH Yield Monitor and GPS Operators Manual for operating instructions.

Your dealer can give you assistance with Case Corporation approved service parts. Your dealer has technicians with special training that know the best methods of repair and maintenance for your machine.

Call your dealer if you need any assistance or information.



2188 COMBINE

NOTE: When you are in the combine seat looking forward, the right hand (RH) and left hand (LH) of the combine are the same as your right hand and left hand.

TRIM THIS EDGE

[Buy now](#)

[case Combine 2188-2388 series Operators Manual PDF incl. Wiring Schematics](#)

[With Instant Download](#)