

## JS 200 Series Tracked Excavators

[Section 1 - General Information](#)

[Section 2 - Operator's Manual](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section J - Track & Running Gear](#)

[Section K - Engine](#)



Publication No.  
**9813/5550-01**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class  
Customer Support

## General Information

Service Manual - JS 200 Series Tracked Excavators

[Section 1 - General Information](#)

[Section 2 - Operator's Manual](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section J - Track & Running Gear](#)

[Section K - Engine](#)



Publication No.  
**9813/5550-1**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class  
Customer Support



<b>Contents</b>	<b>Page No.</b>
<b>Introduction</b>	
Identifying Your Machine .....	1-1
<b>Safety</b>	
Introduction .....	1-3
<b>Use</b>	
Introduction .....	1-5
Scope .....	1-6
Personnel .....	1-6
Applications .....	1-6
Newest Data .....	1-6
Format .....	1-7
Left Side, Right Side .....	1-8
Hydraulic Schematic Codes .....	1-9
Colour Codes .....	1-9
<b>General Procedures</b>	
Introduction .....	1-11
Parking the Machine and Making it Safe .....	1-12
Venting the Hydraulic Pressure .....	1-13
Connecting/Disconnecting Hydraulic Hoses .....	1-14
Battery Disconnection/Connection .....	1-15
Removing and Replacing Components .....	1-16
Preparation .....	1-16
Original Components .....	1-16
New Components .....	1-16
Torques and Fixings .....	1-16
Battery Charging System Precautions .....	1-17
Gas Hydraulic Bladder Accumulators .....	1-18
Replacement .....	1-18
Charging .....	1-18
<b>Service Consumables</b>	
Introduction .....	1-6-21
Sealing and Retaining Compounds .....	1-6-22
<b>Standard Torque Settings</b>	
Zinc Plated Fasteners and Dacromet Fasteners .....	1-23
Introduction .....	1-23
Bolts and Screws .....	1-23
Condition 1 .....	1-23
Condition 2 .....	1-23
Verbus Ripp Bolts .....	1-23
Hydraulic Connections .....	1-27
'O' Ring Face Seal System .....	1-27
Adaptors Screwed into Valve Blocks .....	1-27
Hoses Screwed into Adaptors .....	1-28
Adaptors into Component Connections with Bonded Washers .....	1-29
'Torque Stop' Hose System .....	1-30
JCB Standard Torque Settings .....	1-31
B.S.P. Port Connection (Colour Coded) .....	1-31
Hose Ends and Flanged Fittings (Colour Coded) .....	1-32



<b>Contents</b>	<b>Page No.</b>
<b>Service Tools</b>	
Numerical List .....	1-33
Tool Detail Reference .....	1-36
Section B - Body and Framework .....	1-36
Section C - Electrics .....	1-40
Section E - Hydraulics .....	1-41
Ram Jigs .....	1-54

epcatalogs.com

[Buy now](#)

[JCB JS 200 Series Tracked Excavators Service Manual PDF](#)

[With Instant Download](#)