


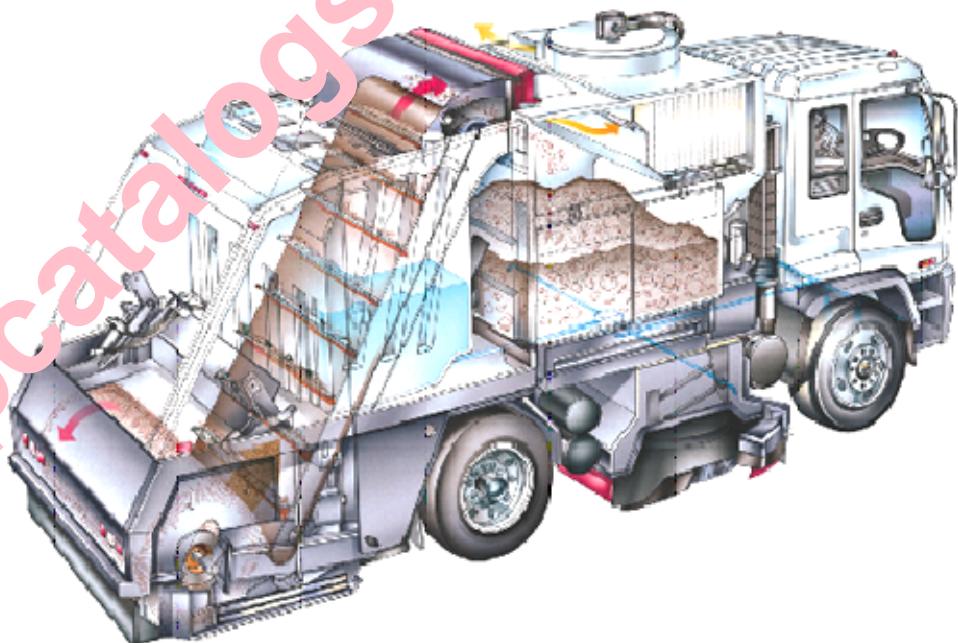

# CENTURION™

Service Information Manual

epcatalogs.com



(Paper Manual)

**330779**

Rev. 01



**330765 (CD-ROM)**



This manual provides service information for the TENNANT Model CENTURION™.

This machine will provide excellent service. However, the best results will be obtained at minimum costs if:

- The machine is operated with reasonable care.
- The machine is maintained regularly – per the maintenance instructions provided.
- The machine is maintained with TENNANT supplied or equivalent parts.

Paper Manual Number – 330779

CD-ROM Manual Number – 330765

Revision: 01

Published: 9-03

epcatalogs.com



**CALIFORNIA PROPOSITION 65 WARNING:** Engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

<b>Common Sense Safety Precautions .....</b>	<b>1</b>
Obey all traffic rules and regulations .....	1
Use appropriate hearing and eye protection .....	2
Read and understand the Operators Manuals .....	3
Stay clear of moving parts.....	4
Use safety devices when performing daily service and general repairs .....	5
Unloading .....	6
<b>Centurion Systems.....</b>	<b>7</b>
<b>Operator Alarm Chart .....</b>	<b>8</b>
<b>Service Tools .....</b>	<b>9</b>
Photo Tach.....	9
Quick Connect Hydraulic coupling .....	9
Voltage (Parallel) Connections .....	10
Amperage (Series) Connections .....	10
Normal Shop Equipment .....	11
<b>Centurion Electronics Operation .....</b>	<b>12</b>
Centurion - Critical Interlocks .....	12
Self Test Mode .....	13
Operator Alarm Chart .....	14
Entering Diagnostic and Maintenance Modes 1 & 2 .....	15
Entering Diagnostic and Maintenance Modes 3 & 4 .....	16
Input Display Mode .....	17
Hopper Full Sensor Adjustment .....	18
<b>Hydraulic System .....</b>	<b>19</b>
GENERAL SCHEMATIC LAYOUT .....	19
LOAD SENSE HYDRAULIC .....	20
Hydraulic Pressure Quick Access Pressure Taps.....	21
<b>CENTURION RPM SPEEDS .....</b>	<b>22</b>
<b>On the Road Emergency Repairs.....</b>	<b>23</b>
<b>Self Test Diagnostic Procedures .....</b>	<b>25</b>
E-100 .....	26
E-200 .....	28
E-300 .....	30
E-400 .....	33
<b>Control Board Diagnostic Procedures .....</b>	<b>35</b>
<b>Sweeping Diagnostics .....</b>	<b>37</b>
<b>Button Locations .....</b>	<b>37</b>
<b>Idle Mode .....</b>	<b>38</b>
<b>Operator Message Mode.....</b>	<b>39</b>
<b>Operator Message Definitions.....</b>	<b>40</b>
<b>Hopper Mode .....</b>	<b>42</b>

Hopper Up Sequence .....	43
Hopper Down Sequence .....	44
Hopper Dump Sequence .....	45
Hopper Home Sequence .....	46
<b>Conveyor Mode.....</b>	<b>47</b>
<b>Sweep Mode.....</b>	<b>48</b>
<b>Side-Brush Adjust Mode.....</b>	<b>49</b>
<b>Sweep Mode Highlights .....</b>	<b>50</b>
Sweep On Sequence .....	51
Sweep Mode Off Sequence .....	52
<b>Maintenance Modes .....</b>	<b>53</b>
Maintenance Mode 1 .....	53
Maintenance Mode 2 .....	54
Maintenance Mode 3 .....	55
Maintenance Mode 4 .....	56
Current Display .....	57
Brush Arm POT Adjustment.....	59
Time Adjustment .....	60
Hydraulic Start Up Check.....	61
Input Display Operation .....	62
Input Display Tests .....	63
Self Test Highlights .....	64
Self Test Errors .....	65
Custom Function .....	66
Manual Mode Operation .....	67
Manual Mode Tests .....	68
Language Mode .....	69
Enable/Disable Side Brush Adjut .....	70
Main Broom Adjust Speed .....	71
Fan Speed Level Set .....	72
Brush Wear Compensation .....	73
PTO Limit Disabl.....	74
Reset.....	75
Review .....	76
Operator Message Mode .....	77
<b>Allison Transmission Diagnostics .....</b>	<b>78</b>
DISPLAYING DIAGNOSTIC CODES .....	79
CLEARING DIAGNOSTIC CODES.....	82
EXITING THE DIAGNOSTIC MODE .....	83
Transmission Diagnostic Codes.....	84
<b>TRANSMISSION ACCESS .....</b>	<b>89</b>
REMOVING DRY DUST CONTROL ASSEMBLY .....	89
<b>PTO INSTALLATION and OWNERS MANUAL.....</b>	<b>93</b>
WARNING .....	94
TABLE OF CONTENTS .....	95
PTO INSTALLATION .....	96
CLUTCH SHIFT CS11/CS21 SERIES .....	99
CLUTCH SHIFT CS10 SERIES .....	100
CLUTCH SHIFT CS20 SERIES .....	102

CONSTANT DRIVE LUBE INSTALLATION .....	104
DRAG BRAKE ADJUSTMENT (CS10 & CS20) .....	106
DRIVESHAFT INSTALLATION .....	106
DIRECT MOUNT PUMP INSTALLATION .....	107
OPTIONAL ALLISON INTERFACING .....	108
TYPICAL COMPONENT LOCATIONS IN COMMON VEHICLES .....	109
Possible wiring configurations .....	110
<b>OWNER S MANUAL .....</b>	<b>114</b>
PTO SHIFTING PROCEDURES & PRECAUTIONS.....	115
CLUTCH SHIFT OPERATING NOTES .....	115
PTO MAINTENANCE .....	116
PTO TORQUE & HORSEPOWER RATINGS .....	117
<b>TROUBLE SHOOTING .....</b>	<b>118</b>
PTO TROUBLE SHOOTING GUIDE .....	118
EOS-110 TROUBLE SHOOTING GUIDE .....	119
<b>Centurion PTO removal/repair .....</b>	<b>121</b>
<b>CATERPILLAR DIESEL TRUCK ENGINE .....</b>	<b>123</b>
STANDARD EQUIPMENT .....	123
CATERPILLARfi ENGINE SPECIFICATIONS .....	123
ACCESSORY EQUIPMENT .....	123
PERFORMANCE CURVES .....	124
PERFORMANCE DATA.....	124
PERFORMANCE DATA.....	124
ELECTRONIC FEATURES .....	126
GEARING CONSIDERATIONS .....	126
RATING DEFINITIONS AND CONDITIONS.....	126
<b>CENTURION Replacing Conveyor Belt .....</b>	<b>127</b>
<b>CENTURION Repairing Conveyor Belt Section .....</b>	<b>133</b>
<b>CENTURION Replacing Conveyor Roller Assembly .....</b>	<b>137</b>
<b>CENTURION Brush Arm PTO Setup .....</b>	<b>145</b>
<b>Alarm Charts .....</b>	<b>149</b>
<b>Hydraulic Service Chart .....</b>	<b>151</b>
<b>Centurion Switch and LED Operation .....</b>	<b>153</b>
<b>Centurion Interlocks.....</b>	<b>154</b>
<b>Centurion Pin Voltage Chart.....</b>	<b>155</b>
<b>PTO-Engine Operation .....</b>	<b>159</b>
<b>Centurion Operation Matrix .....</b>	<b>161</b>
<b>Torque Standard.....</b>	<b>165</b>
Inch Fasteners .....	165
METRIC Fasteners .....	167
Nylon Insert Lock Nuts .....	169
Wheel Bolt and Nuts .....	170
Wheel Bearing Adjustment.....	170

[Buy now](#)

[Tennant CENTURION PDF Service Manuals](#)

[With Instant Download](#)