




SENTINEL

Service Information Manual

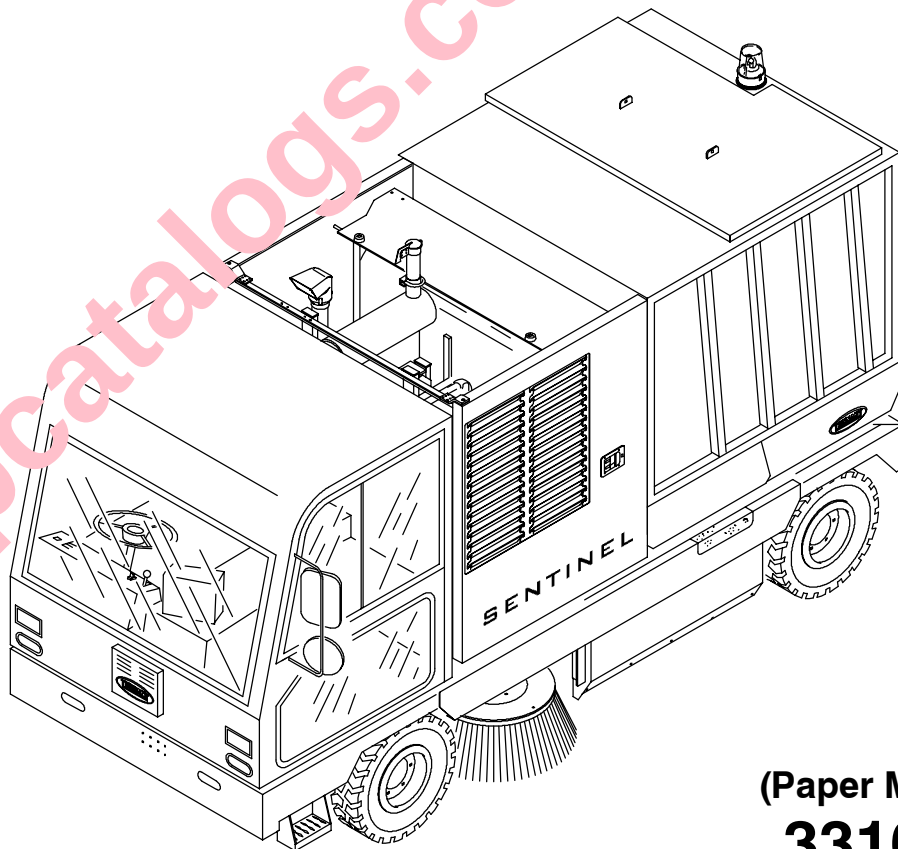

(Paper Manual)

331019

Rev. 00



331005 (CD-ROM)



This manual provides service information for the TENNANT Model SENTINEL.

This machine will provide excellent service. However, the best results will be obtained at minimum costs if:

- The machine is operated with reasonable care.
- The machine is maintained regularly – per the maintenance instructions provided.
- The machine is maintained with TENNANT supplied or approved parts.

Paper Manual Number – 331019

CD-ROM Manual Number – 331005

Revision: 00

Published: 12-03



CALIFORNIA PROPOSITION 65 WARNING:

Engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

Electrical Troubleshooting	1
Wiring Diagram	2
Wiring Harness Detail	8
Main Wire Harness	8
Cab Wire Harness	23
Hopper Wire Harness	25
Key Switch	27
Starting System	28
Glow Plugs System	29
Charging System	30
Power-Up & Fuel System	31
Engine Oil Pressure & Temperature Sensors	32
Engine Air Filter, Speed & Fuel Level Sensors	33
Right & Left Brush Systems	34
Main Brush & Conveyor Systems	35
Hopper System	36
Vacuum Fan & Filter Shaker Systems	37
Hopper Full Sensing System	38
Hopper Door & Vacuum Wand Door Sensing Systems	39
Machine Speed Sensing System	40
Level & Hopper Tilt Sensing Systems	41
Blocked Conveyor & Hopper Temp. Sensing Systems	42
Wet Dust Control System	43
Pressure Washer System	44
Forward Propel & Brake Systems	45
Reverse Propel & Brake Systems	46
Vario Brush Tilt System	47
Vario Brush Arm Swing / Slide System	48
Vario Brush Raise / Lower & Rotate Systems	49
Operating Modes	50
Operational Matrix	51
Connector Pin Designation	53
Fuse Chart	54
Component Locator	55
Hydraulic Troubleshooting	63
Hydraulic Diagram	64
Hydraulic Hose Diagram	69
Low Pressure Hydraulic Hose Group	69
High Pressure Hopper Hydraulic Hose Group	70
Cab Hydraulic Hose Group	71
Conveyor and Main Brush Hydraulic Hose Group	72
Hydraulic Reservoir Hose Group	73
Steer, Brakes, Side Brush Hydraulic Hose Group	74
Left Side Brush Hydraulic Hose Group	75
Propel Hydraulic Hose Group	76
High Pressure Sprayer Hydraulic Hose Group	77
Vario Brush Hydraulic Hose Group	78
Cab Tilt Group	79
Hydraulic Pumps & Valves	80
Hydraulic Pumps Group	80
Hydraulic Main Brush / Conveyor Lift Valve Group	81
Hydraulic Hopper Control Valve Group	82
Hydraulic Side Brush Valve Group	83
Hydraulic Manifold and Priority Valve Group	84
Hopper Functions & Vacuum Fans Valve Block	85
Pressure Washer Valve Block	87
Explanation of Abbreviations	88
Conveyor & Main Brush Forward	89
Conveyor & Main Brush Reverse	90
Main Brush Lower	91
Conveyor Lower	92
Main Brush Lift, Conveyor Lift, & Conveyor Chain Tension	93
Right Side Brush Rotate & Lower	94
Left Side Brush Rotate & Lower	95

Right & Left Side Brush Rotate & Lower	96
Right & Left Side Brush Lift	97
Vacuum Fans Run	98
Shaker Run	99
Vacuum Fans & Shaker Off	100
Hopper Tilt Back (Dump)	101
Hopper Tilt Forward (Normal Sweep Position)	102
Hopper Lift (High Dump)	103
Hopper Lower (High Dump)	104
Hopper Door Lock (Latch Closed)	105
Hopper Door Unlock (Latch Open)	106
Vario Brush Rotate Clockwise	107
Vario Brush Rotate Counter-Clockwise	108
Vario Brush Swing Right (Clockwise)	109
Vario Brush Swing Left (Counter-Clockwise)	110
Vario Brush Slide Right	111
Vario Brush Slide Left	112
Vario Brush Tilt Rear Edge Down	113
Vario Brush Tilt Front Edge Down	114
Vario Brush Tilt Left	115
Vario Brush Tilt Right	116
Vario Brush Lift	117
Vario Brush Lower	118
Right Turn	119
Left Turn	120
Brake Pedal (Push)	121
Brake Pedal (Release)	122
Propel System	123
Operational Matrix	125
Solenoid Valve Details	127
Component Locator	128
Traffic Advisor Control	133
Installation and Operating Guide: Sirens/Switches	133
Installation for Traffic Advisor	137
Parts List for Traffic Advisor	138
Operation Matrix	139
Troubleshooting Matrix	141
Interlocks	143
Pin Chart	144
Engine Specifications (Standard Engine)	146
Engine Specifications (Turbo Engine)	148
Torque Standard	150
Anchor Fasteners	150
Metric Fasteners	152
Hydraulic Insert Lock Nuts	154
Wheel Bolt and Nuts	155
Tightening Nuts on Tapered Shafts	156
Shoulder Bolts	157
Taper Lock Bushings	158
Sequence Tightening	159
Auto Lube - Grease Jockey Installation and Maintenance	161
Table of Content	162
System Components	164
Electric systems	167
Installation Steps	170
Troubleshooting the Grease Jockey	178
Parts List	180



SENTINEL ELECTRICAL

Troubleshooting Manual

BEFORE CONDUCTING TESTS:

- * Read and Follow ALL Safety Warnings and Precautions in Operator's Manual

DURING TESTS:

- * Call Technical Services if Diagnostic Time Exceeds One Hour With Unknown Cause or Course of Action

NOTE: Troubleshooting charts are shown with optional equipment. The optional equipment is not specified in these charts. Some machines may not be equipped with all components shown.

[Buy now](#)

[Tennant SENTINEL PDF Service Information Manual](#)
[With Instant Download](#)