

# Shop Manual

BULLDOZER

**D65EX -18**

**D65PX -18**

**D65WX -18**

SERIAL NUMBERS

D65EX- 90001

D65PX- 90001 and up

D65WX-90001

epcatalogs.com

**KOMATSU**

[epcatalogs.com](http://epcatalogs.com)

---

# 00 INDEX AND FOREWORD

---

[epcatalogs.com](http://epcatalogs.com)

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-20
FOREWORD, SAFETY, BASIC INFORMATION .....	00-26
HOW TO READ THE SHOP MANUAL.....	00-26
SAFETY NOTICE FOR OPERATION.....	00-28
PRECAUTIONS TO PREVENT FIRE.....	00-36
ACTIONS IF FIRE OCCURS .....	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS.....	00-39
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-40
PRECAUTIONS FOR DEF.....	00-41
STORE AdBlue/DEF .....	00-42
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT.....	00-43
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-46
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT.....	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT.....	00-56
PRACTICAL USE OF KOMTRAX.....	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER.....	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS.....	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR.....	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR.....	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL .....	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .....	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .....	00-72
HOW TO READ ELECTRICAL WIRE CODE.....	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-77
STANDARD TIGHTENING TORQUE TABLE.....	00-80
CONVERSION TABLE.....	00-87
01 SPECIFICATIONS .....	01-1
CONTENTS.....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING.....	01-9
SPECIFICATIONS.....	01-15
WEIGHT TABLE .....	01-36
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-46
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS.....	10-2
ABBREVIATION LIST .....	10-5
UREA SCR SYSTEM.....	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM.....	10-11
UREA SCR SYSTEM DIAGRAM .....	10-13
FUNCTION OF UREA SCR SYSTEM.....	10-14
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-31
BOOT-UP SYSTEM.....	10-40
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-40
SYSTEM OPERATING LAMP SYSTEM .....	10-42
BATTERY DISCONNECT SWITCH .....	10-44
ENGINE SYSTEM .....	10-46
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-46
ENGINE CONTROL SYSTEM .....	10-48
AUTOMATIC IDLE STOP SYSTEM .....	10-53
COMPONENT PARTS OF ENGINE SYSTEM .....	10-56
COOLING SYSTEM.....	10-75
LAYOUT DRAWING OF COOLING SYSTEM .....	10-75

COOLING FAN CONTROL SYSTEM.....	10-77
COMPONENT PARTS OF COOLING SYSTEM.....	10-80
CONTROL SYSTEM.....	10-97
LAYOUT DRAWING OF CONTROL SYSTEM.....	10-97
MACHINE MONITOR SYSTEM.....	10-98
KOMTRAX SYSTEM.....	10-99
COMPONENT PARTS OF CONTROL SYSTEM.....	10-100
HYDRAULIC SYSTEM.....	10-128
LAYOUT DRAWING OF HYDRAULIC SYSTEM.....	10-128
CLSS.....	10-129
COMPONENT PARTS OF HYDRAULIC SYSTEM.....	10-132
POWER TRAIN SYSTEM.....	10-185
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-185
OPERATION OF POWER TRAIN SYSTEM.....	10-188
TRANSMISSION, STEERING, AND BRAKE CONTROL.....	10-189
PALM COMMAND CONTROL SYSTEM.....	10-191
HSS SYSTEM.....	10-195
CENTRALIZED PRESSURE PICKUP PORT.....	10-198
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-199
WORK EQUIPMENT SYSTEM.....	10-268
WORK EQUIPMENT CONTROL.....	10-268
LAYOUT OF TILT DOZER, POWER TILT PITCH DOZER AND ANGLE DOZER SERIES.....	10-271
LAYOUT OF POWER ANGLE POWER TILT DOZER SERIES.....	10-272
LAYOUT OF FIXED MULTI-SHANK RIPPER.....	10-273
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-274
UNDERCARRIAGE AND FRAME.....	10-303
MAIN FRAME.....	10-303
SUSPENSION.....	10-305
TRACK FRAME AND ROLLER CUSHION.....	10-308
WORK EQUIPMENT.....	10-311
STRUCTURE OF FRONT WORK EQUIPMENT (FOR TILT DOZER AND POWER TILT PITCH DOZER SERIES).....	10-311
STRUCTURE OF FRONT WORK EQUIPMENT (FOR POWER ANGLE POWER TILT DOZER SERIES).....	10-312
STRUCTURE OF FRONT WORK EQUIPMENT (ANGLE DOZER SERIES).....	10-313
STRUCTURE OF FIXED MULTI-SHANK RIPPER.....	10-314
CAB AND ITS ATTACHMENTS.....	10-315
ROPS CAB.....	10-315
CAB MOUNT.....	10-317
20 STANDARD VALUE TABLE.....	20-1
CONTENTS.....	20-2
ABBREVIATION LIST.....	20-3
STANDARD VALUE TABLE FOR ENGINE.....	20-9
STANDARD VALUE TABLE FOR ENGINE: D65EX-18.....	20-9
STANDARD VALUE TABLE FOR ENGINE: D65PX-18.....	20-14
STANDARD VALUE TABLE FOR ENGINE: D65WX-18.....	20-19
STANDARD VALUE TABLE FOR MACHINE.....	20-24
STANDARD VALUE TABLE FOR MACHINE: D65EX-18.....	20-24
STANDARD VALUE TABLE FOR MACHINE: D65PX-18.....	20-40
STANDARD VALUE TABLE FOR MACHINE: D65WX-18.....	20-56
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE.....	20-71
STANDARD VALUE TABLE FOR ELECTRICAL.....	20-74
STANDARD VALUE TABLE FOR ELECTRICITY.....	20-74
30 TESTING AND ADJUSTING.....	30-1
CONTENTS.....	30-2
ABBREVIATION LIST.....	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING.....	30-11
TOOLS FOR TESTING AND ADJUSTING.....	30-11

[Buy now](#)

[Komatsu Bulldozer D65EX -18, D65PX-18, D65WX-18 Shop Manual PDF](#)

[With Instant Download](#)