# 317 and 320 Skid Steer Loader CT322 Compact Track Loader Repair

# TECHNICAL MANUAL 317 and 320 Stric Steer Loader CT322 Con pact Track Loader Repair

17. 151 21SEP05 (ENGLISH)

## For complet ser vir e information also see:

> Worldwide Construction And Forestry Division

# Introduction

#### Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, of materials needed to do the job, service parts its, specifications, wear tolerances, and torque allows.

Technical Manuals are concise guides for specific machines. They are on-the-job guide containing only the vital information needed for dictions analysis, testing, and repair.

Fundamental service in the ry of operation, fundamentals of troubleshooting general maintenance, and basic type of failures and the courses.

TX,INTR,MB52 -19-12SEP97-1/1

## Introduction

Technical Information Feedback Form								
publications. Pl	help to continua ease copy this as and improve	page and FAX						
SEND TO:	John Deere Dubuque Works P.O. Box 538 Attn: Publications Supervisor, Dept. 303 Dubuque, IA 52004-0538							
FAX NUMBER:	563-589-5800							
Ideas, Comments	(Please State Pag	e Number):						-
								-
								_
								_
			<del>-</del> 6					-
			60+					-
								-
								-
		70						-
	<u></u>	70>						_
								_
								_
OVERALL, how	oc 'you rate the o	uality of this publica	ation? (Check o	ne)				
1	2 3	Fair 4	God 5	od 6	Very Goo 7	od 8	Excellent 9 10	_
Company Name:								
Technician Name	:							
Address:								
Phone:								
Fax No.:								
Dealer Acct. No.:								
THANK YOU!								
							TX,TM,FAX -19-03JUL01-	1/1

tm2152 (21SEP05)



# **Contents**

#### **SECTION 00—General Information**

Group 0001—Safety

Group 0003—Torque Values

#### **SECTION 01—Tracks**

Group 0130—Track System

#### SECTION 02—Axles and Suspension Systems

Group 0201—Drive Axle Housing and Support Group 0250—Axle Shaft, Bearings, and Reduction Gears

#### **SECTION 03—Transmission**

Group 0315—Controls Linkage

Group 0325—Flywheel Coupler

Group 0360—Hydraulic System

#### **SECTION 04—Engine**

Group 0400—Removal and Installation

#### **SECTION 05—Engine Auxiliary Systems**

Group 0510—Cooling System

Group 0515—Speed Control Group

Group 0560—External Fuel Supply System

### 

Group 1740—Frame Installation

## SECTION 18—Operators's Strion

Group 1800—Removal and Ir si Lation

Group 1810—Operator L. cloure

Group 1821—Seat 2 10 Sea. Belt

Group 1830—Heating ar a Air Conditioning

# SECTION 19— netal and Styling

Group 191 -H od or Engine Enclosure

## SECTION '1- Loader

Group 3104—Attachment Coupler

Group 3115—Control Linkage

Group 3140—Frame

Group 3160—Hydraulic System

#### **SECTION 99—Dealer Fabricated Tools**

Group 9900—Dealer Fabricated Tools

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2005
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRUCTION® Manual
Previous Editions
Copyright © 2004

00

2

3

)4

)5

′

8

19

1

# **Buy now**

John Deere Loaders 317, 320 and CT322 PDF Repair Manual With Instant Download