


GROVE

GMK2035

epcatalogs.com

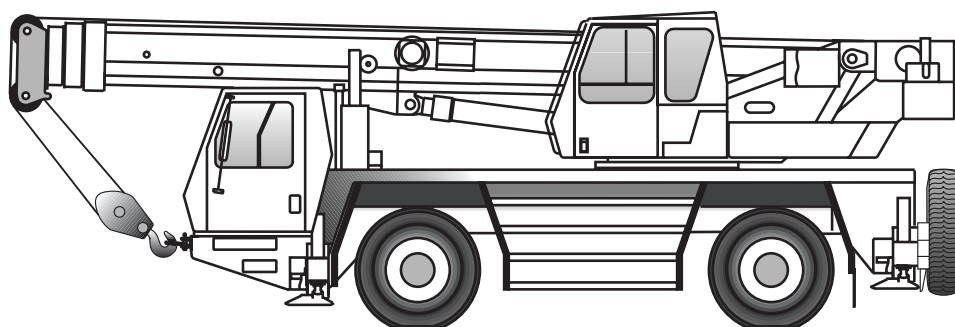

Maintenance Manual

Vehicle Serial number:

2 084 515 en

12.05.2000
(27.10.1999) (21.07.1999)

Important note

Duplications of any kind and excerpts from this document are not subject to the alterations service. Original documents of Deutsche GROVE GmbH are marked with the blue serial number of the truck crane on the cover page.

Duplications and print-outs of data carriers on which Deutsche GROVE GmbH has delivered this document are also not subject to the alterations service.

epcatalogs.com

© Copyright reserved by **Deutsche GROVE GmbH**

The passing on or duplication of this document as well as the use and disclosure of its contents are prohibited unless expressly permitted. Offenders will be liable for damages. All rights pertaining to registration of patent or utility model are reserved.

Table of contents

1	General instructions	1 - 1
1.1	Using the maintenance manual	1 - 1
1.2	Warnings and symbols	1 - 1
1.3	Maintenance instructions	1 - 2
1.4	Definition of direction information	1 - 4
2	Safety and environmental protection	2 - 1
2.1	Safety rules	2 - 1
2.2	Handling substances which are harmful to the environment	2 - 2
3	Cleaning	3 - 1
3.1	Overview of the components that are easily damaged when cleaning	3 - 2
4	Run-in instructions	4 - 1
5	Maintenance overview	5 - 1
5.1	Maintenance intervals	5 - 1
5.2	Maintenance plans	5 - 3
5.2.1	Maintenance plan D: daily / before start-up	5 - 4
5.2.2	Maintenance plan W: weekly	5 - 6
5.2.3	Maintenance plan M 1: monthly / after 100 Bh / approx. 2000 km	5 - 8
5.2.4	Maintenance plan M 3: every 3 months / after 300 Bh / 5000–6000 km	5 - 10
5.2.5	Maintenance plan M 6: every 6 months / after 500 Bh / 10 000–12 500 km	5 - 12
5.2.6	Maintenance plan M 12: every 12 months / after 1000 Bh / 20 000–25 000 km	5 - 14
5.2.7	Maintenance and inspection plan J 3: every 36 months / after 3000 Bh	5 - 16
5.2.8	Maintenance and inspection plan J 4: every 48 months / after 4000 Bh	5 - 17
5.2.9	Maintenance and inspection plan J 6: every 72 months / after 6000 Bh	5 - 18
5.2.10	Maintenance and inspection plan J 8: every 96 months / after 8000 Bh	5 - 19
5.3	Periodic inspections	5 - 20
5.3.1	Load hook inspection	5 - 21

5.4	Measures required for winch monitoring	5 - 22
5.4.1	Theoretical service life	5 - 22
5.4.2	Proportion of the theoretical service life used	5 - 23
5.4.3	Example	5 - 27
6	Lubricant and proces materials	6 - 1
6.1	Table of lubricants	6 - 1
6.2	Process materials	6 - 3
6.2.1	Fuel	6 - 3
6.2.2	Engine coolant admixtures	6 - 3
6.2.3	Windscreen washing system admixtures	6 - 3
6.2.4	Fuel for crane cab heating system	6 - 3
7	Description of maintenance work on the carrier	7 - 1
7.1	Diesel engine	7 - 1
7.1.1	Oil level check	7 - 2
7.1.2	Check the coolant level	7 - 3
7.1.3	Check the dry air filter	7 - 4
7.1.4	Check the overall condition and check for leakage	7 - 5
7.1.5	Clean the fuel pre filter screen	7 - 6
7.1.6	Changing the fuel filter	7 - 6
7.2	Automatic gearbox	7 - 9
7.2.1	Oil level check	7 - 9
7.2.2	Checking the overall condition and tightness	7 - 12
7.2.3	Change the oil and oil filter	7 - 12
7.3	Axle lines	7 - 15
7.3.1	Check the overall condition and check for leakage	7 - 15
7.3.2	Lubricating the cardan shafts on the axle lines	7 - 15
7.3.3	Axle centre drive – check oil level	7 - 16
7.3.4	Final drives – oil level check	7 - 17
7.3.5	Lubricating the (longitudinal) cardan shafts between the gear units	7 - 18
7.3.6	Changing the oil in the axle centre drives	7 - 19
7.3.7	Changing the oil in the final drives	7 - 20
7.4	Wheels	7 - 21
7.4.1	Checking the tyres for damage	7 - 21
7.4.2	Check the tyre pressure	7 - 21
7.4.3	Check the wheel-bearing clearance	7 - 22

7.5	Vehicle brakes	7 - 23
7.5.1	Check brake-lining thickness	7 - 23
7.6	Suspension	7 - 25
7.6.1	Check oil level in the suspension cylinders	7 - 25
7.6.2	Check the tightness of retaining bolts on the suspension cylinders	7 - 26
7.7	Steering	7 - 27
7.7.1	Check for leaks	7 - 27
7.7.2	Lubricate the steering cardan shaft	7 - 27
7.7.3	Steering pump drive belt	7 - 28
7.8	Carrier compressed air system	7 - 31
7.8.1	Drain the compressed air system	7 - 31
7.8.2	Check for leaks	7 - 32
7.8.3	Replace the granulate cartridge of compressed air drier	7 - 33
7.9	Carrier hydraulic system	7 - 35
7.9.1	Check the hydraulic oil level	7 - 35
7.9.2	Check the hydraulic hoses	7 - 36
7.9.3	Check for leaks	7 - 37
7.9.4	Changing the hydraulic oil filters and cleaning the magnetic rod	7 - 38
7.9.5	Replacing the venting filter	7 - 41
7.9.6	Taking oil samples	7 - 41
7.9.7	Changing the hydraulic oil	7 - 43
7.10	Central lubrication system	7 - 47
7.10.1	Checking and topping up level in the grease container	7 - 47
7.11	Carrier electrical system	7 - 51
7.11.1	Check the acid level of batteries	7 - 51
7.11.2	Check the acid concentration of batteries	7 - 52
7.12	Carrier air-conditioning system (additional equipment)	7 - 53
7.12.1	Checking moisture and level of the refrigerant	7 - 53
7.12.2	Cleaning capacitor cooling fins	7 - 54
7.12.3	Checking hoses	7 - 54
7.12.4	Checking the refrigerant compressor	7 - 55
7.12.5	Checking the entire air conditioning system	7 - 55
7.13	Trailer coupling (additional equipment)	7 - 57
7.13.1	Lubricating the trailer coupling	7 - 57
7.13.2	Checking the bearing	7 - 58
7.13.3	Checking the cotter pin	7 - 59

[Buy now](#)

[Grove Truck Crane GMK 2035 Maintenance Manual PDF](#)

[With Instant Download](#)