


**WARNING!**

Do not use the truck before first reading through the OPERATOR'S MANUAL.

NOTE!

Keep for future reference.

Translation of the original instruction

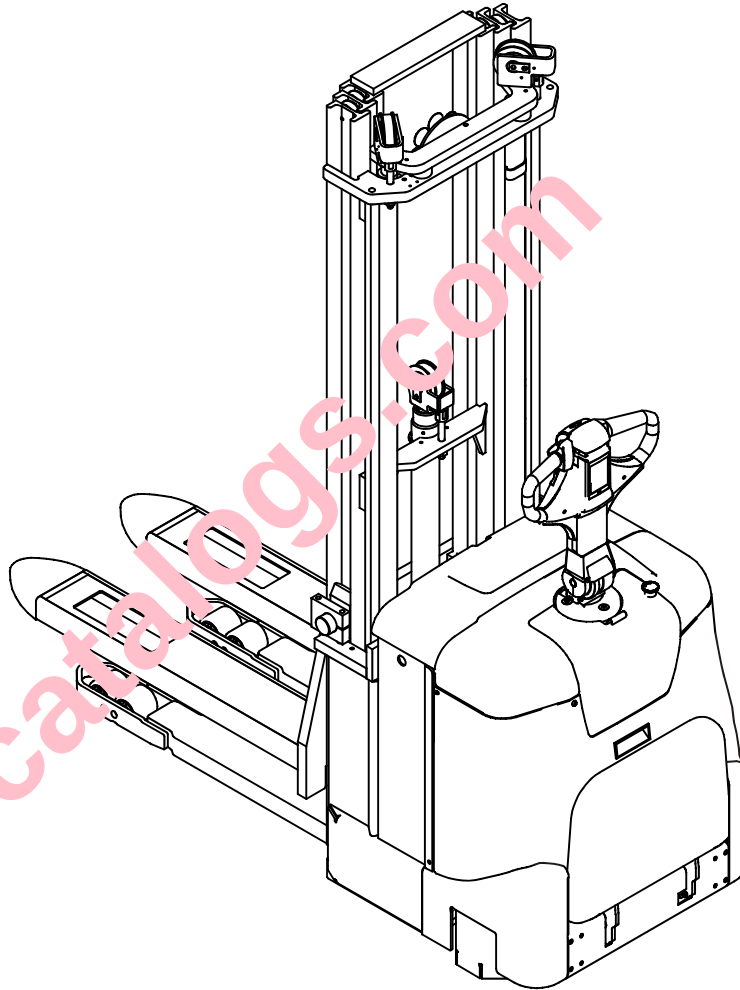

Operator's Manual en

S320

Valid from serial number: 6155391

Order number: 7527266-040

Issued: 2011-04-04

Valid only for serial number:

--	--	--	--	--	--	--	--	--	--

Preface

Congratulations on choosing a CESAB truck! It is designed to make your work more efficient, simple and safe. Before you start using the truck, it is very important that you learn how to handle the truck in a safe way, by carefully reading and understanding the content in this manual. To use the truck, you must have received appropriate training and fulfil local requirements on operating fork lift trucks.

The manual contains information about security rules, how to work with the truck and how to keep the truck in good condition using a daily maintenance schedule. For recurrent maintenance, our quality oriented service organisation is at your disposal, in order to secure a high availability for a long time to come.

This booklet describes the truck model(s) that are specified on the cover and in the standard design. For modified or custom made truck, the booklet has been supplemented with specific information in the appendix. Make sure you study also this information.

To make the content available, the book must always accompany the truck. Copies of the book can be ordered as a spare part.

CESAB are constantly developing our products. We therefore reserve the right to make changes, and that no claims can be made due to the content of the manual. If anything is unclear or if you have any other questions, you are always welcome to contact your local supplier.

Table of Contents

Safety regulations	5
Warning symbols	5
General safety regulations	7
Warning and information plates and symbols	12
Presentation of the truck	15
Intended application of the truck	15
Prohibited application of the truck	16
Truck data	17
Truck dimensions	18
Main components	22
Controls and instruments	24
Display and programming	30
Warning codes	32
Error codes	34
Accessories	36
Overhead guard	36
Load support	37
Turtle button	37
Walkie version	37
Writing board	38
Power steering unit	38
F-bar including mounting kit	38
Driving	39
Starting the truck	39
Braking	40
Deceleration	40
Steering	40
Parking the truck	41
Transporting loads	42
Collecting a load	43
Depositing a load	44
Battery	45
Battery maintenance	45
Charging the battery	45
Replacing the battery	47
Daily service and function checks	49

Table of Contents

Maintenance	51
Cleaning and washing	53
Maintenance chart	55
Transporting and storing the truck	60
The truck's dimensions and weight as standard	60
Lifting the truck	61
Towing and transporting a defective truck	63
Storing the truck	63
Starting after a period of disuse	64
Recycling/discarding	65
Discarding the battery	65
Scrapping the truck	65
Certificate	68
Certificate (Truck)	68

Safety regulations

Warning symbols

Always follow the warnings given in this Operator's Manual and on the truck to avoid accidents and incidents from occurring.

Warning levels

Warning texts regarding safety are given in four levels and provide information on the risks, describe the consequences and instruct how to avoid accidents.



DANGER!

Warns that an accident will occur if you do not follow the instructions.

The consequences are serious personal injury or possibly death and/or extremely large material damage.



WARNING!

Warns that accidents can occur if the instructions are not followed.

The consequences are serious personal injury or possibly death and/or large material damage.



CAUTION!

Warns that accidents can occur if the instructions are not followed.

The consequences are personal injury and/or material damage.

NOTE!

Marks the risk of a crash/breakdown if the instructions are not followed.

[Buy now](#)

[Cesab Warehouse S320 Operator's Manual PDF](#)

[With Instant Download](#)