


**WARNING!**

Do not use the truck before first reading through the OPERATOR'S MANUAL.

NOTE!

Keep for future reference.

Translation of the original instruction

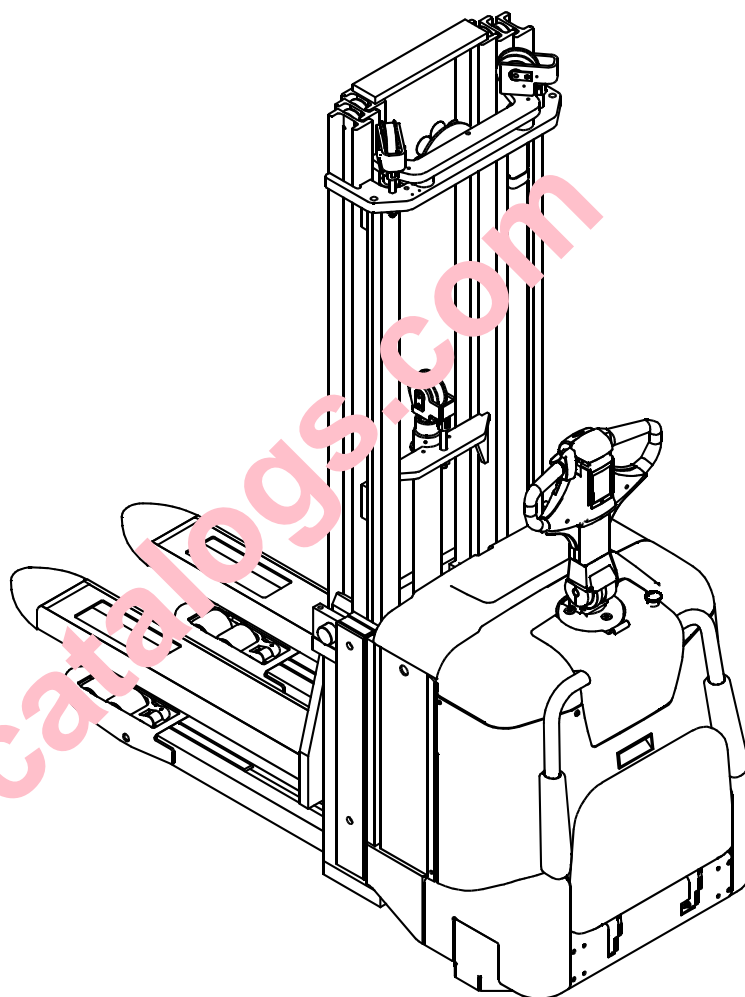

Operator's Manual en

S316L

Valid from serial number:

Order number: 7513378-040

Issued: 2010-03-22

Valid only for serial number:

--	--	--	--	--	--	--	--	--	--

Preface

Congratulations on choosing a CESAB truck! It is designed to make your work more efficient, simple and safe. Before you start using the truck, it is very important that you learn how to handle the truck in a safe way, by carefully reading and understanding the content in this manual. To use the truck, you must have received appropriate training and fulfil local requirements on operating fork lift trucks.

The manual contains information about security rules, how to work with the truck and how to keep the truck in good condition using a daily maintenance schedule. For recurrent maintenance, our quality oriented service organisation is at your disposal, in order to secure a high availability for a long time to come.

This booklet describes the truck model(s) that are specified on the cover and in the standard design. For modified or custom made truck, the booklet has been supplemented with specific information in the appendix. Make sure you study also this information.

To make the content available, the book must always accompany the truck. Copies of the book can be ordered as a spare part.

CESAB are constantly developing our products. We therefore reserve the right to make changes, and that no claims can be made due to the content of the manual. If anything is unclear or if you have any other questions, you are always welcome to contact your local supplier.

Table of Contents

Safety regulations	5
Warning symbols	5
General safety regulations	7
Warning and information plates and symbols	12
Presentation of the truck	15
Intended application of the truck	16
Prohibited application of the truck	16
Truck data	17
Truck dimensions	18
Main components	22
Controls and instruments	24
Display and programming	30
Warning codes	32
Error codes	34
Accessories	35
Overhead guard	35
Fixed side protectors	36
Fixed backrest	37
Load support	38
Turtle button	38
Waist cushion	38
Warning board	39
Power steering unit	39
Lear including mounting kit	39
Driving	41
Starting the truck	41
Braking	42
Deceleration	42
Steering	42
Parking the truck	43
Transporting loads	44
Collecting a load	45
Depositing a load	46
Double pallet handling	47
Battery	48
Battery maintenance	48
Charging the battery	48
Replacing the battery	51

Table of Contents

Daily service and function checks	53
Maintenance	55
Cleaning and washing	57
Maintenance chart	59
Transporting and storing the truck	64
The truck's dimensions and weight as standard	64
Lifting the truck	65
Towing and transporting a defective truck	66
Storing the truck	66
Starting after a period of disuse	67
Recycling/discarding	68
Discarding the battery	68
Scrapping the truck	68
Certificate	70
Certificate (Truck)	70

Safety regulations

Warning symbols

Always follow the warnings given in this Operator's Manual and on the truck to avoid accidents and incidents from occurring.

Warning levels

Warning texts regarding safety are given in four levels and provide information on the risks, describe the consequences and instruct how to avoid accidents.



DANGER!

Warns that an accident will occur if you do not follow the instructions.

The consequences are serious personal injury or possibly death and/or extremely large material damage.



WARNING!

Warns that accidents can occur if the instructions are not followed.

The consequences are serious personal injury or possibly death and/or large material damage.



CAUTION!

Warns that accidents can occur if the instructions are not followed.

The consequences are personal injury and/or material damage.

NOTE!

Marks the risk of a crash/breakdown if the instructions are not followed.

[Buy now](#)

[Cesab Warehouse S316L Operator's Manual PDF](#)

[With Instant Download](#)