




Bobcat®


EN

Service Manual Tiltrotator

S/N AFF000101 & Above

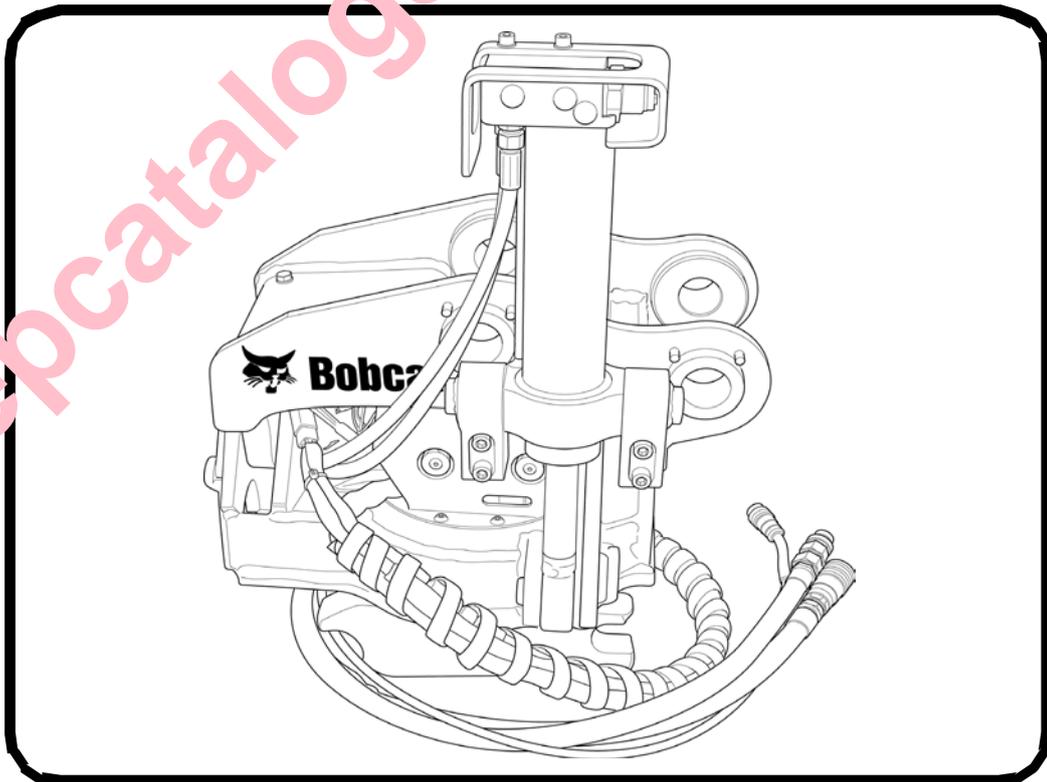

Dealer Copy -- Not for Resale

 

epcatalogs.com

Dealer Conv -- Not for Resale

MAINTENANCE SAFETY




WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

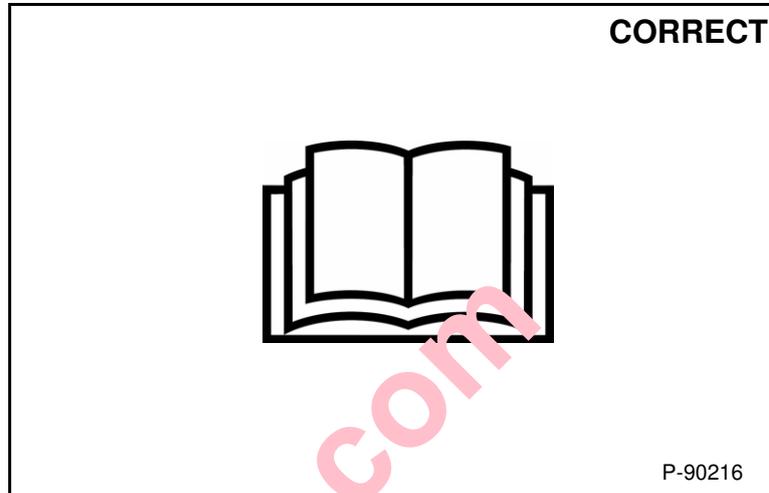

- ⚠ Never service attachments / implements without instructions. See Operation & Maintenance Manual and Attachment / Implement Service Manual.
- ⚠ Cleaning and maintenance are required daily.
- ⚠ Never service or adjust attachment / implement with the engine running unless instructed to do so in manual.
- ⚠ Always lower the attachment / implement to the ground before lubricating or servicing.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.
- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Keep body, loose objects and clothing away from moving parts, electrical contacts, hot parts and exhaust.
- ⚠ Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.

MSW30-0409

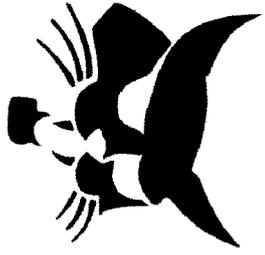

Bobcat[®]

epcatalogs.com

Dealer Conv -- Not for Resale

ALPHABETICAL INDEX

CONTROLLER	30-30-1
DAILY INSPECTION	10-20-1
ELECTRICAL SCHEMATIC	SPEC-30-1
HYDRAULIC CONTROL VALVE	20-10-1
HYDRAULIC CYLINDER	20-20-1
HYDRAULIC MOTOR	20-30-1
HYDRAULIC SCHEMATIC	SPEC-20-1
HYDRAULIC SWIVEL	20-40-1
LOCKING CYLINDER	20-50-1
LUBRICATION	10-30-1
TILTROTATOR SPECIFICATIONS	SPEC-10-1
TORQUE SPECIFICATIONS FOR BOLTS	SPEC-40-1
TROUBLESHOOTING	10-10-1
WORM GEAR	30-10-1
WORM SCREW	30-20-1

epcatalogs.com

Dealer Copy -- Not for Resale

[Buy now](#)

[Bobcat Tiltrotator Service Manual PDF](#)

[With Instant Download](#)