

Operating Instructions



Diesel Engine

D 2866 E

D 2866 TE

D 2866 LE

D 2866 LXE



epcatalogs.com

Dear Customer

These Operating Instructions are intended to familiarize you with your new MAN Diesel engine and how it operates.

This manual is supplemented by the publication "Fuels, Lubricants and Coolants for MAN Diesel Engines" and the "Service record".

Note:

All three publications belong to the engine and must always be kept ready to hand near the engine in the engine room.

Please read this Manual and the "Instructions for the installation of MAN Diesel Engines" before you put the new engine into operation.

Comply in full with instructions relating to operation, prevention of accidents and environmental protection.

MAN Diesel engines are developed and manufactured in line with the latest state of the art. However, trouble-free operation and high performance can only be achieved if the specified maintenance intervals are observed and only approved fuels, lubricants and coolants are used.

It is imperative and in your own interest to entrust your MAN Local Service Centre with the removal of any disturbances and with the performance of checking, setting, and repair work.

Yours faithfully,
MAN Nutzfahrzeuge Aktiengesellschaft
Werk Nürnberg

Subject to change to keep abreast with technological progress.

© 2001 MAN Nutzfahrzeuge Aktiengesellschaft
No parts of this publication may be reproduced or translated without prior written permission of MAN. MAN explicitly reserves all rights according to copyright law.

Declaration	3
Nameplates	4
Safety regulations	5
Technical information	10
Engine views	10
Engines	16
Engine lubrication	18
Fuel system	20
Turbocharger	21
Intercooler	22
Cooling	22
Air cleaner	22
Electrical equipment	23
Commissioning and operation	24
Preparations	24
Starting	25
Running in	25
During operation	25
Shutting down	26
Temporary decommissioning of engines	26
Maintenance and care	27
Engine lubrication	27
Fuel system	29
Cooling	35
Turbocharger	39
Intercooler	40
Air cleaner	41
Checking and setting	44
To check and set the start of delivery	44
To check and adjust valve clearance	48
Cylinder head bolts	48
V-belts	51
Technical data	54
Index	60

Declaration

In accordance with Article 4, paragraph 2, in conjunction with Appendix II, section B, of Directive 89/392/EEC, version 93/44/EEC

MAN Nutzfahrzeuge Aktiengesellschaft,

hereby declares that the engine described below is destined for installation in a machine as defined in the EC directive on machines.

Engine model:

Design:

For data see original declaration

Engine number:

If required this declaration is enclosed with the delivery note.

Rating / speed:

Note

The manufacturer of the complete ready-to-use machine in which this engine is to be installed must take the further action necessary in the context of indirect safety-related engineering and provision of instructions to ensure that the ready-to-use machine complies with the requirements of the EC directive on machines.

The engine must not be put into operation until the complete machine satisfies the conditions laid down in the EC directive on machines 89/392/EEC, most recently amended by 93/44/EEC, or the latest amendment of said directive.

MAN Nutzfahrzeuge Aktiengesellschaft

Vogelweiherstraße 33

D-90441 Nürnberg

[Buy now](#)

[Man Diesel Engine D 2866 E, D 2866 TE, D 2866 LE, D 2866 LXE
Operating Instructions PDF](#)

[With Instant Download](#)